# POST-2D

# 二次元 FEM 解析のポストプロセッサー

Version 3.10

使用説明書

佐藤工業株式会社・中央技術研究所

# 吉田 望

目 次

1	POST2D について	1
2	プログラムの機能	2
3	入力に関する注意	3
	3.1 プログラムの流れ	3
	3.2 デフォルト値	4
	3.3 図の構成、書き方	6
	3.4 線の種類	8
	3.5 文字	9
	3.6 数字	11
	3.7 シンボルマーク	11
	3.8 タイトルおよび縮尺部	12
	3.9 等高線	13
	3.10 テンソルと断面力	16
	3.11 作図時のフラグの説明	17
4	FEM データ	18
	4.1 対象となる FEM データ	18
	4.2 FEM データの読込み	19
	4.3 特別なプログラムからの読み込み	21
5	カード入力	24
	5.1 オプションカード	24
	5.2 コントロールカード	26
6	出力	89
	6.1 ユニット6への出力	89
	6.2 ユニット7への出力	89
7	例題	90
	7.1 例-1	90
	7.2 例-2	96
	7.3 例-3	98
付銀	<b>录</b>	102
付銷	录-1 等高線	102

# 1 POST2D について

プログラム名 POST-2D (Post-processor for 2-Dimensional FEM analysis)

機能 二次元有限要素法プログラムのポストプロセッサー

作成日時	1985.9.	Original Version, at the University of British Columbia
	1986.10.	Version 2.0
		UNIVAC へのコンバージョンと機能の追加
	1995.10	Version 2.46 小さな修正
		このバージョンから EPSF ファイル作成も可能
	1997.3	Version 3.0
		EPSF のみ。8節点要素、2節点要素
	1997.4	Version 3.1
		要素の抽出、塗りつぶし

作者 吉田 望

## 2 プログラムの機能

このプログラムは二次元有限要素法解析の結果を入力とし、図を書く等の事後処理 をするプログラムである。主な機能は次のようなものである。

①FEM モデル形状の作図

②ベクトル量の変形図または矢印による作図

③テンソル量の主値、最大の非対角項図、各成分表示図等。モーメント図や軸力図 ④スカラー量の等高線作図。各種結果の演算

⑤数値結果を図中に書く

⑥座標軸を図中に書く

⑦各種の記号、線分、円弧等を図中に書く

⑧各種の文字等を図中に書く

また、ここにない機能を追加することは一般的に余り難しくないので、必要な方は、 プログラマーと相談して下さい。

バージョン 2.46 から、POST2D は EPSF に対応した。バージョン 3 からは EPSF の みのサポートとなった。すなわち、POST2D は plt007.ai というファイルを出力し、こ れは、Windows や Machintosh の作図プログラムである Illustrator Verison 3.0J の出力フ ァイルと同じ形式になっている。したがって、Illustrator で読み込めば、編集も出来る。 ただし、Illustrator の出力は、他のワープロなどに張り付けると、Postscript プリンタ ーがないと美しい出力が出来ない。この場合には、FreeHand 7.0J で Illustrator 形式開 けば編集できるようになる。また、CorelDraw でもインポートできるが、この場合に は線種の情報が失われる他、場合によっては文字の一部もうまくコンバートされない。

## 3 入力に関する注意

# 3.1 プログラムの流れ

このプログラムでは 2 種類のデータが要求される。FEM プログラムの入出力、お よび、プログラムの流れをコントロールするためのデータ(オプションカードおよび コントロールカード)である。前者はユニット番号 IFILE(ユーザーが入力データに より指示)、またはユーザーが指定したファイルから入力される。後者のデータはユ ニット番号 5 から入力され、以下ではカードという表現を用いる。

プログラムの流れは、図 3.1.1 のようになっている。



図 3.1.1 プログラムの流れ

オプションカードは作業の種類を番号で指示するための一枚のカード、コントロー ルカードはその作業で必要とされる他のカード入力データである。図に示されるよう に、プログラムは先ず、オプションカードを読み、その後必要に応じてコントロール カードや FEM データなどを読む。プログラムは指示された作業を終えると、次のオ プションカードを読みにいく。

#### 3.2 デフォルト値

このプログラムは、多くの変数に対し、特にユーザーが変数の値を指示しなければ、 プログラムがこれらの変数に適当な値を決めるような機能(すなわち、デフォルト値 の設定)を持ち、ユーザーが入力データを用意する負担を軽くするような考えで作成 されている。例えば、作図をするのであれば、字の大きさ、縮尺、図の位置などは場 合によってはその値を指定したいものであろうが、通常は作図に先立ちその値をすべ て決めることは厄介な作業であるが、デフォルト値をうまく使えば、このような値の 設定に手間をかける必要はなくなる。

第5章で述べる入力データの説明で、(default=~~~~)としてデフォルト値を 用いることのできる変数を示している。ここで、~~~~はデフォルト値の決め方を 示しており、一般に、数値であればその数値がデフォルト値として用いられる値であ り、文章であれば、デフォルト値が決められる方法を示している。

デフォルト値の決め方は3つの種類があり、デフォルト値の使用が可能な変数はこのいずれかの方法でデフォルト値が決められる。

## ①タイプ1

デフォルト値の使用は、入力の部分をブランク(数字の場合には0でもよい)とす ることによって指定する。もしこの変数が最初に入力されるのであれば、~~~の部 分が default 値として用いられる。また、もしこの変数が以前に現れていたのであれば、 そのときに用いられた値がそのままデフォルト値として用いられる。したがって、こ のタイプの変数では同じ値を使うのであれば最初の機会にその値を入力し、以後はブ ランクとして十分である。

## ②タイプ2

デフォルト値の使用は、入力の部分をブランク(数字の場合には0でもよい)、または負の値の入力とすることによって指定する。もし、ブランク(または数字の場合には0)が入力され、かつこの変数が最初に入力されるのであれば、~~~の部分が値として用いられる。一方、また、もしこの変数が以前に現れていたのであれば、そのときに用いられた値がデフォルト値として用いられる。すなわち、ブランクが入力された場合の扱いはタイプ1と同じである。

一方、もし負の値が入力された場合には新しくデフォルト値が~~~に従って決め られる。この場合、入力した値自身には意味はない。

## **③タイプ3**

デフォルト値の使用は、入力の部分をブランク(数字の場合には0でもよい)とすることによって指定する。常に~~~の部分が default 値として用いられる。すなわち、 タイプ1、2のように以前に入力した値が用いられることはない。 各変数のデフォルト値の決め方は、対応する入力の説明の項に示した。この 際、・・・・「default<sup>1</sup>」、「default<sup>2</sup>」、「default<sup>3</sup>」として、タイプ 1~3 の区別をして いる。

この3種のデフォルト値の決め方は一見複雑そうに見えるかも知れないが、ユーザ ーがデータを用意する場合には自然に理解できるものである。次に例(表 3.2.1)によ り3つのタイプの違いを示す。

タイプ 入力 (順序)	1	2	3
ブランク	$2^*$	$2^*$	$2^*$
1	$1^{**}$	$1^{**}$	$1^{**}$
ブランク	$1^{***}$	$1^{***}$	$1^{***}$
-1	-1**	2*	-1**

表 3.2.1 デフォルト値のタイプの違いによる値の変り方の例

\* : 初期値(~~~で示された値)

\*\* :入力により指定された値

\*\*\* : デフォルト値として前回用いられた値が用いられた

3つのタイプのデフォルト値の決め方のうち、タイプ1が最も普通に現れる。タイ プ2は自動スケールによく現れる。タイプ3は線の種類、文字の大きさ等の指定でよ く現れる。

3 つのタイプのうち、タイプ 2 のデフォルト値を理解することは、特に重要である。 例えば、最大変位 2cm と 1.5cm の 2 枚の変形図と、最大加速度 500Gal の加速度図を 書くことを考える。これらの図の縮尺 (SCALED) はタイプ 2 のデフォルト値が用い られている変数である。変形も加速度も、プログラムから見ればベクトル量であり、 その扱いに差はない。まず、デフォルト値(自動スケール)を用いて変形図を書いた とすると、最大値 2cm は図上で 1cm (この値はオプション 8 により変換が可能)に描 かれる。すなわち、縮尺は 1:2 である。次に最大変位 1.5cm の変形図を書くときは、 入力値をブランクとすることで前回と同じ縮尺(1:2)を用いることができる。しかし、 次に加速度図を書くときにも入力をブランクとすると前回と同じ縮尺(1:2)が用いら れるため、500Gal は図上で 250cm となる。このような不自然な作図をなくすために は、図の縮尺を新たに決めねばならない。そこで、入力を負の値(値は何でもよい。 例えば-1)とすると、現在の最大値に応じた自動スケールが行われ、500Gal の最大値 に適した新しい縮尺(1:250)がプログラムにより選択される。もちろん、デフォルト 値を用いないで、縮尺を計算し、入力するのであれば、このような知識は不用である。

## 3.3 図の構成、書き方

POST-2Dでは、図を書く場合、長方形の領域(大きさはオプション1で指定)を作 図領域とし(以後これを枠と呼ぶこともある)、この中に指示された図を書く。図 3.3.2 にその例を示す。作図領域の考えは、プロッターによる作図のみであった時代に作ら れた POST-2D の基本的な考えで、カット紙への印刷、Windows ソフトへの取り込み が標準となっている現在では用紙のサイズそのものはそれほど大きな意味を持たな い。しかし、用紙のサイズに適当なものを指定しておくと、default 時の図の縮尺、文 字の大きさなどが適当なサイズに設定されるので、その意味では積極的に活用すべき 考え方である。

図に示すうち、FEM モデル形状図、タイトル、および図の種類と縮尺を表す部分 (以下、縮尺部という)は必ず書かれる。FEM モデル形状図の位置はオプション 1 の XORI、YORI で、縮尺は各図作成時のコントロールカードで指示できる。タイト ル、縮尺部の文字の大きさはオプション1で、軸の長さは各図作成時のオプションの コントロールカードで、その位置はオプション5で指示できる。なお、これらの変数 にはすべてデフォルト値の使用が可能である。

図を書く場合には、先ず、図の種類に応じ、オプション 10 により FEM モデル形状 を読み込む。さらに必要であればオプション 20、30、40 等により他の量も読み込む。

この際、データの格納されて いるファイル番号が異なると きは、オプション 1 で次に読 むデータのファイル番号を変 える。その後オプション 11、 22、32、33、42 のいずれかに より基本部分を作図する(必 要なタイトル等の指示はこれ 以前に行っておく)。これら のオプションが用いられると、 プログラムは新しい作図領域 (枠)を用意し(以前の図の 右側)、モデル図、タイトル、 縮尺部を書く。また、テンソ ル、ベクトル、スカラー量の 図も書く。重ね書き、コメン ト、マーク等のオプションは その後に用いる。これらはす でに書かれている図の上に重 ね書きされる。



図 3.3.1 基本的な作図の流れ

解析したモデルの一部のみを作図したいときは、オプション 60 によりその範囲を 指定する。また、オプション 61 により、ベクトル量等の作図時に、一部の範囲を書 かないように、作図する範囲を指定することもできる。



#### 3.4 線の種類

プログラムは 13 種類の線を用意している。ユーザーは必要に応じ線の種類、ピッ チ、線の太さを指定しなければいけない。線の種類の指定は正の整数値で行い、この うち下 2 桁は線の種類を、100 位以上は線の太さを表わす。ここで、線の太さは、標 準(100 位の数字が 0) のとき 0.2mm で、以後 100 位の数字が 1 増えるごとに 0.2mm づつ増加する。

表 3.4.1 に利用できる線の種類を示す。ここで、線の種類 5 と 11 はデフォルト時の ピッチを除けば同じである。また、3~11 ではピッチを変えれば線分の各部分が比例 的に変化するが、2 は点の長さが一定(0.3mm)で空白部分が変化、12 と 13 では点お よび空白の長さは一定(1mm)で、長い線の部分のみが変化する。

下2桁	線の種類	default <sup>3</sup> 時の	備考
の数字		ピッチ(cm)	
1			実線
2		0.1	点線
3		0.3	破線
4		0.3	破線
5		0.4	破線
6		0.4	破線
7		0.4	破線
8		0.4	破線
9		0.4	一点鎖線
10		0.5	二点鎖線
11		1.0	破線
12		1.0	一点鎖線
13		1.0	二点鎖線

表 3.4.1 作図に用いる線の種類

線の種類に対するデフォルト値(タイプ 3)は 1、また、ピッチに対するデフォルト値(タイプ 3)は表に示されている。

## 3.5 文字

このプログラムで書ける文字には、英記号、数字、ギリシャ文字などがある。各文 字列の入力の説明には通常、最大入力可能文字数がのみ示されている。この場合プロ グラムは自動的に入力された文字列の最初から、ブランクでない文字の終わりまでの 長さを検出し、その部分のみを図上に書く。従って、文字列の最初および文字列の途 中のブランクは書くことができる(すなわち、空白として図上に現れる)が、文字列 の最後のブランクは書くことができない。字数が入力できる場合は、最初から指定さ れた文字数を書く。

文字の大きさは、文字の高さを入力することによって制御する。ここで、高さとは ワープロで文字サイズを指定する際のポイント数を指定しているのと同じである。し たがって、実際のサイズはこれより小さいことが普通である。1 ポイントは 1/72 イン チである。したがって、代表的なポイント数に対する字の高さは次のようである。

ポイント	8	10	10.5	12	15	16	18	24	30
高さ (cm)	0.282	0.353	0.370	0.423	0.529	0.564	0.635	0.846	1.058

#### (1)標準仕様における文字

POST2Dでは3種類の異なるフォントを使うことが出来る。通常は「Arial」が用いられている。添字、標準フォントと違うフォントを使うことなどは、入力した文字の一部を制御用の文字として扱うことで行う。

- 文字を書くために入力される文字列のうち、「\$」の文字およびこれに続く文字の 2文字は、特殊な作業を指示しているコードと考えられ(以後、この2文字を制御 文字という)、対応する文字の作図は行わない(ただし、文字数には数えられる)。 機能の一覧表を表 3.5.1 示す。また、詳細を以下の項に示す。これらの機能はそれ が使われた直後から、次の指示があるか、または入力した文字列の終りになるま で有効である。
- ② \$で始まる文字は制御文字と考えられる。\$そのものを書きたいときには「\$\$」を 用いる。
- ③ 添字は、「\$2」、「\$3」、「\$4」で制御する。\$2は上添字の始め、\$3は下添字の 始め、\$4は添字の終りで、次からは普通の文字が書かれる。以下に、二つの使い 方の例を示す。\$4の使い方により異なる表現になっていることに注目されたい。

例	入力	ABC\$2123\$3BC\$4DEF	ABC\$2123\$4\$3BCD\$4DEF
	出力	ABC <sup>123</sup> DEF	ABC <sup>123</sup> <sub>BC</sub> DEF

④ フォントの変更は「\$A」、「\$B」、「\$C」、「\$J」、「\$Z」で行う。文字種は、「Times New Roman」「Arial」「Symbol」のみである。標準的には Arial が用い

られている。なお、これらは Illustrator ではそれぞれ、TimesNewRomanMT、ArialMT、 SymbolMT として出力されている。しかし、FreeHand では最後に MT がついていない フォント名を標準としているので、FreeHand7J で読み込むときには読み込み時にフォ ントの変換をするか、または一旦 FreeHand のデフォルトフォントである MS 明朝で 読み込み、後で編集する必要がある。これは、POST2D のみの問題ではなく、Illustrator のデータを FreeHand7J で読み込む際でも同じことである。

\$\$	\$を書く。	\$A	フォント	Arial
\$2	上添字はじめ	\$B	フォント	Times New Roman
\$3	下添字はじめ	\$C	フォント	Symbol
\$4	上添字、下添字の終り	\$J	フォント	Symbol
		\$Z	フォント	Arial

表 3.5.1 \$制御によるコマンド

## 3.6 数字

図中に数字を書く場合には、有効数字が問題となる。例えば、数字100を図中に書 くとき、100.00000000というように不必要な0をつけて書くことは意味がない。この 制御のためにプログラムはしばしば数字の小数以下の桁数を入力として要求する。

今、Nを小数以下桁数とする。Nが正であれば、プログラムは小数以下第N+1桁目 を四捨五入し、小数以下N桁までの数値を書く。もし、Nが負であれば、整数部下か ら-N-1桁目を四捨五入し、整数のみを書く。N=-1の時には小数以下1桁目を四捨五 入し、整数部を書く。N=0は通常デフォルト値としてプログラムが適当な値を選択 するが、デフォルト値が用いられない変数のときは、小数以下1桁目を四捨五入し、 整数部および小数点を書く。

例として数字 1256.2463 が書かれる場合、小数以下桁数 N によりどのように書かれ るかを示す。

N=1	1256.2	N=0	1256
N=2	1256.25	N=-1	1256
N=3	1256.246	N=-2	1260
N=4	1256.2463	N=-3	1300
N=5	1256.24630	N=-4	1000

#### 3.7 シンボルマーク

プログラムは図中に入れるマーク用に下図に示すような 24 種のシンボルマークを 用意している。ユーザーは使いたいシンボルを番号で指定する。また、その大きさも 通常ユーザーが入力する。

	0	1	2	3	4	5	6	7	8	9
何	もなし	- 、点		0	$\triangle$	Ŧ	Х	$\diamondsuit$	<del>↑</del>	X
	10	11	12	13	14	15	16	17	18	19
	Ζ	Y	Ă	Ж	Χ	ļ	*	•	0	
	20	21	22	23	24					
			$\triangle$	▼	$\bigtriangledown$					
		図 3.7	.1 ž	/ンボ	ルマー	ークの	)種類	と番	号	

(注1)番号0は何も書かない。番号1は点(図面では見えないが、Illustratorで読み

込んだとき、点としては意識されている)である。

(注 2) 上図は入力として同じシンボルマークの大きさを入力して書いたものである が、2~15 まではかなり見た感じの大きさが異なる。17~24 は見た感じが同 じ程度になるように作られている。この場合、円の直径は入力されたマーク の大きさと等しいが、正方形の一辺、三角形の高さなどは入力された値と異 なる。

#### 3.8 タイトルおよび縮尺部

図の種類と縮尺を示すために、図の下方にタイトルと縮尺を表す座標軸が書かれる (オプション5参照)。図 3.8.1 にその例を示す。タイトルは 80 文字以下の文字列で、 オプション2 で指定する。文字の大きさはオプション1の SIZET で指定する。タイト ルは一旦指定されると、次に指定されるまで同じタイトルが用いられる。



縮尺部は、軸の名前、座標軸、および単位の3つの部分で構成されている。縮尺部 の名前は40文字以内の文字列で、オプション3で指定し、字の大きさはオプション1 の SIZES で指定する。これらは一旦指定されると、次に指定されるまで有効である。

オプション 3 による指定がない場合にはプ ログラムは表 3.8.1 に示す名前を用いる。

座標軸の長さは各図を書くときに入力す る。デフォルト値を用いたときには全体の 長さが4cmより大きくかつ座標軸数値が丸 い数字になるようにプログラムがその長さ を決定する(ディフォルト時の長さはオプ

表	3.8.1	用意され	れてい	いる座	標軸名
					V 1 V I 🗖

モデル形状	Geo. Scale
テンソル量	Stress
ベクトル量	Displacement
スカラー量	xcess P.P.

ション8で変換可)。座標軸の書き方(5つの目盛りと3つの数字による構成)は変換することができない。

座標軸の単位はプログラムでは特に用意していないので、ユーザーは必要に応じオ プション4で指定する。また、座標軸数値が余り大きくなるときには、次に示すよう な方法で数値を見やすい値に変換することができる。

例として、座標軸数値が200000と400000の場合を考える。明らかにこの数字をこのまま座標軸に書くことは図の見栄え上よくない。そこで、データの入力時に重み係数を1/10000=0.0001と指定すれば、これらの値はそれぞれ20および40となる。しかし、20および40を座標軸数値に書いただけでは実際の大きさに対応しない。そこで、

オプション4により重み係数の逆数を単位の一部として入力する。例えば元の単位が mであれば、「10\$24\$4m」と入力すれば、単位部には「10<sup>4</sup>m」が書かれ、実際の数 値が分ることになる。単位系の変換もしばしば有効である。この例では、重み係数を 1/1000=0.001 とし、単位部は m の代りに km を入力すれば、数値は 200、400 とかな り見易くなる。

#### 3.9 等高線

ここでは、スカラー量の表示方法の一つである等高線の作図方法、および作図をす る場合の基本的な注意を示す。

このプログラムでは等高線はモデルの節点位置の値を使って書かれるが、要素重心 位置の値も補助的に使っている。すなわち、要素の各辺の中で、指定された値が、線 分両端の値に挟まれている線分を選び、線形補間により指定された値に対する線分上 の位置を求め、これを結びながら等高線を書く。要素重心の値は、一つの要素上を同 じ値の等高線が2本通る時どの辺を通って出て行くのかを判断するのに用いられる。







この説明からわかるように等高線は通常折れ線で書かれる。しかし、プログラムでは、折線の代りに、これらの点を結ぶ滑かな曲線で等高線を描くオプションも用意している。この場合、各点の間の距離をパラメータとし、x 座標、y 座標をそれぞれ三次式として表すことにより曲線を描く(付録参照)。これにより見栄えのよい図を得ることができるが、その曲線補間の性質上、曲線が重なることや、境界をはみだして等高線が引かれることもないとは言えない。したがて、ユーザーはでき上がり具合によりどちらかの方法を選ぶ必要がある。

なお、プログラムで用いている手法の都合上、ある領域の節点における値がすべて 同じで、かつこの値の等高線を書きたいときには、もし、その周辺の節点における値 がこの値より小さければその領域の境界に等高線を書く。逆に大きければ等高線は書かない(この時には少し小さい値、例えば正の等高線の場合には0.999999 倍の値を入力すれば境界に等高線を書く)。いずれにしろ領域の内部には等高線は書かない。

プログラムでは節点位置および要素重心位置の両方のデータを用いるため、節点位 置で与えられたデータに対しては要素重心位置のデータを、また、要素重心位置で与 えられたデータに対しては節点位置の値を計算する必要がある。要素重心位置の値は、 要素節点位置(要素を構成する節点)の値の単純平均として求められる。

$$z_g = \sum_{i=1}^N z_i / N$$

ここで、*z*g は要素重心の値、*z*i は要素節点の値であり、*N* は要素節点の数(2、3、4、 または8)である。一方、要素重心の値から節点位置の値を求める場合には、プログ ラムでは、四つの方法を用意している。いずれの方法でも、節点位置の値は、節点の 近くの要素の値より補間して計算されるが、その補間方法に違いがある。 ①方法1

対象となる節点の近くでは、その関数形状が次式で近似できると考える。

z = ax + by + cxy + d

未知の係数は *a、b、c、d* の 4 つであるから、これらは、節点近傍の 4 つの要素における値より決めることができる。

もし、選ばれた4つの重心のうち3つが直線上に並んでいると、この4つからは係数を決定することはできない。そこで、プログラムでは、直線上に並んでいる3つの 重心があると、そのうち一番遠い要素を考慮の対象から外し、代わりに、次に近い要素を考慮の対象に加え、未知係数を決定する。

②方法2

この方法では、次式の様に節点近傍N点の重み付平均を取る。

$$z_j = \sum_{i=1}^N z_i w_i$$

ここで、 $z_i$ は要素重心の値であり、 $z_j$ は求める節点における値である。また、N=8を プログラムでは用いている。重み $w_i$ は

$$w_{i} = \frac{\left(1 - R_{i}\right)^{2} R_{i}^{-2}}{\sum_{i=1}^{N} \left(1 - R_{i}\right)^{2} R_{i}^{-2}}, \qquad R_{i} = \frac{r_{i}}{r_{N}}$$

で計算される。ここで、 $r_i$ はI番目の要素重心までの距離、 $r_N$ はN点のうち一番遠くの要素重心までの距離である。

③方法3

方法1とほとんど同じであるが、関数形状を

z = ax + by + c

と置く。この式は平面を表しているので、点は、近傍の3つの値の線形補間となっている。

④方法4

前に②で示した重み付平均では、近傍の8点の値をとった。このため場合によって はかなり遠方の点まで採用していた(したがって、曲線が大局的になめらかになる)。 方法4では、遠方の点は取らないことにする。すなわち、対象となる節点を含む要素 のみを取り出し、それら要素の単純平均を節点における値とする。方法2が持ってい た境界部近くの補間の精度の問題は相当改善される。

⑤方法の選択

まず方法2について考えてみると、この方法では、平均を用いて値を求めるのであ るから、計算された値が、計算に用いた値の最小値より小さくなったり、最大値より 大きくなったりすることはない。すなわち、最大、最小の値は必ず、入力データの中 にある。このために、等高線が山となっている部分や谷となっている部分では、不自 然な線が入る場合が考えられる。また、要素重心の値から節点位置の値を求めた場合 には、境界の上にある節点では外挿をすることになり、さきに述べたように、得られ る値は計算に用いた値の最大、最小の間に入っていることから、例えば、関数形状が 一方向に傾きを持っているような場合でもこれを表現することはできない。すなわち、 このような場合には境界付近で等高線の形が乱れることがある。

方法1では、上記のように一方向に傾きを持った関数形でも、境界付近の節点の値 に関しては、かなりよく求めることができる。この違いは、付録2で明瞭に見ること ができる。この意味で、方法1の方が使いやすいかも知れない。ただし、この方法の 欠点は、節点の値をごく近傍の要素重心の値からのみ求めているために、全体として 等高線を眺めたときに例えば小さく蛇行するような曲線形状となることがあること である。方法2では、方法1よりは全体的な値から節点の値を求めているので、この ような恐れは少ない。

このような考えから、プログラムでは、方法1を標準的な方法とし、方法2はデー タによって指示することにより使えるよう仕様になっている。

version2.3 より方法 3 が、Version3 より方法 4 が加わった。これは、方法 1 ではま れに補間点付近で特異な係数が得られ、特定の節点で非常に高い山や非常に低い谷が 形成されることがあることが分かったからである。方法 3 は線形補間なので、等高線 の蛇行のような影響はより出やすくなるが、一方では特異な値は出力しないので、安 心感がある。その意味では方法 3 を標準にする方が良いかもしれない。

さきに述べた等高線の蛇行は、単に上記の補間方法の違いのみでなく、等高線を書 くときに採用している方法による場合もある。すなわち、付録に示したように、等高 線が通る要素の辺上の位置は、その辺の両端の節点における値から線形補間により決 められている。したがって、関数形状がこれに近い場合はよいが、これから大きく外 れるような場合には等高線が蛇行しながら書かれるということもおこる。 ⑥その他

等高線を書く線には 3.4 節で示した線を用いる事ができる。各等高線毎、または等 高線のグループで線の種類を指定できるようになっているので、ユーザーは必要に応 じて線の種類を使い分けることができる。 等高線に対応する値は、等高線の端部、等高線の線分中、およびこの両方に書くこ とが選択できる。もちろん数値を書かないことも可能である。線分中に値を書く場合 には図中の数字間の距離を指定する。

プログラムの機能とは関わらず、プログラマーは、等高線の間に数字を書くことを 勧めない。これは、等高線中に数字を書く位置で一旦等高線がとぎれるからである。 何度も述べているように、POST2DではIllustratorタイプのデータの出力を行うので、 後に他のプログラムで数字を加えることが出来るからである。ただし、全く数字がな いと不安であるので、等高線の始点に数値を書くようにすれば、数字との対応がつき やすい。



図 3.9.2 等高線に書かれる数値の例

## 3.10 テンソルと断面力

要素の応力状態として、固体要素ではテンソル、2節点要素(ばね要素やはり要素) では断面力がある。POST-2Dではこれらを全てテンソル量として読み込む。しかし、 作図時にはこれらを区別し、たとえば主応力図を書く際には2節点要素の応力状態は 書かない。しかし、はり要素とばね要素の区別はしておらず、全て4つのデータ、す なわち、軸力、せん断応力、始点と終点のモーメントを断面力として読み込む。した がって、データを用意する際に、注意が必要である。なお、ばね要素の応力状態は、 はり要素の軸力に相当する部分に格納されている。

ユーザーは、必要に応じ、座標軸のタイトルを変え、必要なものを書く指示をする 必要がある。なお、縮尺の自動選択を選んだ場合には、全ての応力線分と断面力を同 率に扱って縮尺が決められているので、たとえば固体要素と断面力がそれぞれ 10 と 1000の様に大きく数字が異なり、小さい方(ここでは固体要素)を書く際には非常に 小さい値しか作図されないことになるので、自動縮尺を使わず、自分で縮尺を決める べきである。一般的に最大値を A とすると、縮尺は A を丸めた数字を用いるのと比 較的見栄えの良い図面が得られる。

## 3.11 作図時のフラグの説明

POST-2Dでは、作図のために線のタイプ、文字の扱い、数字の小数以下の桁数、シンボルマークの種類など、この章で説明したいくつかの選択を数字で行う必要がある。その場合、一旦この章に戻り、その内容を参照する必要がある。この検索を行いやすくするため、関連する部分に、上添え字で[]でくくって関連する節の番号を示すことにする。たとえば、線の種類<sup>[3.4]</sup>とあれば、線の種類の選択には 3.4 節を参照すればよいことが分かる。

#### 4 FEM データ

## 4.1 対象となる FEM データ

このプログラムで扱う FEM モデルは次のようなものである。

- 各節点は二つの座標(x、y)で定義されている。x軸は水平方向(プロッター出力時のロール方向)、y軸は鉛直方向である。また、x軸は左から右へ向かう方向、y軸は下から上へ向かう方向が正である。
- ② 要素は固体要素(辺の数が一般に3、4、または8であるが、8以下であればこれ 以外でも可能)および線分要素(2節点要素:はり要素やばね要素)である。これ らはその角が節点となるように定義される。これらの要素を定義する節点を以後、 要素節点とよぶ。ジョイント要素のように面積のない要素を用いることは可能で ある。

FEM 解析では多くの量が解析結果として現れる。しかし、これをプログラムとし て見た場合にはこれらは全てテンソル量、ベクトル量、またはスカラー量に分類され る。テンソルは各要素について定義され、3つの成分を持っている<sup>1</sup>。ベクトルは各節 点について定義され、2つの成分を持っている。スカラーは各要素または節点につい て定義され、有効な成分は1つである。例えば、応力やひずみはデンソル量、変位や 加速度はベクトル量、圧力や最大せん断応力などはスカラー量である。

プログラムのコア領域を節約するため、このプログラムでは通常、プログラムの実 行中は、モデルの形状に関する情報以外に、テンソル、ベクトル、スカラーの3種類 のデータセットのうち一つのデータセットしか保存していない。従って、ユーザーは 一つのデータセットを読込んだら、そのデータを使うすべての作業を次のデータセッ トを読込む前に行なわなければいけない。

同じタイプのデータのプログラムによる足算は可能である。また、この際、各デー タに重みをつけることも可能である。これにより、平均値や、差などをデータとして 作業の対象とすることができる。例えば二つのベクトル量の平均値を用いた作業を行 うのであれば、先ずオプション 20 により最初のデータを重み係数 0.5 で入力し、次に オプション 21 により次のデータを重み係数 0.5 で加える。また、二つのテンソル量の 差が欲しいのであれば、オプション 30 で最初のデータを重み係数 1 で入力し、オプ ション 31 で次のデータを重み係数-1 で加えるとよい。

<sup>&</sup>lt;sup>1</sup> 3.10 節で説明したように、2 節点要素では軸力、せん断応力とモーメントがテンソル量の範疇に入れられている。

## 4.2 FEM データの読込み

前述のように、このプログラムでは4つのタイプのデータをFEMのデータとして 扱う。モデルの形状を表すデータ、テンソル量、ベクトル量、およびスカラー量であ る。これらのデータは、ユーザーが定義したユニットまたはファイルから読込まれる (オプション6で指定する)。当初は、ユニット5(すなわちカード)が指定されて いる。もし、各データセットが異なるユニットやファイルに格納されているのであれ ば、これらのデータを読込む前にそれぞれオプション6により対応するユニット番号 やファイル名をを指定すればよい。

データの入力フォーマットはオプション7で指定する。この指定がない場合はデフ オルト値が用いられる。すなわち、オプション7による FORMAT の指定がないとき は、以下の説明に示す FORMAT が自動的に用いられる。ただし、オプション6で作 図の対象となるプログラムを指定することも可能である。この場合には、以下の説明 とは関係なく、特定の書式でデータが読みとられる。このような特別は書式は4.3 節 で示されている。

## 4.2.1 FEM 解析モデル

このデータは他の 3 つのデータに先立ち入力する必要がある。入力はオプション 10 で行う。

- 基本データ
  - NUMNP, NUMEL(215)1~ 5NUMNP節点数
  - 6~10 NUMEL 要素数

②節点データ (NUMNP 個の節点)

INODE	(I), X(I), Y(I	), I=1, NUMNP (I5, 5X, 2F10.0)
$1 \sim 5$	INODE(I)	I番目の節点の節点番号(default <sup>3</sup> =)
$10 \sim 20$	X(I)	I 番目の節点の x 座標
21~30	Y(I)	I 番目の節点の y 座標

③ 要素データ (NUMEL 個の要素)

IELM(1	), (IX(J, I), .	=1, NEMND), I=1, NUMEL (9I5)
$1 \sim 5$	IELM(I)	I 番目の要素の要素番号 (default <sup>3</sup> = I)
6~45	IX(J, I)	NEMNDは、オプション1で指定した、最大の要素節点の数で、
		2、4 または8 である。そのほかの数でも問題なく動くようにコ
		ーディングされているが、検証は行われていない。なお、たと
		えばNEMND=8で4節点アイパラ要素を読み込むときはIX(5,I)

~IX(8,I)までには0を入れておく必要がある。すなわち、実質 的には0でない要素節点番号が指定されているまでの部分を要 素節点の数としてプログラムは扱う。

4節点アイパラ要素で3角形要素を使うとき、IX(3,I) = IX(4,I)と置くことがあるが、 これは内部では3角形要素として扱われる。また、線分要素(2節点要素)を表すの に、IX(2,I) = IX(3,I)かつ IX(1,I) = IX(4,I)と入力するプログラムもあるが、これも正し く2節点要素として認識される。

要素節点は右回り、左周りの区別は問わないが、どちらかの周り方で並んでいる必要がある。通常の FEM であれば 4 節点要素まではこの基準は満たされている。しかし、8 節点要素では必ずしもこの基準は満たされていない。すなわち、多くのプログラムでは、下図の左のように節点番号がつけられている。しかし、POST2D が要求するのは右側の図のように示された並びである。



節点番号、および要素番号は必ずしも番号順にならんでいる必要はないし、また、 途中で番号が飛んでいても構わない。ただしその数は NUMNP、および NUMEL 個で ある必要がある。また、後に読むデータの並び方はここで入力したデータと同じであ る必要がある。例えば、ベクトル量の入力で、I 番目のベクトル成分は、ここで I 番 目に入力した節点の値である。

## 4.2.2 テンソル量 (NUMEL 個のデータ)

(SRS(J,	, I), J=1, 4), I	I-1, NUMEL (4E15.6)
固体要素0	D場合	
1~15	SRS(1, I)	I番目要素の $x$ 断面に作用する $x$ 方向成分(例えば $\sigma_{xx}$ 、 $\varepsilon_{xx}$ 等)
16~30	SRS(2, I)	I番目要素のy断面に作用するy方向成分(例えば <i>oyy、&amp;yy</i> 等)
31~45	SRS(3, I)	I番目要素のx断面に作用するy方向成分、または、y断面に作
		用する x 方向成分(例えば t <sub>xy</sub> 、 <i>ɛxy</i> 等)
		この場合にはデータは3つしか読まない。
2節点要素	「の場合(は	「ね、はりの区別はしない)
1~15	SRS(1, I)	I番目要素の軸力
16~30	SRS(2, I)	I番目要素のせん断力
31~45	SRS(3, I)	I番目要素の始点のモーメント

46~60 SRS(4, I) I 番目要素の終点のモーメント

#### 4.2.3 ベクトル量 (NUMNP 個のデータ)

# UX(I), UY(I), I=1, NUMNP (2E15.6)

1~15	UX(I)	 Ⅰ番目の節点のベクトル値の x 軸方向成分
16~30	UY(I)	I 番目の節点のベクトル値の y 軸方向成分

**4.2.4** スカラー量 (NUMNP 個または NUMEL 個のデータ)

# PRS(I), I=1, NUMPT (E15.6)

1~15 PRS(I) I 番目の節点、または要素重心位置のスカラーの値。NUMPT は NUMNP または NUMEL である。(データによって異なる。)

## 4.3 特別なプログラムの出力

この節では、オプション6で特定のプログラムが指定されたときの入力用のフォー マットを示す。ただし、ここで示されているプログラムの出力ではあっても、この節 で示す書式に合わないときには、前節で示した一般のデータとして処理すべきである。

#### 4.3.1 TARA-3

TARA-3 では、節点や要素の入力は、TARA-3 入力データをそのまま指定するので はなく、このうち、節点数と要素数の指定、節点・要素の入力の部分のみを切り抜い て POST2D の入力とする。一方、応答値については、各オプションの説明で示されて いるが、この一覧にあるものであれば、TARA-3 の出力ファイルを特に編集すること なく入力データとして指定すればよい。

同じタイプのデータがいくつもあるケース、たとえば盛り立て途中や地震後の圧密 過程では、必要なデータに至るまで、何度も、たとえばベクトルを読むのであれば Option 20 を繰返し、途中の不要なデータを読み込まないようにする。この際、場合に よってはファイルを REWIND (Option 70) する必要もあることに注意が必要である。

4.3.2 STADAS

#### 4.3.3 STADAS u-U

モデル形状を表すデータは、入力データをそのまま使うことが出来る。これに対し て、ベクトル、テンソル、スカラーに関しては、出力リストより読みとる。この場合、 次の注意が必要である。 1) ベクトルに関しては、全ての節点の値を同時に読みとる。この際、ファイルのポ インターは正しく最初の節点に来ている必要がある。

2) テンソル、スカラーに関しては、各読み込み時に指定できる種類のデータであれば、 プログラムは現在のポインター位置からファイルの終わりに向かって必要なデータ を自動的に探しに行くので、ポインターの位置をデータの最初に合わせる必要がない。 というより、これはしてはいけない。プログラムは、出力の内、要素タイプを示す出 力、すなわち、「-- Spring --」「-- Rotation --」「-- Dashpot --」「-- Beam --」「-- Solid element--」「-- Joint element--」などを手がかりとして要素タイプを判定し、データを 正しく読み込むので、現在のポインター位置からこれらが読み込めるように設定して おく必要がある。

#### 4.3.4 FLIP

FLIP では、節点や要素の状況は、入力データをそのまま POST-2D の入力として扱うことが出来る。この際、節点や要素のみならず、材料の指定なども特に編集せずそのまま入力すれば良い。

これに対して、ベクトル、テンソル、スカラーを読み込むときには、印刷イメージ の出力ファイルを若干編集する必要がある。すなわち、作図に必要なデータ以外の行 を削除する必要がある。

特に重要なのは、改ページの制御のための記述を削除することである。FLIPの印刷では、節点や要素の 50 個ごとに FOTRAN 印刷時に改ページするための情報が含まれている。たとえば次のようである。

299	299-0	-6. 0400E+00	-1.1296E+01	-5. 7730E+00	-1. 2762E+00	5.9276E-01	6.1804E-02	-3.8816E-05
300	300-0	-7. 8062E+00	-1.3549E+01	-7.1111E+00	-4. 5531E-01	4. 2446E-01	5. 3864E-02	-3.7994E-05
OFEAP ##	### ANALY	SIS OF A DAMAGE	D QUAY WALL (DY	NAMICAL ANALYSI	S) ############	####	FLI	P VERSION 3.3
0		((( STRESS	OF MULTI-SPRING	ELEMENTS		A	TTIME 1.00))	
OSEQ. NO	ELMT NO	NORMAL STRS X	NORMAL STRS Y	NORMAL STRS Z	SHEAR STRS XY	1/SAFETY FACT.	PEX1	EMP3
301	301-0	-8. 8350E+00	-1.5888E+01	-8. 2328E+00	4. 6723E-01	4. 5723E-01	6.0890E-02	-4. 5361E-05
302	302-0	-9. 7980E+00	-1.8910E+01	-9. 5597E+00	6.9136E			
<u> </u>		200 6 201	の問け	2 行 の み へ	。」、ジェク	は起ぶる。	っている	この部分など

ここで、300 と 301 の間に、3 行の改ペーシ時の情報が入っている。この部分を削除する必要がある。

このようにして、読み込むデータをひとまとめにまとめる。そして、各データのブ ロックの最後の行の後に、一行ブランクを入れる必要がある(7.3節の例題参照)。

4.3 節で示す特定のプログラムを除く、一般の FEM 結果では、全応答値のデータが 入力データとして必要である。しかし、FLIP のデータを読む際には、必ずしも全て の応答値を用意する必要はない。この場合、指定されなかった要素や節点の応答値は 0として扱われる。データ数が実際の要素数や節点数より小さい場合には、データの 入力の終わりを示すものが何か必要である。上の段落で示した様に、各データブロッ クの最後にはブランクカードを入れることになっているが、これによりデータの終わ りを判読することになる。

このほか、データの中には不要な行がたくさんある。出来るだけ削除しておくこと が好ましいが、Option 71 により読み飛ばすことも可能である。7.3 節の例題を参照さ れたい。

これらをまとめると、FLIP のデータの扱いは次のようになる。

1) 出力データから不要な行を削除する。

2) Option 6 で、入力データ(節点や要素情報が含まれている)のファイル名を指定する。

- 3) Option 10 で FEM モデルに関する情報を読み込む。
- 4) Option 6 で、1)で編集した出力データファイル名を指定する。
- 5) 必要な作図をする。

# 5 カード入力

# 5.1 オプションカード

3.1 節で示したように、オプションカードはプログラムに次にどのような作業を行うかを指示するために用いられるカードである。すなわち、一つの作業につき一枚の オプションカードが必要である。

IPOT (I5)

1~5 IOPT オプション番号。作業内容との対応は以下の通り。

番号	作業	ページ
0	プログラムの終了	
1	作図に必要な基本データを入力。	27
2	タイトルを入力。	
3	縮尺部の名前を入力。	
4	縮尺部の単位名を入力。	
5	タイトルと縮尺部の位置を指示する。	
6	ファイルの指定	
7	FEM データ入力のための FORMAT を入力。	
8	デフォルト値を変える。	
9	FEM モデルの座標変換	
10	FEM モデルの情報の入力。	
11	FEM モデルの形状を作図。	
20	ベクトル量の入力	40
21	ベクトル量を入力し、前のベクトル量に加える。	
22	ベクトル量に関する図を書く。	
23	ベクトル量に関する図を、前の図に重ね書きする。	47
30	テンソル量の入力	49
31	テンソル量を入力し、前のテンソル量に加える。	51
32	テンソル量に関する図を書く。	
33	テンソル量に関する図を、前の図に重ね書きする。	55
34	テンソルのスカラー化、等高線図、数値を書く。	
40	スカラー量の入力	
41	スカラー量を入力し、前のスカラー量に加える。	60
42	スカラー量に関する等高線図を書く。数値を書く	61
43	スカラー量に関する図を、前の図に重ね書きする。	66
44	スカラー量からベクトル量への変換	67

コメントを書く。線分とコメントを書く。	68
境界条件を表わすシンボルマークを書く。	69
線分や円弧を数字とともに図に書く。	71
シンボルマークとコメントを書く。	75
図中に座標軸を入れる。	76
図の一部を斜線等で塗りつぶす	78
与えら点列を結ぶ線を書く。	
	0.1
刈 剱 軸 を 昔 く	81
N級軸を書く 一部を拡大して作図する範囲を指定する。	
<ul> <li>&gt; 対 契 軸 を 書く</li> <li>一 部 を 拡大して 作 図 する 範囲 を 指定 する。</li> <li>- 図 に 不 必要 な 部 分 を 書 か ない 指定 する。</li> </ul>	
N級軸を書く 一部を拡大して作図する範囲を指定する。 のに不必要な部分を書かない指定する。 テンソルやスカラーを書く要素を指定する。	
N剱軸を書く 一部を拡大して作図する範囲を指定する。 のに不必要な部分を書かない指定する。 テンソルやスカラーを書く要素を指定する。 入力ファイルを REWIND する。	
<ul> <li>&gt;</li></ul>	
	<ul> <li>ゴメンドを書く。緑ガとゴメンドを書く。</li> <li>境界条件を表わすシンボルマークを書く。</li> <li>線分や円弧を数字とともに図に書く。</li> <li>シンボルマークとコメントを書く。</li> <li>図中に座標軸を入れる。</li> <li>図の一部を斜線等で塗りつぶす。</li> <li>与えら点列を結ぶ線を書く。</li> </ul>

# 5.2 コントロールカード

コントロールカードはオプションカードに続いて入力する。

# オプション0 プログラムの終了

オプション0はプログラムの実行の終了を意味する。従って、コントロールカード は必要がない。このオプションがない場合には、カード入力の終りがプログラム終了 となる。

# オプション1 作図の基本データの入力

このオプションは作図に必要な基本データを指示し、通常はデータの最初に一度は 用いる必要がある。しかし、作図に全てデフォルト値を用いるのであれば、このカー ドは必ずしも必要ではない。もし、データカードの途中で一部の変数の値のみを変換 したいときはその部分のみに値を入力し、あとの所は全てブランクとして、このオプ ションを用いる。

(1) 基本データ (カード1枚)

WAKU, NEMND, SIZET, SIZES, SEZEN, XORI, YORI (A4, 1X, 15, 5F10.0)

$1\sim 4$	WAKU	図作業領域の大きさを決めるフラグ。(default <sup>1</sup> = FGA4)
		FGA4:A4 横サイズ
		FGB4 : B 4 横サイズ
		FGA3:A3横サイズ
		FGA2:A2横サイズ
		FGA1:A 1 横サイズ
		FA4S:A 4 縦サイズ
		FG11:横11インチ、縦 8.5インチ
		FG10 : 横 10 インチ、縦 10 インチ
		FG14 : 横 14 インチ、縦 11 インチ
		FGAB : 任意の大きさ(大きさは(2)項で指定)
6~10	NEMND	最大の要素節点の数で初期には4が割り当てられている。2、4
		または8を取る。FLIPのデータ(Option6参照)を読みとる際
		には、この値は意味がない。
11~20	SIZET	タイトルの文字の大きさ(cm)。(default <sup>1</sup> =プログラムが作図
		領域に応じて適当な値を決める。)
$21 \sim 30$	SIZES	縮尺軸に用いる字の大きさ(cm)。(default <sup>1</sup> =プログラムが作
		図領域に応じて適当な値を決める。)
31~40	SIZEN	節点番号、要素番号、図中の数字、コメント文等に用いられる
		文字の大きさ(cm)。(default <sup>1</sup> = 0.2cm)
$41 \sim 50$	XORI	>
51~60	YORI	FEM モデルの座標(0,0)の図上の位置(作業枠の左下隅から計
		った長さ(cm))。(default <sup>1</sup> =プログラムがモデル図が適当な
		位置に来るように値を選択する。また、9999.が入力されれば、
		次に書く図では、以前にプログラムが用いた値ではなく、新し
		く現在の縮尺等に適した値がデフォルト値として用いられる。
		この機能はタイプ2の default 値の決め方と同じである。)

(注) 0 はデフォルト値として扱われるので、もし必要であれ ば、小さい値を入力する。一方のみに値をいれることも可 能である。この場合、他方はデフォルト値として扱われる。
(注) これらの値を指定するときは、図が重ならないように、 タイトル、縮尺軸の大きさにも注意すること。

(2) 枠の指定

このカードは、IFILE = FGAB のときのみ必要。 (カード1枚)

XWIDTH, YWIDTH (2F10.0)

1~10 XWIDTH 枠のx方向の長さ (cm)

11~20 YWIDTH 枠のy方向の長さ (cm)

# オプション2 タイトルを与える。 (カード1枚)

TITLE (A80)

1~80 TITLE 80 文字以内のタイトル。このうち1 文字目からブランクでない 最後の文字までが作図対象となる。

# オプション3 縮尺軸の名前 (カード1枚)

3.8 節で述べたように、プログラムは以下に示すような座標軸の名前をあらかじめ 用意している。これ以外の名前を使いたいときはこのオプションを用いる。座標軸名 が不要の時には、このオプションによりブランクを入力する。一旦入力された名前は 次に再びこのオプションにより変換されるまで有効である。

番号	座標軸名	データの種類
1	Geo.scale	FEM モデル
2	Displacement	ベクトル
3	Stress	テンソル
4	Excess p.p.	スカラー

プログラムが用意している座標軸名

K, SNAME (I5, A40)

1~5 K 座標軸番号(上の表の番号)
 =1:FEMモデル用の座標部
 =2:ベクトル用の座標部
 =3:テンソル用の座標部
 =4:スカラー用の座標部

- 6~45 SNAME 座標軸名(40字以内)
- (注1)作図時には座標軸の始点の位置が揃うように座標軸が書かれる。従って、FEM モデルの座標軸名と作図するデータの座標軸名の長さが異なる時には、長いほ うの座標軸名に合せるように、短い方の座標軸名の後に空白がつけられて作図 される(3.8節の例参照)
- (注 2) このオプションでは一度に一つの座標軸名しか変換できない。2 つ以上の変換を行うときには、必要な回数だけこのオプションを繰返す必要がある。

# オプション4 縮尺軸の単位名 (カード1枚)

プログラムでは、単位名はあらかじめは用意していないので、必要に応じ単位名を 入力する必要がある。一旦入力された名前は次に再びこのオプションにより変換され る<u>まで有効であ</u>る。下図に示すように、入力された単位名は座標軸の右に書かれる。

 K.UNAME
 (I5, A40)

 1~5 K
 単位名を与える座標軸番号

 =1:FEM モデル用の座標軸

 =2:ベクトル用の座標軸

 =3:テンソル用の座標軸

 =4:スカラー用の座標軸

 6~45 UNAME
 単位名(40字以内)

(注) このオプションでは一度の一つの単位名しか変換できない。2 つ以上の変換を 行うときには、必要な回数だけこのオプションを繰返す必要がある。



# オプション5 タイトルと縮尺部の位置 (カード1枚)

タイトルと縮尺部の位置をこのオプションにより指定する。

もしこのオプションが用いられなければ、プログラムは、図の下の方にこれらを書く(6章の例参照)。この場合プログラムは、文字の大きさ、縮尺軸の長さなどを考慮し、これらがオプション1で指定された枠からはみでないようにする。

このオプションが指定されたときには、プログラムはこれらのチェックを行わない。 従って、ユーザーは図としての仕上りを考慮しながらその位置を決めなければならな い。

## ITPOS, TX, TY, SX, SY, SD (15, 5F10.0) $1 \sim 5$ ITPOS 位置を決めるためのフラグ =0:位置はプログラムが決める。この場合、以下の入力は意味 がない。 =1:以下で指定した位置にタイトルおよび座標軸を書く。(指 定する位置は下の図に示されている。) 6~15 TX タイトルの始点の座標(cm)(枠の左下隅からの距離。下図参 16~25 TY 照) 26~35 SX 座標部の始点の座標(cm)(枠の左下隅からの距離。下図参照) 36~45 SY 2 つの縮尺軸の間の距離(cm)(下図参照)SD が正のとき、 46~55 SD モデルの縮尺部の下にデータの縮尺部が書かれる。 (SX, SY) Geo.scale SD cm EXAMPLE Displacement 20 (TX, TY)

タイトルと座標部の位置の指定

(注)デフォルト値を用いた場合、TY=3×SIZET、SY=3×SIZET+3×SIZES、SD=3×SIZES
 (SIZET、SIZES はオプション1参照)に取られる(ただし、モデル縮尺部のみのときは、SY=3×SIZET)。TX、SX は適当に決められる。

# オプション6 ファイルの指定 (カード1枚)

FEM データを読み込むファイル、データの種類などを指定する。

# IFILTP, IFILE, FILNAM (215, A40)

- 1~ 5 IFILTP 特定のプログラムの出力であることを意味する。初期値は0が 割り当てられ、このとき、初期に与えられているまたはオプシ ョン7で設定したフォーマットに基づきデータを読む。1以上 の数値が与えられていれば、特定のプログラムであることを意 味し、4.3 節で示した仕様でデータを読む。 =0:一般的な FEM データ
  - =1 : TARA-3
  - =2 : STADAS
  - =3 : STADAS u-U
  - =4 : FLIP
- 6~10 IFILE FEM データの格納されているユニット番号。ここに値が示さ れていれば、FILNAM は無視される。たとえば 10 が入力され れば (フォートランのコンパイラーにも依るが)、fort.10 とい うファイル名でデータを用意する必要がある。
- 11~50 FILNAM ファイル名。IFILE が 0 やブランクの時、このファイル名のデ ータを読む。

(注)特定のプログラム名を指定したときには、Option 7 の指定に関わらず、プログ ラムに特有の FORMAT でデータを読み込む。ただし、特定のプログラムを使った時 でも、POST2D で想定しないデータを読みとるときには、Option 6 で一般的な FEM デ ータを選び、Option 7 で対応する FORMAT を入力する必要がある。特定のプログラ ムについて用意された FORMAT については、4.3 節を参照のこと

# オプション7 データ入力 FORMAT の変換 (カード1枚)

データの入力に用いる FORMAT を指定する。一旦入力された FORMAT は、次に 別の FORMAT が入力されるまで有効である。

このオプションが使われなければ、プログラムは、下の説明で()で示した FORMAT を用いる。

IFMT, FMT (I5, A40)

$1 \sim 5$	IFMT	修正する FORMAT を表わす番号
		1:節点数および要素数 (215)
		2:節点番号および節点座標 (I5,5X,2F10.0)
		3:要素番号および要素節点番号 (515)
		4:ベクトル量 (2E15.6)
		5:テンソル量 (3E15.6)
		6:スカラー量 (E15.6)
6~45	FMT	新しい FORMAT

- (注1)入力する FORMAT は必ず括弧で括らなければならない。
- (注 2) このオプションでは一度の一つの FORMAT しか変換できない。2 つ以上の変換を行うときには、必要な回数だけこのオプションを繰返す必要がある。
- (注 3) Option 6 で特定のプログラムを指定したときには、この入力とは関わりなく、 プログラムに応じた FORMAT でデータが読み込まれる。ただし、特定のプロ グラムでも、4.3 節に指定されたものを読み込む以外のケースでは Option 6 で 一般的な FEM データとして扱い、このオプションで正しい FORMAT を入力 する必要がある。
# オプション8 デフォルト値の変換 (カード1枚)

プログラムが用意しているデフォルト値等のいくつかをこのオプションで変える ことができる。

### IFG, FLG1, FLG2, FLG3, FLG4, FLG5 (15, 5F10.0)

- 1~ 5 IFG 変換するデフォルト値を指示する番号(下表参照)
- 6~55 FLG1~FLG5 新しいデフォルト値(下表参照)。もしブランクが入力さ れたときは、対応する項目の変換は行わない。

IFG	FLG1	FLG2	FLG3	FLG4	FLG5
1	AXMD	AMXT			
2	SUBLNS	SUBLND	SUBLNT		
3	ALS	BLS			

AMXD 自動スケール時のベクトル量の最大値に対応する長さ(cm).初期値1

AMXT 自動スケール時のテンソル量の最大値に対応する長さ(cm).初期値1

- SUBLNS FEM モデル用の座標軸の長さ(cm)。初期時は4cm にセットされている。 座標軸は SUBLNS より大きく、かつ座標軸数値が丸くなるよう書かれる。
- SUBLND ベクトル量用の座標軸の長さ(cm)。初期時は4cmにセットされている。 座標軸はSUBLNDより大きく、かつ座標軸数値が丸くなるよう書かれる。
- SUBLNT テンソル量用の座標軸の長さ(cm)。初期時は 4cm にセットされている。 座標軸は SUBLNT より大きく、かつ座標軸数値が丸くなるよう書かれる。
- ALS 矢印の矢の部分の軸方向長さ(cm)。初期値 0.2cm。(下図参照)
- BLS 矢印の矢と直交する方向の長さ(cm)。初期値 0.1cm。(下図参照)



# オプション9 FEM モデルの座標変換

このオプションは特殊な目的のために作成されたものである。それは、スカラー量 を表すのに、解析しているモデルの面と直交方向のベクトルとして表すためである。 この場合、図形は3次元的となるため、これを斜めの位置で見たときには、図に例を 示すように、直交座標系は図上では直角でない角度で構成される座標系に見える。

このオプションはオプション 11 等により FEM モデルの作図を行ったときに、その モデルが図に示した座標系により書いたように見えるように節点座標を変換する。ま た、オプション 44 により、スカラー量のベクトル化ができる。

なお、このオプションを用いた場合にはプログラムが記憶する節点座標が新しい値 で置換えられ、元の座標値は記憶されないので注意されたい。



モデル形状

座標変換後のモデル形状

## ANGX, FACX, ANGY, FACY (4F10.0)

1~10 ANGX モデルのx軸と用紙のロール方向(枠のx方向)との角度(度) 11~20 FACX x座標値に掛ける係数。(default<sup>3</sup> = 1.0)

- 21~30 ANGY モデルの y 軸と用紙のロール方向(枠の x 方向)との角度(度)
- 31~40 FACY y座標値に掛ける係数。 (default<sup>3</sup> = 1.0)

(注)新しい節点座標(x、y)は、元の座標(X、Y)より次式により求められる。
 x = X×FACX×cos(ANGX)+Y×FACY×cos(ANGY)
 y = X×FACX×sin(ANGX)+Y×FACY×sin(ANGY)

(注) このオプションを用いると、以前にプログラムが記憶していた、XORI, YORI, SCALE, SUBUS, NSUBUS の値は失われるので、デフォルト値により以前と同じ縮尺 の図を書くことはできなくなる(新しく自動スケーリングが行われる)。

# オプション 10 FEM モデルの入力 (カード1枚)

# SMUL, SMX, SMY (3F10.0)

1~10 SMUL 里み係数。 (default)	lt' = 1.0
---------------------------	-----------

11~20 SMX x座標の重み係数。 (default<sup>3</sup> = 1.0)

21~30 SMY y座標の重み係数。(default<sup>3</sup> = 1.0)

入力された節点座標にこの重み係数を掛けた値がプログラムでは節点座標値として取扱われる。プログラムが使う座標 $(x_P, y_P)$ は入力座標(x, y)より、次の式で求められる。

 $x_P = x \times \text{SMUL} \times \text{SMX}$ 

 $y_P = y \times \text{SMUL} \times \text{SMY}$ 

- (注1) もしオプション6で FEM データのユニット番号(IFILE) に5が指定されて いるときには、このカードの後に FEM データをつける。
- (注 2) FEM モデルデータは他のデータに先立ち入力する必要がある。もし、新しい FEM モデルデータがこのオプションによって入力されたときは、プログラム は以前に読まれていた FEM モデルデータおよびベクトル量等のデータを消 去し、ここで読まれたデータのみを記憶する。

# オプション 11 FEM モデル形状の作図

このオプションでは FEM モデル形状を節点番号、要素番号と共に書く。オプション 22 で IFTYP=4, IDTYP=6 とすることによって、もっと自由なモデル形状の作図も可能である(ただし、このときには節点番号や要素番号を書くことはできない)。

NFIG, 1	NNODE, N	IELM, L	TP, PICH, S	CALE, NSU	BL	JS, SUBUS	5	
	(I1, I4, 2I5, F5.0, F10.0, I5, F10.0)							
$1 \sim 1$	NFIG	要素	の書き方をネ	示す番号				
		=0 :	通常					
		=1:要	夏素を少し縦	i小させて				
		ŧ	歯く。これに	より要素				
		C	の形状が把掛	屋できる。				
$2\sim 5$	NNODE	節点	番号の書き	方を示す	NF	FIG=0 では	辺は正確に	描かれて
		番号			5	るが、各事	要素が正しく	、描かれて
		=0:	番号なし。		い	るかわから	らない。NFI	G=1 では
		=1~:	5:下表に示	すように	辺	の位置は正	E確ではない	いが、要素
		子 毛	番号を書く。		$\mathcal{O}$	形状が分れ	いる。	
		番号	1	2		3	4	5
		書き方	数字のみ	四角の枠	1	活弧付き	半円の枠	円
		例	120	120	(	(120)	(120)	120
6~10	NELM	要素	番号の書き	方を示す番	号			
		=0:	番号なし。					
		$=1 \sim 1$	5:上表に示	すように番	号号	を書く。		
11~15	LPT	要素	形状を示す緒	泉の種類[3.4]				
16~20	PICH	要素	形状を示す緒	泉のピッチ <sup>[</sup>	3.4]			
21~30	SCALE	モデ	ルの縮尺=図	上で 1cm	こ交	応するモ	デルの長さ。	default <sup>2</sup>
		=プロ	マグラムが適	i当な値を割	t定	する。)		
31~35	NSUBUS	モデ	ルの縮尺軸の	の座標軸数	値	の小数以下	「桁数 <sup>[3.2][3.8]</sup> 。	(default <sup>1</sup>
		=プロ	ログラムが適	i当な値を認	定	する。)		
		(注)	SCALE ま	たは SUBU	JS 7	が0でなく	、かつ NS	UBUS=0 で
		ð	あれば、プロ	グラムはN	JSU	JBUS に前	iに使った値	でなく、現
		不	主の値に適し	した新しい	値を	をデフォル	~ト値として	採用する。
36~45	SUBUS	縮尺頭	軸の長さに対	対応するデ	- ļ	₽量(defaι	ult <sup>2</sup> =プログ	ラムが適当
		に値	を決める。)					

(注) Option 61 および Option62 の要素に関する指定は、NFIG=0 の時には要素番号の

みに有効であり、NFIG=1の時には、要素番号および要素の形状に関し有効である。 すなわち、NFIG=0ではいずれにしろ要素の形状は作図される。ここに要素番号を書 くか否かが指定できるのみである。

# オプション20 ベクトル量の入力

通常は最初の1枚のカードの入力である。しかし、Option6 で特定のプログラムを 指定したときには、プログラムの種類により、(2)項以下の入力が必要となる。

(1) 標準データ

DMUL.	, ITP, DMX,	DMY (F10.0, I5, 2F10.0)
1~10	DMUL	重み係数。(default <sup>3</sup> =1.0)注参照
11~15	ITP	ITP=1 であれば、入力した値の絶対値を以後の作業に用いる。
16~25	DMX	x成分の重み係数。 (default <sup>3</sup> = 1.0) 注参照
26~35	DMY	y成分の重み係数。 (default <sup>3</sup> = 1.0) 注参照

- (注 1) 入力されたベクトル値に重み係数を掛けた値がプログラムではベクトル値として取扱われる。入力値(x、y)のとき、(x×DMUL×DMX、y×DMUL×DMY)がプログラムが使う値である。
- (注 2) データを入力するユニット番号に5が指定されているときは、このカードの 後にベクトル量のデータをつける。

#### (2) TARA-3 のデータタイプの指定

この項の入力は、Option 6 で IFILTP=1 すなわち、TARA-3 を指定したときのみ必要である。

- ITYP (I5)
- 1~5 ITYP 読みとるデータの種類。これまでに読みとった位置から読み込みを始めるので、必要に応じて Option 70 で巻き戻す必要がある。
  - =1:盛り立て解析、盛り立て終了、および静的外力終了
  - =2:最大加速度
  - =3:最大変位
  - =4:地震後の静的状態
  - =5:地震後の複合状態
  - =6:地震後の圧密

#### (3) STADAS u-U のデータタイプの指定

この項の入力は、Option 6 で IFILTP=3 すなわち、STADAS u-U を指定したときのみ 必要である。

- ITYP (I5)
- 1~5 ITYP 読みとるデータの種類。ファイルのポインターの位置を一番目の節点に合わせておく必要がある。

- =1: 全応力・静的・圧密解析の変位
- =2:全応力·最大加速度
- =3:全応力・最大変位
- =4: 全応力・特定時刻の加速度
- =5: 全応力・特定時刻の変位
- =6:有効応力・静的・圧密解析の変位
- =7:有効応力·最大加速度
- =8:有効応力・最大変位
- =9:有効応力・特定時刻の加速度
- =10:有効応力・特定時刻の変位
- =11:有効応力・静的・圧密解析の水の変位
- =12:有効応力・水の最大加速度
- =13:有効応力・水の最大変位
- =14:有効応力・特定時刻の水の加速度
- =15:有効応力・特定時刻の水の変位

# オプション 21 ベクトル量を加える。

以前に読込まれたベクトル量にここで読込んだ値を加え、以後の作業に用いる。 入力の方法はオプション 20 と同じであるので、オプション 20 の説明に従うこと。

# オプション 22 ベクトル量の作図

新しく作図用の枠が用意され、ここに FEM モデル形状とベクトル量に関する作図 が行われる。この節では最低 2 枚のカード(1、5 項)が必要である。

(1) 基本データ

IFTYP,	IDTYP, LT	P1, PICH1, LTP2, PICH2, SCALE, SCALED, NSUBUS, SUBUS
NSUBU	D, SUBUD	(215, 2(15, F5.0), 2F10.0, 2(15, F10.0))
$1 \sim 5$	IFTYP	FEM モデル形状の書き方を表す番号。(default <sup>1</sup> = 1)
		=1:すべての要素形状を書く。
		=2:モデルの外側の形状のみを書く。
		=3:FEM モデル形状は書かない。
		=4:特別に入力された仕様(後述)に従って書く。
6~10	IDTYP	ベクトル量の書き方を表す番号。(default <sup>1</sup> = 1)
		=1:すべての要素の変形後の形状を書く。
		=2:変形後の外側の形状のみを書く。
		=3:節点を始点とし、ベクトルを矢印で表す。
		=4:特別に入力された仕様(後述(3)項)に従って書く。実
		験値との比較等に便利な機能。
		=5:特別に入力された仕様(後述(4)項)に従って書く。
		=6:ベクトルの図は書かない。このオプションによって多様な
		モデル図を書くことも可能になる。この場合、ベクトル量
		に対応する縮尺部も作図されない。
11~15	LTP1	モデル形状を描く線の種類を表わす番号 <sup>[3.4]</sup> 。
16~20	PICH1	モデル形状を描く線のピッチ <sup>[3.4]</sup> 。
21~25	LTP2	ベクトル形状を描く線の種類を表わす番号 <sup>[3.4]</sup> 。
26~30	PICH2	ベクトル形状を描く線のピッチ <sup>[3.4]</sup> 。
31~40	SCALE	モデルの縮尺=図上で 1cm に対応するモデルの長さ。(default <sup>2</sup>
		=プログラムが適当な値を設定する。)
41~50	SCALED	ベクトル量の縮尺=図上で 1cm に対応するベクトル量の値。
		(default <sup>2</sup> =プログラムが適当な値を設定する。)
51~55	NSUBUS	モデルに関する縮尺部の座標軸数値の小数以下桁数 <sup>[3.2][3.8]</sup> 。
		(default <sup>1</sup> =プログラムが適当な値を設定する。)
		(注)SCALE または SUBUS が 0 でなく NSUBUS=0 のとき、
		NSUBUS に前に使った値でなく新しい図に適した値をデ
		フォルト値として採用する。
56~65	SUBUS	モデルに関する縮尺軸の長さに対応するデータ量
		(注)SCALE が 0 でなく SUBUS=0 のとき、前に使った値でな

く新しい図に適した値をデフォルト値として採用する。 (default<sup>2</sup>=プログラムが適当に値を決める。)

**66~70** NSUBUD ベクトルに関する縮尺部の座標軸数値の小数以下桁数<sup>[3.2][3.8]</sup>。 (default<sup>1</sup>=プログラムが適当な値を設定する。)

> (注) SCALED または SUBUD が0でなく NSUBUD=0のとき、
>  NSUBUD に前に使った値でなく新しい図に適した値をデ フォルト値として採用する。

- 71~80 SUBUD ベクトルに関する縮尺軸の長さに対応するデータ量 (default<sup>2</sup> = プログラムが適当に値を決める。)
  - (注) SCALED が0でなく SUBUD=0のとき、SUBUD に前に 使った値でなく新しい図に適した値をデフォルト値とし て採用する。

#### (2) モデル形状の特殊な作図; IFTYP=4 の時のみ必要

与えられた節点を順番に結ぶことによって、モデルのうち必要な部分のみを作図する。

# ①作図する点の数

NPT (I5)

1~ 5 NPT 入力する節点番号の数。

NPT≠0: | NPT | 個の節点番号を読み込む。

NPT≤0:座標値を入力して、その座標を結ぶように作図する。

# ②節点番号:このカードは、NPT≠0のときのみ必要

| IPT(J), J=1, NPT | (16I5) 1 枚のカードに 16 データづつ、必要な数だけ入力。

IPT(J) 節点番号。入力された順番に節点位置へペンが動き、指定された図を書く。この際、番号(IPT(J))が正であれば、ペンダウンの状態で(すなわち、線を書きながら)ペンが移動する(ただし、最初の節点へはペンダウンの状態で移動)。一方、番号が負であれば、ペンアップの状態(すなわち、線は書かない)で、絶対値で指定された節点番号の位置へペンが移動する。

### ③座標値:このカードは、NPT ≤0の時のみ必要

NPT, NUNIT, ICOD, LTYP, PITCH (415.F10.0)

$1\sim 5$	NPT	点の数
6~10	NUNIT	データを読み込むファイル番号。5のとき、このカードの後に
		続ける。
11~15	ICOD	原点の設定
		=1:用紙の左下隅
		=2 : FEM の原点
16 00		ェブル 形山と世ノ始の任将とキレナエロ[34]

#### 16~20 LTYP モデル形状を描く線の種類を表わす番号<sup>[3,4]</sup>。

21~30 PITCH モデル形状を描く線のピッチ<sup>[3.4]</sup>。

IPEN, X, Y (I5, 2F10.0) NPT 枚のカード

1~ 5 IPEN ペンの移動時のフラグ
 =2:X、Yで入力した点までペンを下ろして移動
 =3:X、Yで入力した点までペンを上げて移動

#### (3) ベクトル量の特殊な作図; IDTYP=4 の時のみ必要

実験値との比較や、他の計算手法による解析結果との比較等、FEM 計算の結果で ないデータを作図したいときは多々生じる。このオプションはそれを可能にするもの で、特定の節点のみのベクトル値を入力して、その位置にシンボルマークを書いたり、 またはこれらの節点を線で結んだりする。

NPT, ILN, IMK (315)

$1\sim 5$	NPT	以下でベクトルデータを与える節点の数。
6~10	ILN	与えたベクトル量を作図する方法に関するフラグ。
		=0:与えられた節点にシンボルマーク <sup>[3.7]</sup> を書き、かつこれら
		の節点間を線で結ぶ。(線 <sup>[3.4]</sup> は LIN2, PICH2 で指定)
		=1:与えられた節点にシンボルマークを書く。
11~15	IMK	シンボルマークの番号 <sup>[3.7]</sup>

- |ND, XX, YY| (I5, 2F10.0) NPT 枚のカード
- 1~ 5 ND 節点番号
- 6~15 XX 節点 ND のベクトル値(x 成分)。
- 16~25 YY 節点 ND のベクトル値(y 成分)。

(注) プログラムが記憶するベクトル量は、ここで入力した値で置換えられる。

#### (4) ベクトル量の特殊な作図; IDTYP=5 の時のみ必要

(節点+SCALED×ベクトル値)の位置を順番に結んで、モデルのうち必要な部分を 作図する。

NPT (I5)

1~ 5 NPT 入力する節点番号の数。

| IPT(J), J=1, NPT | (16I5) 1 枚のカードに 16 データづつ、必要な数だけ入力。

IPT(J) 節点番号。入力された順番に節点位置へ、ペンが動き、指定された図を書く。この際、番号(IPT(J))が正であれば、ペンダウンの状態で(すなわち、線を書きながら)ペンが移動する(ただし、最初の節点へはペンダウンの状態で移動)。一方、番号が負であれば、ペンアップの状態(すなわち、線は書かない)

で、絶対値で指定された節点番号の位置へペンが移動する。



ても読取ることができる。

# オプション23 ベクトル量の重ね書き。

以前の図の上にベクトル量に関する図が重ね書きされる。この節では最低2枚のカ ードが必要である(1、4項)

このオプションではベクトル図のみが作図され、枠や、タイトル、縮尺部等は作図されない。

(1) 基本データ

IDTYP, LTP, PICH, SCALE (215, 2F10.0)

- $1 \sim 5$  IDTYP ベクトル量の書き方を表す番号 (default<sup>1</sup> = 1)
  - =1: すべての要素の変形後の形状を書く。
  - =2:変形後の外側の形状のみを書く。
  - =3:変形前の位置から変形後の位置に向かう矢印を書く。
  - =4:特別に入力された仕様(後述(2)項)に従って書く。実験値との比較等に便利な機能。
  - =5:特別に入力された仕様(後述(3)項)に従って書く。
- 6~10 LTP ベクトル形状を描く線の種類を表わす番号<sup>[3.4]</sup>。

11~20 PICH2 ベクトル形状を描く線のピッチ<sup>[3.4]</sup>。

- 21~30 SCALE モデルの縮尺=図上で1cmに対応するモデルの長さ。この値は、 以下に説明する特殊な場合を除いて0を入力すること。特殊な 場合とは、オプション22(または23)→オプション60→オプ ション23のように、一旦ベクトル量を作図した後、オプショ ン60を用い、その後オプション23を用いた場合である。オプ ション60の説明で示したように、オプション60が用いられる と、プログラムで用いている5つの変数の値が変えられる。し かし、重ね書きするためにはこれらの5つの変数の値は同じで なければならない。このうち、XORIと・YORIはオプション1 で入力でき、SUBUSとNSUBUSはここでは使わない。残る1 つ、SCALEをここで入力する。もし、ここでSCALEを0とし て入力すると、プログラムは0による割算を行うことになり、 エラーとなる。なお、この上述の作業はオプション61を用い ても可能であり、入力も簡単なので、これを使う方がよい。
- (2) ベクトル量の特殊な作図; IDTYP=4 の時のみ必要

この項の入力は、オプション22の(3)項と同じなので、これに従い入力する。

(3) ベクトル量の特殊な作図; IDTYP=5の時のみ必要

この項の入力は、オプション22の(4)項と同じなので、これに従い入力する。

# (4)ベクトル量の数値の記入

この項の入力は、オプション22の(5)項と同じなので、これに従い入力する。

# オプション 30 テンソル量の入力

通常は最初の1枚のカードの入力である。しかし、Option6 で特定のプログラムを 指定したときには、プログラムの種類により、(2)項以下の入力が必要となる。

(1) 標準データ

ISTS, TMUL, ITP, TMX, TMY, TMXY (15, F10.0, 15, 3F10.0)

- 1~ 5 ISTS テンソル量の符号に関するフラグ
  - =0:引張りが正
  - =1:圧縮が正(注参照)
  - =2: 圧縮が正(注参照)
    - (注)一般に FEM の理論では引張り応力が正に取られている。 このプログラムでも引張りを正に扱っている。ところが、 土質力学に関する解析では、圧縮が正に取られることもし ばしばある。ISTS はこのとき、引張りを正に直すためのフ ラグである。すなわち、ISTS=1 とすると、入力されたデー タの符号を反転させる。また、ISTS=2 であれば、法線方向 成分のみの符号を変えて、以後の作業に用いる(したがっ て非対角成分の符号は変らない)。圧縮が正の解析では、 一般には ISTS=1 であるが、希に、ISTS=2 としなければな らない場合がある。用いたプログラムの符号の約束に従い、 次のように入力する。



(注) 2 節点要素では、ISTS の値に関わらず、ISTS の指定に よる符号の変換は行われない。また、Option 6 で特別なプ ログラム出力を想定しているときなそのプログラムの仕 様に従うので、ISTS は意味がない。

注参照

5~15 TMUL

16~20 ITP

テンソル量に関するフラグ

重み係数。 (default<sup>3</sup> = 1.0)

- =0:テンソル成分は全体座標に関する値。
- =1: テンソル成分は要素節点 1 から、要素節点 2 に向かう局所
   座標に対する値。(NASTRAN に現れる)

(注) Option 6 で特別なプログラム出力を想定しているときな そのプログラムの仕様に従うので、ITP は意味がない。

- 21~30 TMX x 成分(または軸力)の重み係数(default<sup>3</sup>=1.0) 注参照。
- 31~40 TMY y 成分(またはせん断力)の重み係数(default<sup>3</sup> = 1.0) 注参照

41~50 TMXY *xy*成分(またはモーメント)の重み係数(default<sup>3</sup> = 1.0) 注 参照

(注)入力した値は、ITP=1のときには、まず、全体座標系に対する値に変換される。 全体座標系における成分( $\tau_{xx}$ 、 $\tau_{yy}$ 、 $\tau_{xy}$ )は、( $\tau_{xx}$ ×TMUL×TMX、 $\tau_{yy}$ ×TMUL×TMY、  $\tau_{xy}$ ×TMUL×TMXY)と変換され、さらに ISTS=1のとき、 $\tau_{xx}$ 、 $\tau_{yy}$ 、 $\tau_{xy}$ の符号が、ISTS=2 のとき、 $\tau_{xx}$ 、 $\tau_{yy}$ の符号が反転される。

(注)データを入力するユニット番号に5が指定されているときは、このカードの後 にテンソル量のデータをつける。

#### (2) TARA-3 のデータタイプの指定

この項の入力は、Option 6 で IFILTP=1 すなわち、TARA-3 を指定したときのみ必要である。

- ITYP (I5)
- 1~5 ITYP 読みとるデータの種類。これまでに読みとった位置から読み込みを始めるので、必要に応じて Option 70 で巻き戻す必要がある。
  - =1:既存要素の応力
  - =2:盛り立て解析、盛り立て終了、および静的外力終了
  - =3:静的解析終了時の応力
  - =4:地震後の静的状態
  - =5:地震後の複合状態
  - =6:地震後の圧密

### (3) STADAS u-U のデータタイプの指定

この項の入力は、Option 6 で IFILTP=3 すなわち、STADAS u-U を指定したときのみ 必要である。

- ITYP (I5)
- 1~5 ITYP 読みとるデータの種類。これまでに読みとった位置から読み込みを始めるので、必要に応じて Option 70 で巻き戻す必要がある。
  - =1:応力
  - =2:ひずみ

# オプション31 テンソル量を加える。

以前に読込まれたテンソル量にここで読込んだ値を加え、以後の作業に用いる。 入力の方法はオプション 30 と同じであるので、オプション 30 に従って入力データ を作成すること。

# オプション 32 テンソル量の作図。

新しく作図用の枠が用意され、モデル形状とテンソル量に関する作図が行われる。

(1) 基本データ

IFTYP,	I <u>STYP, S</u>	CALE, SCALED, NSUBUS, SUBUS, NSUBUD, SUBUD, LTP1,
PITCH	[1] (2I5, 2F	10.0, 2(I5, F10.0), I5, F10.0)
$1\sim 5$	IFTYP	FEM モデル形状の書き方を表す番号(default <sup>1</sup> =1)
		=1:すべての要素形状を書く。
		=2:モデルの外側の形状のみを書く。
		=3:FEM モデル形状は書かない。
		=4:特別に入力された仕様(後述)に従って書く。
6~10	ISTYP	テンソル量の書き方を表す番号(default <sup>1</sup> = 1)
		=1:x、y方向成分(法線方向成分)をx、y方向に、非対角項
		を x 軸と 45°の方向に矢印で書く。
		=2:主値をその方向に矢印で書く。
		=3:最大の非対角項をその方向に矢印で書く。
		=4:軸力図を書く((3)の入力が必ず必要)
		=5:せん断力図を書く((3)の入力が必ず必要)
		=6:モーメント図を書く((3)の入力が必ず必要)
11~20	SCALE	モデルの縮尺=図上で 1cm に対応するモデルの長さ。(default <sup>2</sup>
		=プログラムが適当な値を設定する。)
21~30	SCALET	テンソル量の縮尺=図上で 1cm に対応するテンソル量の値。
		(default <sup>2</sup> =プログラムが適当な値を設定する。)
31~35	NSUBUS	モデルに関する縮尺部の座標軸数値の小数以下桁数 <sup>[3.2][3.8]</sup> 。
		(default <sup>1</sup> =プログラムが適当な値を設定する。)
		(注)SCALE または SUBUS が 0 でなく NSUBUS=0 のとき、
		前に使った値でなく新しい図に適した値をデフォルト値
		として採用する。
36~45	SUBUS	モデルに関する縮尺軸の長さに対応するデータ量(default <sup>2</sup> =プ
		ログラムが適当に値を決める。)
		(注)SCALE が 0 でなく SUBUS=0 のとき、前に使った値でな
		く新しい図に適した値をデフォルト値として採用する。
46~50	NSUBUT	テンソルに関する縮尺部の座標軸数値の小数以下桁数[3.2][3.8]。
		(default <sup>1</sup> =プログラムが適当な値を設定する。)
		(注)SCALET または SUBUT が 0 でなく NSUBUT=0 のとき、
		前に使った値でなく新しい図に適した値をデフォルト値
		として採用する。

- 51~60 SUBUT テンソルに関する縮尺軸の長さに対応するデータ量 (default<sup>2</sup> = プログラムが適当に値を決める。)
  - (注) SCALET が0でなく SUBUT=0のとき、前に使った値で なく新しい図に適した値をデフォルト値として採用する。
- 61~65 LTP1 モデル形状を描く線の種類を表わす番号<sup>[3.4]</sup>。
- 66~75 PICH1 モデル形状を描く線のピッチ<sup>[3,4]</sup>。

#### (2) モデル形状の特殊な作図: IFTYP=4 の時のみ必要

与えられた節点を順番に結ぶことによって、モデルのうち必要な部分のみを作図する。

①作図する点の数

NPT (I5)

1~ 5 NPT 入力する節点番号の数。

**NPT**≠0: | **NPT** | 個の節点番号を読み込む。

NPT≤0:座標値を入力して、その座標を結ぶように作図する。

②節点番号:このカードは、NPT≠0のときのみ必要

|IPT(J), J=1, NPT | (16I5) 1 枚のカードに 16 データづつ、必要な数だけ入力。

IPT(J) 節点番号。入力された順番に節点位置へペンが動き、指定された図を書く。この際、番号(IPT(J))が正であれば、ペンダウンの状態で(すなわち、線を書きながら)ペンが移動する(ただし、最初の節点へはペンダウンの状態で移動)。一方、番号が負であれば、ペンアップの状態(すなわち、線は書かない)で、絶対値で指定された節点番号の位置へペンが移動する。

③座標値:このカードは、NPT≤0の時のみ必要

# NPT, NUNIT, ICOD, LTYP, PITCH (4I5.F10.0)

$1\sim 5$	NPT	点の数
6~10	NUNIT	データを読み込むファイル番号。5のとき、このカードの跡に
		続ける。
11~15	ICOD	原点の設定
		=1:用紙の左下隅

- - =2:FEM の原点
- 16~20 LTYP モデル形状を描く線の種類を表わす番号<sup>[3,4]</sup>。
- 21~30 PITCH モデル形状を描く線のピッチ<sup>[3.4]</sup>。

IPEN, X, Y (I5, 2F10.0) NPT 枚のカード

1~ 5 IPEN ペンの移動時のフラグ

=2: X、Y で入力した点までペンをおろして移動

=3:X、Yで入力した点までペンを上げて移動

(3) 2 節点要素の作図オプション

この節は、ISTYP が 4~6の間、すなわち、2 節点要素の軸力図、せん断応力図、モーメント図が指定されたとき必要である。そのほかの場合には必要がない。

INUMBR, IDEC	(2I5)

$1\sim 5$	INUMBR	数字を書くための指示
		=0:数字は書かない
		=1 : 数字を書く
6~10	IDEC	数字を書く場合の小数以下桁数

# オプション 33 テンソル量の重ね書き

以前の図の上にテンソル量に関する図が重ね書きされる。この節では1枚のコント ロールカードが必要である。

このオプションではテンソル図のみが作図され、枠や、タイトル、縮尺部等は作図されない。

ISTYP (I5)

# 6~10 ISTYP テンソル量の書き方を表す番号 (default<sup>1</sup> = 1)

- =1:x、y 方向成分(法線方向成分)をx、y 方向に、非対角項 をx 軸と 45°の方向に矢印で書く。
- =2:主値をその方向に矢印で書く。
- =3:最大の非対角項をその方向に矢印で書く。
- =4:軸力図を書く((3)の入力が必ず必要)
- =5: せん断力図を書く((3)の入力が必ず必要)
- =6:モーメント図を書く((3)の入力が必ず必要)

# オプション34 テンソル量のスカラー化、等高線、数値

テンソル量に演算を施し、スカラー量を得る。得られたスカラー量に対して、等高線を書いたり、数値を書いたりする。なお、この場合、作図されるデータはスカラー 量として扱われるので、縮尺部にあらかじめプログラムが用意した座標軸名は EXCESS P.P.であり、必要に応じてオプション3でこれを修正する必要がある。

(1) スカラー量の種類 (カード1枚)

## ITYP (I5)

- 1~5 ITYP スカラー量の求め方を示す番号。
   =1:最大の非対角項(最大せん断応力等)。
   =2:x断面のx方向成分(τ<sub>xx</sub>等)。
   =3:y断面のy方向成分(τ<sub>yy</sub>等)。
   =4:x断面のy方向成分(τ<sub>xy</sub>等)。
   =5:安全率の計算
- (2) 降伏条件の設定; ITYP=5 のときのみ必要

IELMG, IPRT (215)

- 1~ 5 IELMG 同じ降伏条件を持つ要素グループの数。
- 16~20 IPRT IPRT=1 のとき安全率をプリンターに印刷する。

以下、この項の終りまで、IELMG 組のデータが必要である。

## IS, IE, IYLD, INB (415)

- 1~ 5 IS 始めの要素番号。
- 6~10 IE
   終りの要素番号。要素 IS から IE までが同じ降伏条件を持っている。
- 11~15 IYLD 降伏条件の種類を表す番号。
  - =1 : Mohr-Coulomb
  - =2 : Mieses
  - =3 : Dracker-Prager
  - =4:電中研方式
  - =5 : Cam-clay

### 16~20 INB IYLD=1 のときのみ必要で、降伏条件の組数。

DUM(J), J=1, K (8F10.0)

DUM(J) 降伏条件によって決まるパラメータ。次の表を参照のこと。

IYLD	K	説明
		粘着力と内部摩擦角(度)を INB 組入力。INB 組の直線に対し最小の
		安全率を計算
		φτ
1	2×INB	l c
		$\neg \neg \neg \sigma$
		降伏条件: $\tau = c - \sigma \tan \phi$ (引張りが正の時の表現)
		安全率: $\ell/\tau_r$ 。 $\tau_r$ :モールの円の半径
		DUM(1)=k DUM(2)=v (ポアソン比)
2	2	降伏条件: $\sqrt{3\sigma_s} = k$ 安全率: $k/(\sqrt{3\sigma_s})$
	2	$\sigma_s = \sqrt{\frac{\sigma_x^2 + \sigma_y^2 + \sigma_z^2}{2} + \tau_{xy}^2},  \sigma_m = \nu \left(\sigma_x + \sigma_y\right)$
3	3	DUM(1)=粘着力 DUM(2)=内部摩擦角 DUM(3)=v(ポアソン比)
		降伏条件 $3\alpha\sigma_m + \sigma_s = K$
		$\alpha = \frac{2\sin\phi}{\sqrt{2}},  K = \frac{6c\cos\phi}{\sqrt{2}}$
		$\sqrt{3}(3-\sin\phi)$ $\sqrt{3}(3-\sin\phi)$
		安全率 $K/(3\alpha\sigma_m + \sigma_s)$
		$DUM(1)=$ せん断強度 $\tau_R$ $DUM(2)=引張り強度\sigma_t$
		$DUM(3)=K  (default^3 = 2.7)$
4	3	τ <sub>R</sub>
		-
		降伏条件 $\left(\left(\frac{\tau}{\tau_R}\right)^2 = 1 - \frac{\sigma}{\sigma_t}\right)$ 安全率 $\left(\frac{Kd_{min}}{\sigma_t - \tau_R}\right)$
		DUM(1)=m $DUM(2)=k$ $DUM(3)=v$
5	3	$\frac{\sqrt{2}\sigma_s}{m\sigma_r} = 1  (1  \sqrt{2}\sigma_s)$
		降仄 余 什 ( $\sigma_m e^{m \sigma_m} = k$ ) 女 主 挙 ( $k / \sigma_m e^{m \sigma_m}$ )

# (3) 等高線等の作業

これ以後の入力の方法はオプション 42 のコントロールカードと全く同じであるの で、以後はオプション 42 に従って、入力データを作成する。

# オプション 40 スカラー量の入力

通常は最初の1枚のカードの入力である。しかし、Option6 で特定のプログラムを 指定したときには、プログラムの種類により、(2)項以下の入力が必要となる。

#### (1) 標準データ

IPDTA, PMUL, IPT (15, F10.0, 15)

- 1~ 5 IPDTA スカラー量に符号に関するフラグ

   =0:スカラー量は各要素重心で定義されている。(データ数は NUMEL 個)
   =1:スカラー量は各節点で定義されている。(データ数は NUMNP 個)

   5~15 PMUL 重み係数。(default<sup>3</sup> = 1.0) 入力された値はこの値が掛け られた後、各種の作業に用いられる。
- 16~20 ITP ITP=1 であれば、入力した値の絶対値を以後の作業に用いる。

(注) データを入力するユニット番号に5 が指定されているときは、このカードの後 にスカラー量のデータをつける。

#### (2) TARA-3 のデータタイプの指定

この項の入力は、Option 6 で IFILTP=1 すなわち、TARA-3 を指定したときのみ必要 である。\_\_\_\_\_

# ITYP, JTYP (2I5)

- ITYP 読みとるデータの種類。これまでに読みとった位置から読み込みを始めるので、必要に応じて Option 70 で巻き戻す必要がある。
  - =1:盛り立て解析、盛り立て終了、および静的外力終了
  - =2:静的解析終了時の応力
  - =3:最大值
  - =4:地震後の静的状態
  - =5:地震後の複合状態
  - =6:地震後の圧密
- 6~10 JTYP スカラーとして読みとるデータ
  - =1: せん断応力
  - =2: せん断ひずみ
  - =3:過剰間隙水圧

(3) STADAS u-U のデータタイプの指定

この項の入力は、Option 6 で IFILTP=3 すなわち、STADAS u-U を指定したときのみ 必要である。

- ITYP (I5)
- 1~5 ITYP 読みとるデータの種類。これまでに読みとった位置から読み込みを始めるので、必要に応じて Option 70 で巻き戻す必要がある。
   1 開始まに
  - =1:間隙水圧

#### (4) FLIP データ読み込みの指示

この入力は、FLIP データの読み込みの場合にのみ必要である。

- ID, IDAT (215)
- 1~5 ID FLIP の出力の内どれを採用するかを表す番号(1≤ID≤7)。
   FLIP では、出力の各行は、通し番号-節点番号(または要素 番号)-データの順で並んでいる。この最後のデータの並びの ID 番目のデータをスカラーとして採用する。
- 5~10 IDAT IPDTA=0 (要素のデータとして与える)の時にのみ意味がある 変数で、スカラーを採用する要素の種類を指示する。
  - =0:全ての要素からデータを採用する
  - =1:2節点要素を除く要素からデータを採用する
  - =2:2節点要素のデータのみ採用する。

# オプション 41 スカラー量を加える。

以前に読込まれたスカラー量にここで読込んだ値を加え、以後の作業に用いる。

PMUL, IPT (F10.0, I5)

- 1~10 PMUL
   重み係数。
   (default<sup>3</sup> = 1.0)
   入力された値はこの値が掛け

   られた後、各種の作業に用いられる。
- 11~15 ITP ITP=1 であれば、入力した値の絶対値を以後の作業に用いる。

# オプション 42 スカラー量の等高線の作図

新しく作図用の枠が用意され、ここに FEM モデル形状とスカラー量に関する作図 (等高線と数値)が行われる。

スカラーの値が全要素について入力されていないとき(FLIP ではよく起こる)、 このオプションの実行前に、オプション 62 で作図する要素を指定しておく必要があ る。この指定がないと、データを読み込んでいない要素の情報も等高線に反映される 他、場合によっては、エラーで実行が出来なくなる可能性がある。

(1) 基本データ

#### IFTYP, SCALE, NSUBUS, SUBUS, ICTP, IVL, LTP1, PITCH

(I5, F10.0, I5, F10.0, 3I5, F10.0)

- 1~ 5 IFTYP FEM モデル形状の書き方を表す番号 (default<sup>1</sup> = 1)
   =1: すべての要素形状を書く。
  - =2:モデルの外側の形状のみを書く。
  - =3:FEM モデル形状は書かない。
  - =4:特別に入力された仕様(後述)に従って書く。
- 6~15 SCALE モデルの縮尺=図上での 1cm に対応するモデルの長さ。 (default<sup>2</sup>=プログラムが適当な値を設定する。)
- 16~20 NSUBUS モデルに関する縮尺部の座標軸数値の小数以下桁数<sup>[3.2][3.8]</sup>。 (default<sup>1</sup>=プログラムが適当な値を設定する。)
  - (注) SCALE または SUBUS が 0 でなく NSUBUS=0 であれば、 前に使った値でなく新しい図に適した値をデフォルト値 として採用する。
- - (注) SCALE が 0 でなく SUBUS=0 のとき、以前の値でなく、新しい図に適した値を採用する。
- 31~35 ICTP IPDTA=0(スカラーの値が要素重心で与えられているとき)に、 節点の値を計算する方法
  - =0:3.9節の方法1(z=ax+by+c+dxy)で計算する。
  - =1:3.9節の方法2(重み付平均)で計算する。
  - =2:3.9節の方法3(z=ax+by+c)で計算する。
  - =3:3.9節の方法4(供給する要素値の平均)
- 36~40 IVL IPDTA=0のとき、特に節点のスカラーの値を指定するためのフ ラグ。IPDTA=0のときには、特に境界近くの節点における値の 算出方法は外挿になるので、計算精度が悪いかも知れない。ま た、特定の節点については値を等高線作図時に値を指定したい

かも知れない。IVL>0 の時、合計 IVL 個の節点の値を後に(3) 節で与えることができる。

- 41~45 LTP1 モデル形状を描く線の種類を表わす番号<sup>[3.4]</sup>。
- 46~55 PICH1 モデル形状を描く線のピッチ<sup>[3,4]</sup>。

#### (2) モデル形状の特殊な作図; IFTYP=4 の時のみ必要

与えられた節点を順番に結ぶことによって、モデルのうち必要な部分のみを作図する。

# ①作図する点の数

NPT (I5)

- 1~ 5 NPT 入力する節点番号の数。
  - NPT≠0: | NPT | 個の節点番号を読み込む。 NPT≤0: 座標値を入力して、その座標を結ぶように作図する。

### ②節点番号:このカードは、NPT≠0のときのみ必要

IPT(J), J=1, NPT (1615) 1 枚のカードに 16 データづつ、必要な数だけ入力。
 IPT(J) 節点番号。入力された順番に節点位置へペンが動き、指定された図を書く。この際、番号(IPT(J))が正であれば、ペンダウンの状態で(すなわち、線を書きながら)ペンが移動する(ただし、最初の節点へはペンダウンの状態で移動)。一方、番号が負であれば、ペンアップの状態(すなわち、線は書かない)で、絶対値で指定された節点番号の位置へペンが移動する。

# ③座標値:このカードは、NPT≤0の時のみ必要

# NPT, NUNIT, ICOD, LTYP, PITCH (415.F10.0)

$1\sim 5$	NPT	点の数
6~10	NUNIT	データを読み込むファイル番号。5のとき、このカードの跡に
		続ける。

11~15 ICOD 原点の設定

- =1:用紙の左下隅
- =2:FEM の原点
- 16~20 LTYP モデル形状を描く線の種類を表わす番号<sup>[3.4]</sup>。
- 21~30 PITCH モデル形状を描く線のピッチ<sup>[3.4]</sup>。

IPEN, X, Y (I5, 2F10.0) NPT 枚のカード

- 1~ 5 IPEN ペンの移動時のフラグ
   =2:X、Yで入力した点までペンをおろして移動
  - =3: X、Y で入力した点までペンを上げて移動

#### (3) 節点におけるスカラー値の指定; IPDTA=0 で IVL>0 のときのみ必要。

| IND, VAL | (I5, F10.0) IVL 枚のカードを続ける。

1~ 5 IND 節点番号

6~10 VAL 節点 IND のスカラーの値。ただし IND が 0 であればスカラー 値の修正は行わない。

#### (4) 等高線のブロック数と基本量の指定

## NCNT, IVAL, IDEC, IMK, ILN, PMUL (515, F10.0)

- 1~ 5 NCNT 等高線のブロック数の数。等高線は各ブロック毎に線の種類や 数値の付け方が変えられる。NCNT=0とすると等高線は書かな い(この場合、スカラー量の数値のみを書く)。NCNT<0は要 素を塗りつぶすことによって等高線の代わりをする作図法を 意味する。NCNT<0の場合は、(7)項の入力に移行する。
- 6~10 IVAL スカラー量を指定した位置を表すシンボルマークと、その数値 の書き方を指示する番号。
  - =-3:全節点または全要素の数値のみを書く。IPDTA=0 であれ ば数値は要素重心位置が数字の中心になるように、また、 IPDTA=1 であれば、数値は節点の右上に書かれる。
  - =-2:数値を指定したすべての節点または要素重心位置に IMK で指定したシンボルマークのみを書く。
  - =-1:数値を指定したすべての節点または要素重心位置に IMK で指定したシンボルマークと数値を書く。
  - =0:シンボルマークも数値も書かない。
  - >0: IVAL 個の指定された節点または要素重心位置にのみ数値 を書く。 (節点番号は(4)項で指定する。)
- 11~15 IDEC 数値を書く場合の小数以下の桁数<sup>[3.6]</sup>。
- 16~20 IMK シンボルマークの番号<sup>[3.7]</sup>
- 21~25 ILN 等高線の書き方を指示するフラグ。
  - 0: 滑らかな線で書く。
  - 1:計算した点を直線で結んで書く。
- 26~35 PMUL
   等高線に書かれる数値に掛ける乗数。(default<sup>3</sup> = 1.0)。(4)

   項で指定する等高線の数値 CONT に PMUL を掛けた数値を等

   高線に書く。

#### (5) 等高線数値の指定

この項ではNCNT 組のデータが必要である。各組の最初のカードは同じブロックに 属する等高線の数等を入力し、次に等高線を書く数値を入力する。 ICONT, LINE, PITCH, ALINE, INBR, NDEC, SIZE (215, 2F10.0, 215, F10.0)

- ICONT 等高線の数。ただし、ICONT≤30のこと。ICONT=-1とすると、
   等間隔の等高線を指示することになる。
- 6~10 LINE 等高線を書く線の種類。<sup>[3.4]</sup>
- 11~20 PITCH 等高線を書く線のピッチ。<sup>[3.4]</sup>
- 21~30 ALINE 等高線の間に書く数字と数字の間隔(cm)。ALINE=0 であれ ば、数字は書かない。
- 31~35 INBR 等高線が開曲線のとき(すなわち、等高線の端が等高線の作図 領域の境界にあるとき)、この等高線の端につける数値に関す るフラグ。
  - =0:数値は書かない。
  - =1:両端に数値を書く。
  - =2: 始点のみに数値を書く。
  - =3:終点のみに数値を書く。
- 36~40 NDEC 等高線に使う数値の小数以下桁数<sup>[3.6]</sup>。

41~50 SIZE 等高線に書く数字の高さ。 (default<sup>3</sup> = SIZEN/2)

CONT(I), I=1, ICONT (8F10.0) ICONT>0のときのみこのカードが必要。

CONT(I) 等高線を書く数値。1 枚のカードに 8 データづつ、必要枚数の カード。

CMIN, CMAX, CINT (3F10.0) ICONT=-1 のときのみこのカードが必要。

- 1~10 CMIN 等高線を書く数値の最小値。
- 11~20 CMAX 等高線を書く数値の最大値。
- 21~30 CINT 等高線を書く数値の間隔。

(注)等高線は一度に 30 本までとする。30 本を越えるときは、CMIN から始まり、 値の小さいほうの 30 本のみを書く。

#### (6) 数値を書く節点、要素の指定; IVAL>0のときのみ必要。

1枚のカードに16点づつ、必要枚数のカードを用意する。

### IPT(I), I=1, IVAL (16I5)

IPT(I) 数値を書く節点、要素の番号。

#### (7)塗りつぶしの指定

この項の入力は NCNT<0 を入力したときにのみ必要である。この場合、-NCNT は 色を塗り分ける境界の数(<30)を意味する。 (CONT(I), I=1, -NCNT) (8F10.0)

CONT(I) 境界となる値。CONT は昇順または降順に並んでいる必要がある。CONT(1)からはずれると白、CONT(NCNT)からはずれると 黒で要素を塗りつぶし、その間はレベルに応じた灰色となる。

# オプション43 スカラー量の重ね書き。

以前の図の上のスカラー量に関する図が重ね書きされる。

このオプションではスカラー図のみが作図され、枠や、タイトル、縮尺部等は作図されない。

#### (1) 節点におけるスカラー値の指定: IPDTA=0 で IVL>0 のときのみ必要。

この項の入力は、オプション 42 の(3) 項と同じであるので、これに従うこと。た だし、IVL の値は前回オプション 42 を用いたときの値なので、注意が必要である。

#### (2) 等高線のブロック数と基本量の指定

この項の入力は、オプション42の(4)項と同じであるので、これに従うこと。

#### (3) 等高線数値の指定

この項の入力は、オプション42の(5)項と同じであるので、これに従うこと。

## (4) 数値を書く節点、要素の指定; IVAL>0のときのみ必要

この項の入力は、オプション42の(6)項と同じであるので、これに従うこと。

# オプション 44 スカラーのベクトル化

このオプションはオプション9と関連し、スカラー量をモデル平面と直交する方向 へのベクトルとして表示したいときに用いる。



図のような絵を書きたいとする。ここで x-y 平面はモデル平面、z 軸方向がスカラ ー量が書かれる方向である。まず、オプション9 で節点座標を座標変換することによ って、鳥観図で表した図に対応する節点座標を得ることができる。次にz 軸が向いて いる方向をこのオプションで指示すると、プログラムはスカラー量をこの方向を向か うベクトルと考え、その正射影を計算し、これをベクトルとして扱う。従って、この オプションにより変換した後ベクトル量に関するオプションを用いることで必要な 絵を書くことができる。なお、このような事ができるのはスカラー量が節点位置で与 えられているときのみで、要素重心で与えられているときにはこのオプションを用い るとエラーになる。

ANGLE, FACT (2F10.0)

$1 \sim 10$	ANGLE	z 軸が水平軸となす	'角度(度)。
11~20	FACT	長さの修正係数。	$(default^3 = 1.0)$

スカラー量 *s* に対しベクトルは(*s*×FACT×cos(ANGLE)、*s*×FACT×sin(ANGLE))となる。 このオプションを用いると以前にプログラムが記憶していた、SCALED、SUBUD、 NSUBUD の 3 つの変数の値は失われるので、デフォルト値により前と同じ縮尺の図 を書くことはできなくなる(すなわち、新しく自動スケールが行われる)。

# オプション 50 図中に線分とコメントを書く。

このオプションでは、図中にコメント、または、各種の線分とコメントを書くこと が出来る。以下の例はいずれもこのオプションを使って書いたものである。なお、こ れらの図は以前に書いた図の上に重ねがきされる。この節では2組のカードが必要で ある。最初に基本データを指示し、次に必要なコメントの行の数だけのカードを入力 する。

> ----- Case-1 ---- Case-2 ----- Geo.Scale

(注)図の黒丸は、(X,Y)で座標を指定する位置。

N, AL,	<u>X, Y, DX, D</u>	Y, SIZE, ANGLE (I5, F5.0, 6F10.0)							
$1\sim 5$	Ν	絶対値はコメントの行数、符号は座標の与え方を示す。							
		N が正であれば、X、Y で与える座標は、作図枠の左下隅か							
		らの距離(cm)、N が負であれば、X、Y で与える座標は FEM							
		モデルと同じ座標系による位置を意味する。							
6~10	AL	コメントの前に書く線分の長さ(cm)。AL≤0 であれば線分は							
		書かない。AL>0のとき、X、Y で与える座標は、最初の線分							
		の始点の位置、AL≤Oのとき、X、Y で与える座標は最初の文							
		字の左下隅に対応する。AL=2.5 は通常見栄えのよい長さであ							
		る。							
11~20	Х	最初のコメントの始点の x 座標(上記の説明参照)							
21~30	Y	最初のコメントの始点の y 座標(上記の説明参照)							
31~40	DX	2 行目以後のコメント行の始点の x 増分(cm)							
41~50	DY	2 行目以後のコメント行の始点の y 増分(cm)。							
		1 行目の始点の位置を(x <sub>0</sub> 、y <sub>0</sub> )とすると、I 番目の始点の位							
		置は、(x <sub>0</sub> +( <i>I</i> -1)×DX、y <sub>0</sub> +( <i>I</i> -1)×DY)となる。							
		DX=DY=0 が与えられたとき、DY は-2×SIZE に置換えられる。							
		この値は通常見栄えのよい行間隔を与える。							
51~60	SIZE	コメントを書く文字の高さ(cm)。 (default <sup>3</sup> = SIZEN)							
61~70	ANGLE	コメントを書く方向の水平軸からの角度(度)。							
I IN P	TH NC (15	F50 A64) $ N $ 枚のカード							

LIN, PIH,	NC (15, F5.0, A04)	$ \mathbf{N} $ $\mathcal{N}$ $\mathcal{N}$
$1\sim 5$ LM	N 線分を種類	を示す番号 <sup>[3.4]</sup> 。
6~10 PT	H 線分のピック	チ <sup>[3.4]</sup> 。
11~74 NC	こ コメント (6	64 文字以内)[3.5]。

# オプション 51 境界条件等を表すシンボルを書く。

この項の図は以前に書いた図に重ねがきされる。

(1) 基本データ

IT, NDATA, IT1, IT2, ANGLE, A1, A2, A3, A4, A5 (415, 6F10.0)

 
 1~5 IT
 シンボルの種類を表す番号。(下図で黒丸は座標を与える位置 で、作図されない)



6~10 NDATA シンボルの個数

11~15 IT1 シンボルを書く位置の与え方を指示するフラグ。

=0:節点番号で与える。

=1:座標値で与える。

16~20 IT2 座標値の与え方に関するフラグ(IT1=1の時のみ必要)。

=0:FEM モデルと同じ座標系による位置

=1:作図枠の左下隅からの距離(cm)

- 21~30 ANGLE シンボルを書く角度(度)。ANGLE=0 であれば、シンボルは 上の図に示されているように書かれる。ANGLE が正の値であ ればシンボルは図の黒丸の位置を回転中心として半時計回り に ANGLE 度回転して書かれる。(IPT=1 のときは使われない)
- 31~80 A1、A2、A3、A4、A5 シンボルの大きさを決めるパラメータ (cm また は度)。次頁参照
- A6, A7 (2F10.0) このカードは IPT=15~16 の時のみ必要。

1~20 A6, A7 シンボルの大きさを決めるパラメータ(cm または度)。次頁 参照

(2) 節点番号; IT1=0 で、NDATA>0 の時のみ必要

1枚のカードに16個のデータを必要なカード数だけ用意する。

IPT(J), J=1, NDATA (1615)

# IPT(J) 節点番号。

# (3) シンボルの位置を指示する座標; IT1=1 で、NDATA>0 の時のみ必要。NDATA枚のカードが必要。

X, Y (2F10.0)

1~20 X,Y作図枠左下隅からの座標値(IT2=1)、またはモデルと同じ座<br/>標系による位置(IT2=0)

IT	1	2	3	4	5-6	7-8	9-12	13	14	15	16	17
A1	0.3	0.3	0.3	0.3	0.3	0.3	0.5	0.2	0.3	0.3	0.2	
A2		0.1		0.1	1.0	1.0	0.2	0.6	0.6	0.6	0.6	
A3		0.5		0.5	0.2	0.2	45.	0.1	1.0	1.0	0.1	
A4						0.0	0.1	1.0	1.0	1.0	1.0	1.0
A5						0.0			1.0	1.0	1.0	0.3
A6										2×A3	2×A3	
A7										90.	135.	

シンボルの大きさを決める量のデフォルト値











A1, A2, A3 in deg. Axis is not drawn when angle=999.
### オプション 52 線分、円弧等のシンボルと数値の作図。

この項の図は以前に書いた図に重ねがきされる。

(1) 基本データ

NCD, I	TYP, ICTYF	P, LIN, PICH, SNBR, SMK, SL1, SL2, DIS (415, 6F10.0)
$1\sim 5$	NCD	線分または円弧の個数。
6~10	ITYP	シンボルの種類を表すフラグ。
		=1:線分を始点と終点の位置を与えて書く。
		=2:線分を始点の位置と長さ、角度を与えて書く。
		=3:円弧を書く。
11~15	ICTYP	座標の与え方を指示するフラグ
		=0:FEM モデルと同じ座標系による位置
		=1:作図枠の左下隅からの距離(cm)
16~20	LIN	線の種類を表す番号 <sup>[3.4]</sup> 。
21~30	PICH	線のピッチ <sup>[3.4]</sup> 。
31~40	SNBR	数値または文字の大きさ(cm) (default <sup>3</sup> = SIZEN)
41~50	SMK	材端に書く黒丸の直径(cm) (default <sup>3</sup> =0.15) (2)、(3)
		項を参照。
		SMK
		Ĵ SL1

矢印を書く向き

- 51~60 SL1線分や円弧の左側に書かれる、直角方向を向く線分の長さ。<br/>(2)、(3)項参照。 (default<sup>1</sup> = 0.5cm)
- 61~70 SL2線分や円弧の右側に書かれる、直角方向を向く線分の長さ。<br/>(2)、(3)項参照。 (default<sup>1</sup>=0.5cm)
- 71~80 DIS
   数値や文字を線の横に書くときの線と数値の間の距離。

   (default<sup>3</sup> = SNBR/2)
- (2) 線分の作図; ITYP=1, 2 の時のみ必要。NCD 枚のカード

# ISEG, ISYM, INBR, NDEC, XS, YS, XE, YE, FLT (415, 5F10.0)

- 1~ 5 ISEG 線分の種類と、線の端のシンボルマークを指示する番号。2 桁の整数で指示する。10 位と1 位は別の意味を持っている。
   1 位の数字の意味。
   =0:線分は書かない。
  - =1:線分のみを書く。
  - =2:線分と矢印を書く。

=3:線分と内側を向く矢印を書く。

=4:線分の両端に小さい黒丸を書く(直径 SMK) 10位の数字の意味。

\_\_\_\_

=0:1位に示したシンボルのみ。



- 線分の端に書くシンボルに関する指示  $6\sim 10$  ISYM
  - =0:両端に書く
  - =1: 始点のみに書く。
  - =2:終点のみに書く。 数字に関するフラグ

#### 11~15 INBR

- =0:数字は書かない。
- =1:数字を線分の右側に書く。
- =2: 数字を線分の左側に書く。
- =3:数字を線分の中央に書く。



#### INBR=1

#### INBR=2 INBR=3

- =4:数字を線分の中央に書く。ただし、数字の長さが線分の長 さより長いときは、数字を線分の右側に書く。
- =5: 数字を線分の中央に書く。ただし、数字の長さが線分の長 さより長いときは、数字を線分の左側に書く。
- =6:文字を線分の右側に書く。
- =7:文字を線分の左側に書く。
- **=8**:文字を線分の中央に書く。
- =9:文字を線分の中央に書く。ただし、文字の長さが線分の長 さより長いときは、文字を線分の右側に書く。
- =10:文字を線分の中央に書く。ただし、文字の長さが線分の 長さより長いときは、文字を線分の左側に書く。
- 数字の小数以下桁数<sup>[3.6]</sup> (default<sup>1</sup> = -1)、または文字数。 (INBR 16~20 NDEC による)
- 始点のx座標。ICTYPの値により単位系は変る。 21~30 XS
- 始点の y 座標。ICTYP の値により単位系は変る。 31~40 YS

41∼50 XE ן	
51~60 YE	ITYP=1の時、終点の座標(ICTYPの値により単位系は異なる)。
	一方、ITYP=2のとき、XE は線分の長さ(cm)、YE は線分の
	水平軸からの角度(度)。
61~70 FLT	数字(6>INBR>0のとき書かれる)。
CHR (A80)	

1~80 CHR 作図される文字(INBR>5 のとき)。最初から NDEC 文字が書 かれる。

# (3) 円弧の作図; ITYP=3 の時のみ必要。NCD 組のカード

# ISEG, ISYM, INBR, NDEC, XS, YS, RAD, AS, AE, FLT (415, 6F10.0)

$1\sim 5$	ISEG	円弧の種	類と、線の端	ものシンボルマ-	-クを指示す	トる番号。2桁		
		の整数で	指示する。10	)位と1位は別の	の意味を持・	っている。		
		1位の数字の意味。						
		=0:円	=0:円弧は書かない。					
		=1:円	弧のみを書く	0				
		=2:円	弧と矢印を書	ŧ<.₀				
		=3:円	弧と内側を向	」く矢印を書く。				
		=4:円	弧の両端に小	いまれを書く	く(直径 S	MK)		
		10 位の数	字の意味。					
		=0 · 1	位に示したシ	ンボルのみ				
		・ =1・ さ	らに線に直角	か線をつける	(長さけ	SL1_SL2)		
		•		<b>0</b>	0	5E1, 5E2)		
		0	1	2	3	4		
				V	$\stackrel{1}{\scriptstyle \land}$	•		
		10	11	12	13	14		
				K	X			
6~10	ISYM	円弧の端	に書くシンボ	ルに関する指わ	л л			
		=0:両端	に書く					
		=1:始点	のみに書く。					
		=2:終点	のみに書く。					
11~15	INBR	数字に関	するフラグ					
		=0:数字	は書かない。					
		=1:数字	を円弧の外側	川に、水平に書く	∧ ₀			
		=2:数字	を円弧の内側	川に、水平に書く	∧ ₀			

=3:数字を円弧の中央に、円の中心を向く方向に書く。
=4:数字を円弧の外側に、円の中心を向く方向に書く。
=5:数字を円弧の内側に、円の中心を向く方向に書く。
=6:文字を円弧の外側に、水平に書く。
=7:文字を円弧の内側に、水平に書く。
=8:文字を円弧の中央に、円の中心を向く方向に書く。
=9:文字を円弧の外側に、円の中心を向く方向に書く。
=10:文字を円弧の内側に、円の中心を向く方向に書く。



16~20 NDEC 数字の小数以下桁数<sup>[3.6]</sup> (default<sup>1</sup> = -1)、または文字数。(INBR による)

- 21~30 XS
   31~40 YS
   日弧の中心の座標。ICTYP の値により単位系は変る。

   31~40 YS
   円弧の中心の座標。ICTYP の値により単位系は変る。

   41~50 RAD
   円弧の半径(cm)。

   51~60 AS
   円弧の始点の角度(水平軸から、時計回りが正)。

   61~70 AE
   円弧の終点の角度(水平軸から、時計回りが正)。

   61~70 FLT
   数字(6>INBR>0 のとき書かれる)。
- CHR (A80)
- $1 \sim 80$  CHR
- 作図される文字(INBR>5 のとき)。最初から NDEC 文字が書 かれる。

# オプション 53 シンボルマークとコメントを書く。

N, ICT	YP, SIZE, SI	IZEM, DIST (215, 3F10.0)
$1\sim 5$	Ν	コメントの行数
6~10	ICTYP	座標の与え方を指示するフラグ
		=0:FEMモデルと同じ座標系による位置
		=1:作図枠の左下隅からの距離 (cm)
11~20	SIZE	文字の大きさ(cm) (default <sup>3</sup> = SIZEN)
21~30	SIZEM	シンボルマークの大きさ(cm) (default <sup>3</sup> = SIZEN/2)
31~40	DIST	シンボルマークの中心とコメントとの距離(cm)
IMK, I	POS, X, Y, A	ANGLE, COM (215, 3F10.0, A40) N 枚のカード
$1\sim 5$	IMK	マークの種類を表わす番号 <sup>[3.7]</sup>
6~10	IPOS	コメントを書く位置のシンボルマーク中心の位置に関する関
		係を示す番号。
		=0:右側 IPOS=1
		=1:上側 IPOS=2 () IPOS=0
		=2:左側 IPOS=3
		=3:下側
		(注)これらは ANGLE で指定された局所座標系に対しての位
	_	置。
11~20	X }	
21~30	ΥJ	シンボルマーク中心の座標(単位系はICTYPにより異なる。)

- 31~40 ANGLE シンボルマークとコメントの水平軸に対する角度(度)。
- 41~80 COM 40文字以内のコメント。このうち最初から、ブランクでない最 後の文字までが書かれる。

# オプション 54 座標軸の作図

図中の任意の位置に座標軸を書く。2枚のカードが必要である。

IAXT, I	ICOD, INBT	T, NDEC, XCOD, YCOD, XCOR, SVAL, EVAL (415, 5F10.0)					
$1\sim 5$	IAX	座標軸の縮尺の種類を表す番号。					
		=0:FEM モデルと同じ縮尺。					
		=1:ベクトル量と同じ縮尺。					
		=2:テンソル量と同じ縮尺。					
		=3:任意の縮尺(SLとして次のカードで入力)。					
6~10	ICOD	後に XCOD, YCOD で入力される値の座標系を示すフラグ。					
		=0:FEM モデルと同じ座標系による位置					
		=1:作図枠の左下隅からの距離(cm)					
11~15	INBT	座標軸につける目盛りと数値に関するフラグ。3桁の整数で入					
		カし、各数字がそれぞれ意味を持つ。					
		1 位の数値					
		=0:目盛りは軸の反時計方向に書かれる。					
		=1:目盛りは軸の時計方向に書かれる。					
		=2:目盛りは軸の両方に書かれる。					
		10 位の数値					
		=0:数字は軸の反時計方向に書かれる。					
		=1:数字は軸の時計方向に書かれる。					
		100 位の数字					
		=0:数字は軸と平行に書かれる。					
		=1:数字は軸と直交して書かれる。					
16~20	NDEC	座標軸につける数値の小数以下桁数 <sup>[3.6]</sup> 。					
21~30	XCOD ر						
31~40	YCOD ∫	座標軸の値 XCOR に対応する位置の座標(ICOD の値により単					
		位系は変わる)。座標軸は軸またはその延長がここを通るよう					
		に書かれる。					
41~50	XCOR	(XCOD, YCOD)に対応する座標軸位置の値。 (必ずしも SVAL					
		と EVAL との間にある必要はない。)					
51~60	SVAL ر						
61~70	EVAL 5	座標軸の始点と終点の座標の値。					
		(注) SVAL≤EVAL の必要はない。ある設定値に対して同じ座					
		標軸を数字の上下のみを逆転させて書きたいときには、					
		SVAL と EVAL を入れ替え、さらに、ANGAX = ANGAX +					
		180 とすればよい。					

ANGAX, SLEN, SNLEN, SL (4F10.0)

- 1~10 ANGAX 座標軸の SVAL から EVAL に向かう方向と、水平軸のなす角度 (度)。
- 11~20 SLEN 座標軸の目盛り間隔に対応するデータ量。
- 21~30 SNLEN 座標軸の数値をつける間隔に対応するデータ量。SNLEN/SLEN は正の整数でなければならない。
- 31~40 SL 座標軸の縮尺(図上で1cmに対応するデータ量)。IAXT=3の 時のみ必要。

### オプション 55 領域の塗りつぶし

斜線またはシンボルマークによる水玉模様で、指定された領域を塗りつぶす。領域 は多角形で与える。

(1) 基本データ

N, ITYP, IFTP, IFM, LIN1, PICH1, ANGLE, DSTNCE, IMK, SIZE, LIN2, PICH2							
(5I5, 3I	(5I5, 3F5.0, 2(I5, F5.0))						
$1\sim 5$	Ν	多角形の頂点の数 (ITYP=1,2,3) または要素の数 (ITYP=4,5)					
6~10	ITYP	頂点の座標の与え方を指示するフラグ					
		=1:節点番号で与える。					
		=2:座標値で与える。(作図枠の左下隅からの距離)					
		=3:座標値で与える。(FEM モデルと同じ座標系による位置)					
		=4:指定した要素を塗りつぶす					
		=5:指定した要素の変形後の形状を塗りつぶす。(この場合に					
		は、オプション 22 か、オプション 23 の作業後に用いるこ					
		と。最後に作図したベクトル量の対し作業が行われる。)					
11~15	IFTP	塗りつぶしの種類を指示するフラグ					
		=±1:斜線					
		=±2:水玉模様					
		=±3:水玉模様					





0



- (注) 凸角形には正の値を用いる。凹角形のとき負の値とする。 正の値にしたほうが計算時間が早い。凹角形に対しても正 の値を使ってもよいが、書こうとする線分が凹部の頂点を 通るとき、線分を多角形の外部に書くことがある。負の値 とするとこんなことはない。もちろん凸角形に対して負の 値を用いることも可能である。
- (注) 斜線は水平軸と ANGLE 度の傾きで DSTNCE づつ開けて 書かれる。水玉模様のときは斜線が引かれるのと同じ線状 で DSTNCE おきに IMK で指示されたシンボルマークを書 く。なお、IFTP=±3のとき、(仮想の)線の間の距離は  $\sqrt{3}/2 \times DSTNCE$ とし、マーク間が等間隔となるようにして いる。

- 16~20 IFM 多角形の枠を書くためのフラグで、IFM=1 であれば枠を書く。
- 21~25 LIN1 斜線に用いる線の種類<sup>[3.4]</sup>
- 26~30 PICH1 斜線に用いる線のピッチ<sup>[3.4]</sup>
- 31~35 ANGLE 斜線、マークの書かれる線の水平軸からの傾き(度)。
- 36~40 DSTNCE 斜線、マークの書かれる線の間隔、またはマーク間の距離(cm)。 (default<sup>3</sup> = SIZEN/2)
- 41~45 IMK 水玉模様のマークの種類<sup>[3.7]</sup>
- 46~50 SIZE 水玉模様のマークの大きさ (default<sup>3</sup> = SIZEN/4)
- 51~55 LIN2 多角形の枠に用いる線の種類<sup>[3.4]</sup>
- 56~60 PICH2 多角形の枠に用いる線のピッチ<sup>[3,4]</sup>

#### (2) 節点番号; ITYP=1 のときのみ必要

| IPT(I), I=1, N | (16I5) カード1 枚に 16 データづつ、必要数だけ入力。

IPT(I) 節点番号。多角形を構成するように順番に入力する。始点と終 点の節点番号は同じであるので、どちらか一方のみを入力する。

#### (3) 節点座標; ITYP=2, 3 のとき必要

N 枚のカードが必要である。始点と終点の座標は同じであるので、どちらか一方の みを入力する。

### X, Y (2F10.0)

1~20 X, Y 座標値。座標系は ITYP による。 ITYP=2 のときは cm で入力。

#### (4) 変位の縮尺; ITYP=5 の時のみ必要

SCALED (F10.0)

1~10 SCALED 変位の縮尺。(default=前回の値を使う)

#### (5) 要素番号; ITYP=4, 5 の時必要

1枚のカードに16個のデータ(要素番号)を必要なカード数だけ用意する。

IPT(J), J=1, NDATA (1615)

IPT(J) 要素番号。

# オプション 56 点列を結ぶ線

このオプションでは、与えられた点列を結ぶ線を書く。

## (1) 基本データ

N, ICOD (2I5)	
$1\sim 5$ N	点列のブロックの数。
6~10 ICOD	座標値の与え方。
	=0:FEM モデルと同じ座標

=1:作図領域左下隅からの距離(cm)

### (2) 点列の入力

この項のデータはN回繰り返す。

NPNT,	LIN, PITCH	I, MK, SIZE, FMT (215, F10.0, I5, F10.0, A20)
$1\sim 5$	NPNT	点列を構成する点の数。(≤100)
6~10	LIN	線の種類を表す番号。 <sup>[3.4]</sup>
11~20	PITCH	線のピッチ。 <sup>[3.4]</sup>
21~25	MK	点の位置につけるマークの種類を表す番号 <sup>[3.7]</sup> 。
36~45	SIZE	マークの大きさ(cm)。
46~65	FMT	点列の座標を読むための FORMAT。

X(I), Y(I), I=1, NPNT FMT

X(I), Y(I) 点列の座標

# オプション 57 対数座標軸の作図

図中の任意の位置に座標軸を書く。3枚のカードが必要である。

COD 後に XCOD, YCOD で入力	」される値の座標系を示すフラグ。
=0:FEM モデルと同じ座	標系による位置
=1:作図枠の左下隅からの	の距離(cm)
NBT 座標軸につける目盛りと教	数値に関するフラグ。3桁の整数で入
力し、各数字がそれぞれ。	意味を持つ。
1位の数値	
=0:目盛りは軸の反時	計方向に書かれる。
=1:目盛りは軸の時計	方向に書かれる。
=2:目盛りは軸の両方に	に書かれる。
10位の数値	
=0:数字は軸の反時計	方向に書かれる。
=1:数字は軸の時計方	向に書かれる。
100 位の数字	
=0:数字は軸と平行に	書かれる。
=1:数字は軸と直交し	て書かれる。
IFG 目盛りに関するフラグ	
=0:桁位置と2~9の全て	「を書く
=1:桁の位置にのみ書く	
=2:桁位置と2、5のみ	
=3:桁位置と2、3、5、7	を書く
IBR1 桁位置の数字の書き方に	関するフラグ
=-2:数子は書かない。	
=-1:実際の数字をそのま	ま書く
=0:10のべきで書く	米テートはいりに、キテキイ
	数で、これ以外はべきで書く こと、エッはまたにいう。 2 の米中バ
IBR2 桁の間の数値に関するノン	フク。止の値であれは2~9の数子か、
負でめれは美除の数子か ・  ・  ・  ・  ・  ・  ・  ・  ・  ・  ・  ・  ・	青フーオレる。
=1:2とうを書く	
=2:2,3,3,7 を香く	
$-3 \cdot 2 \sim 3 \circ 0$ 王印を音く ECS 長い日成りに思えてう。	ガ
ITUS	/
<ul> <li>1位の数値</li> <li>=0:目盛りは軸の反時計</li> <li>=1:目盛りは軸の両方(</li> <li>10位の数値</li> <li>=0:数字は軸の反時計</li> <li>=1:数字は軸の反時計</li> <li>=1:数字は軸と平行に</li> <li>=1:数字は軸と正交し</li> <li>目盛りに関するフラグ</li> <li>=0:桁位置と2~9の全て</li> <li>=1:桁の位置にのみ書く</li> <li>=2:桁位置と2、5のみ</li> <li>=3:桁位置と2、5のみ</li> <li>=3:桁位置と2、3、5、7</li> <li>// おんご置の数字をそのま</li> <li>=0:10のべきで書く</li> <li>&gt;0:10<sup>1-NBR1</sup>~10<sup>NBR1</sup>は実</li> <li>// BR2</li> <li>桁の間の数値に関するフラ</li> <li>=0:書かない</li> <li>=1:2と5を書く</li> <li>=2:2:2,3,5,7を書く</li> <li>=3:2~9の全部を書く</li> <li>(FGS</li> <li>長い目盛りに関するフラ:</li> <li>=0:書かない</li> </ul>	計方向に書かれる。 方向に書かれる。 た書かれる。 向に書かれる。 すかれる。 て書かれる。 て書かれる。 て書かれる。 てまかれる。 てまする てまな するフラグ ま書く 数で、これ以外はべきで書く ラグ。正の値であれば2~9の数字が 書かれる。

=-1:桁位置

=-2:数字を書いた位置

- =-3:目盛りを書いた位置
- >0:後で読み込む
- 31~35 NBR 通常は0とする。0で無い数字を入れておくと、座標軸数字は 前の設定に関わらず書かない。このフラグは、たとえば数字は 書きたくないが数字位置に相当する位置に長い目盛りを入れ たいときに有効である。

XCOD, YCOD, XCOR, XSVAL, XEVAL (5F10.0)

1~10 XCOD ]

- 11~20 YCOD J 座標軸の値 XCOR に対応する位置の座標(ICOD の値により単 位系は変わる)。座標軸は軸またはその延長がここを通るよう に書かれる。
- 21~30 XCOR(XCOD, YCOD)に対応する座標軸位置の値。(必ずしも SVAL<br/>と EVAL との間にある必要はない。)
- 21~40 XSVAL ]
- 41~50 XEVAL 」 座標軸の始点と終点の座標の値。
  - (注) SVAL≤EVALの必要はない。ある設定値に対して同じ座 標軸を数字の上下のみを逆転させて書きたいときには、
     SVALとEVALを入れ替え、さらに、ANGAX = ANGAX + 180とすればよい。

ANGAX, SMULT, SPS (4F10.0)

- 1~10 ANGAX 座標軸の SVAL から EVAL に向かう方向と、水平軸のなす角度 (度)。
- 11~20 SMULT 桁位置の目盛り長さを、普通の位置の SMULT 倍する。
- 21~30 SPS 軸と数字の間の距離の文字高さに対する比

(2) 数字の場所

NFGS が正の時のみ必要で、長い目盛りを入れる場所を指定する。

### AVAL(8) (8F10.0)

1~80 AVAL 長い目盛りを書く座標軸の数値

### オプション 60 拡大作図。

このオプションで領域を指定すると、以後の作図では、この領域の内部のみが作図 対象となる。これに伴い、自動スケール等でも、この領域を作図するのに適当な縮尺 が決められるようになる。

### IBL, XMIN, XMAX, YMIN, YMAX (I5, 4F10.0)

- 1~ 5 IBL 拡大機能の使用を指示するフラグ。
   =0:拡大機能は使わない。以前に使っていたのであれば、以後 はその機能を取り消す。
   =1:拡大機能を使う。以下の入力はこのときのみ必要。
   6~15 XMIN 16~25 XMAX 拡大領域のx座標の最小値と最大値。(データの次元)
   26~35 YMIN 36~45 YMAX 拡大領域のy座標の最小値と最大値。(データの次元)
- (注 1) プログラムが記憶している 5 つの変数(XORI, YORI, SUBUS, NSUBUS, SCALE)の値はこの機能が用いられると変換される。これは、取り出された 領域を図中に描く時に図の見映えがよいように変換されるわけである。IBL=0 を用いてこの機能の解除を行なうと、これらの値は元の値に戻される。従っ て、XORI, YORI を指定するときは、このオプションの後に続ける。
- (注2)作図時には、FEM モデルの節点位置または要素重心位置がここで指定した領域に入っているか否かで、書くか書かないかの判断をする。要素の形状を表す線であれば、その両端の節点の両方がこの範囲に入っていればその線分は書かれるが、もし一方でもこの領域の外にあればその線分は書かれない。また、要素番号やテンソルの作図であれば、その要素の重心がこの領域内にあるときだけ作図される。従って、ここで指定された長方形領域の境界と要素の境界位置の辺が一致していないときは作図される FEM モデル形状は長方形とはならない。

### オプション 61 マスク

オプション 60 が解析モデルのうち一部のみを作図する機能であるのに対し、この オプションは、FEM モデルは書くが、その後に作図するもの、すなわち、

①節点番号、要素番号

②ベクトル量

- ③テンソル量
- ④スカラー量

等の書く領域を制限するものである。もちろんオプション60との併用も可能である。

### IPCUP (I5)

1~ 5 IPCUP 上記のデータを書く範囲の数。各範囲は次のカードで示される 長方形である。

| XPCMIN(I), XPCMAX(I), YPCMIN(I), YPCMAX(I) | (4F10.0) IPCUP 枚のカード

- $1 \sim 10$  XPCMIN(I)
- 11~20 XPCMAX(I) 長方形領域の x 座標の最小値と最大値。(データの次元)
- $21 \sim 30$  YPCMIN(I)

31~40 YPCMAX(I) 長方形領域の y 座標の最小値と最大値。(データの次元)

(注) 作図時には、FEM モデルの節点位置または要素重心位置がここで指定した領域に入っているか否かで、書くか書かないかの判断をする。要素の形状を表す線であれば、その両端の節点の両方がこの範囲に入っていればその線分は書かれるが、もし一方でもこの領域の外にあればその線分は書かれない。また、要素番号や、テンソルの作図であれば、その要素の重心がこの領域内にあるときだけ作図される。従って、ここで指定もこの領域の外にあればその線分は書かれない。また、要素番号や、テンソルの作指定もこの領域の外にあればその線分は書かれない。また、要素番号や、テンソルの作図でされた長方形領域の境界と要素の境界位置の辺が一致していないときは作図される FEM モデル形状は長方形とはならない。

### オプション 62 要素の選択

テンソルの作図、スカラーの作図を行う際、作図の対象とする要素を指定する。す なわち、FEM モデルは全ての要素について書くが、テンソル図やスカラー図は指定 された要素しか描かなくなる。なお、スカラーで要素の値から節点の値を補間する際 に、ここで与えられた要素のみが対象となる。

もちろんオプション 60、61 との併用も可能である。

# IEACTN (I5)

1~ 5 IEACTN 作図する要素のグループの数。IEACTN=0の時は全ての要素が 作図の対象となる。IEACT は 10 以下であること。正の入力が 行われたとき、次のカードも必要となる。

| ((IEACT(J,I), J=1,2), I=1,IEACTN) | (10I5) 1 枚または2 枚のカード

1~ 5 IEACT(1,1) 最初の要素ブロックの始まりの要素番号

6~10 IEACT(2,1)最初の要素ブロックの終わりの要素番号

IEACT(1,I) I 番目の要素ブロックの始まりの要素番号 IEACT(2,I) I 番目の要素ブロックの終わりの要素番号

# オプション 70 IFILE の REWIND

オプション6でFEM データの読み書き用ユニットまたはファイル REWIND し、最 初からデータを読み込めるようにする。コントロールカードは不要である。

# オプション 71 IFILE の不要な行送り

FEM データの読み書き用のファイルから、以下に指定された行だけ読み飛ばしを してポインターの位置を進める。読込んだデータと次に読むデータの間に不要な行が 入っているときに、この行を飛ばす目的に使用する。



1~ 5 ISKIP 読み飛ばす行の数。

# オプション72 線の太さの指定

ここでは、作図時に用いる線の太さを指定する。

線の太さは 3.4 節に示した方法で太くする。すなわち、標準仕様では 1 を入力した 場合に一番細く(0.2mm、これが標準)、以後 1 増えるごとに、0.2mm 太くする。 カード 1 枚に全ての情報を入力する。

# L1, L2, L3, L4, L5, L6 (615)

- 1~ 5 L1 一般
- 5~10 L2 モデルなど
- 11~15 L3 縮尺軸
- 16~20 L4 その他

#### 6 出力

このプログラムではユニット番号6とユニット番号7が出力ユニットである。ユニ ット6はプリント用のユニットであり、ユニット7はプロッター用の出力である。

#### 6.1 ユニット6への出力

入力データのうち基本的な諸量が印刷される。

これ以外にいくつかの警告や、エラーメッセージも印刷される。プログラムはユー ザーが正しくデータを用意していると考えて作られており、入力データに関するチェ ックはほとんど行なっていない。プログラムの実行が途中で止まるような重大なエラ ーは、要素節点に対応する節点番号が入力されていないときぐらいである。

プログラムはダイナミックアロケーション方式により作られている。この方法は、 大きな DIMENSION を一つ用意しておき、これを分割することによって必要な変数の 領域を用意するものである。従って、例えば要素数や節点数の制限は特にない。しか し、これらが余りに多いと、最初に確保した領域ではプログラムが要求する領域が不 足することがある。この場合、プログラムは次のエラーメッセージを印刷し、その実 行を中断する。

===== ERROR ===== SHORTAGE FOR DYNAMIC ALLOCATION AREA AT OPTION=

REQUIRED AREA =nnnnn

PREPARED AREA =mmmmm

----- PLEASE CONSULT THE PROGRAMMER -----

ここで、 はエラーが起こったオプション番号、nnnnn はプログラムが必要と する領域、mmmmm はプログラムが用意している領域である。この場合、プログラマ ーに相談し、プログラムの PARAMETER 文により指定されている MXDIM の数値を 大きくすればこのエラーを解消することが出来る。

#### 6.2 ユニット7への出力

ユニット7へは作図結果が出力されplt007.aiというファイル名が割り当てられている。これはIllustratorの入力データとして扱えるEPSF形式のテキストファイルである。

最初の作図枠は、最初のペン位置を左下隅として書かれ、新しい作図枠は前の作図 枠の右側に書かれる。 7 例題

#### 7.1 例1

この例題はかなり人為的なものであり、ユーザーにデータの並らび方と、どのよう な作図が可能かということを示すことを目的としている。なお、この例では FEM デ ータもユニット番号5 すなわちカードで読まれている。







このデータを実行すると、全体として下図のような図が作図される。最初の作図が

一番左で、次々と右側に図が書かれていく。Illustrator でこの結果を読み込むと、作図 可能範囲より遙かに横幅がはみ出た図となるので、実務ではこのようなデータはあま り意味が無く、必要な所を順次書いていけばよい。しかし、Illustrator ではなく、たと えば Free Hand で読み込むのであれば、全体を表すことも可能であるし、最終的にワ ープロに取り込む際には必要な部分だけをカットーペーストすれば良い<sup>2</sup>。

以降には、各図を作図される順番に示す。この図は、出力データを Free Hand で読み込んで作成したものある。



<sup>&</sup>lt;sup>2</sup> Free Hand からカットーペーストを使ってワープロに持ってくる際には、ペースト時 は「形式を選択して貼り付け」を選択し、「図」を選択する。単に Ctrl-v でペースト すると、リッチテキストでペーストされる。





### 7.2 例題-2

この例題は、はり要素の軸力図、せん断力図、モーメント図を扱っている。メッシュは前のメッシュと同じであるが、最初の図を見ると分かるように、底辺を除く外側の4辺にはり要素がつけられている。したがって、要素数は例題-1では4であったが、この例ではこれに5つのはり要素が加わり、合計9となっている。

1						
FGAB	40.3		0. 2	0. 2	0.0	0.0
10.0	8.0					
8						
22.0		2.0	2.0			
8		0.4				
10.4		0.4				
10						
1.0						
8	9					
1	0.0		0.0			
2	10.0		0.0			
3	20.0		0.0			
4	0.0		10.0			
5	10.0		10.0			
6	20. 0		10.0			
100	0.0		20. 0			
101	10.0		20.0			
1	1 2	2 5	4			
2	2	3 6	5			
100	4 3	b 101	100			
	5 1	0 IUI 1	101			
5 6	1 10	+ ר				
0 7 1	4 100	) I				
2 1	00 10 01 0	i S				
9	6 3	3				
11	0	,				
1	5					
4						
1m						
4						
2cm						
30						
11.0						
1.0		2.0				
1.0		-2.0				
-1.0		1.0		1.0		
-1.0		2.0		1.0 F 0	2.0	
2.U 2.5		1.U _1 5		0.0 2.0	ა. U _ 2 (	h
2.0 -1.5		_1. ປ 2 ຮ		-2 0	-2. U _5. 0	, )
-2.0		2.5		-5.0	-5.0 5.0	,
3.0		2.0		5.0	2 0	
3		2.0		0.0	2.0	
3Axi	al for	ce				

96

4			
3to	ı		
32			
1	4		5.0
1	1		
3			
3She	ear	force	
4			
3tf			
32			
1	5		
1	1		
3			
3Bei	ndir	ng moment	
4			
3tf	m		
32			
2	6		
1	1		





#### 7.3 例題-3 FLIP の結果の作図

この例では、より現実に近いもので、8 節点要素を含む FLIP の例題をそのまま使っている。ただし、地震の継続時間は1秒だけである。



FLIP の入力データは、マニュアル<sup>3</sup>に示されている例題のファイル (A2main-d.d) を、 ファイル名を FLIPDATA.DAT と変更して使っているだけなので、ここでは示さない。 動的解析の結果は (A2main-d.er) に格納されている。ただし、マニュアルでは 20 秒 の動的解析を行っているが、ここでは1秒の計算しか行っていないので、数値は異な る。これをもとにして、不要な部分 (入力データのエコー、動的解析の過程など) を 削除し、解析結果の内、変位応答と応力の値をその近傍のデータとともに残したもの で、次のような内容となっている。

OFEAP ##	#### ANALY	SIS OF A DAMAGE	D QUAY WALL (DY	NAMICAL ANALYSIS)	#############	#### FLIP VERSION 3.3
0	NODE NO	((( DISPLAC	EMENI	D 7	\	AITIME I.UU)))
OSEQ. NO	NODE NO	U-X	U-Y	R-2		長知の2行け DOST 2Dの1カデータト
1	1	-6. 1168E-04	1.8055E-03	0.0000E+00		
2	2	-8. 0192E-04	1.1669E-03	0.0000E+00		ては不要であるか、内容か分かるように残
3	3	-1. 1112E-03	6. 5394E-04	0. 0000E+00		した。したがって、Option 20 でベクトル
	-途中省略:	途中で改ページ	のための出力があ	あるが、これも削除	すること――	データを読み込む前に Option 71 で 3 行読
447	493	0. 0000E+00	0. 0000E+00	0.0000E+00		み飛ばしをしている。
448	495	-8. 7187E-02	-1.8577E-02	0.0000E+00		伝のゴニンを要たすわ このシリーズのゴ
449	497	-8. 4577E-02	-1.8873E-02	0. 0000E+00	-	一一行のノラング業を入れ、このシリースのデ
450	498	-8.7961E-02	-8. 0299E-03	<del>0.0000E+</del> 00		ータの終わりの指示をする。
OFEAP ##	#### ANALY	SIS OF A DAMAGE	D QUAY WALL (DY	NAMICAL ANALYSIS)	#######################################	#### この3行も、POST-2Dの入力データとして
0		((( STRESS	OF MULTI-SPRING	ELEMENTS		は不要であるが、内容が分かるように残し
OSEQ. NO	ELMT NO	NORMAL STRS X	NORMAL STRS Y	NORMAL STRS Z S	SHEAR STRS XY	1/SAFETY FAた。したがって、Option 30 でテンソルデ
1	1-0	-1.0659E+00	-4. 4943E-01	-5.0460E-01	-1.1349E-02	8. 3765E タを読み込む前に Ontion 71 で 3 行読み
2	2-0	-2. 3215E+00	-1.1106E+00	-1.1429E+00	5.9971E-02	7. 32455 - アビビン ひとり 前に ひり いの アド く 5 円 能の ア
3	3–0	-3. 5336E+00	-1.9248E+00	-1.8176E+00	1.6155E-01	6. 1291E <sup>飛はしをしている。</sup>
	-途中省略:	途中で改ページ	のための出力があ	ぁるが、これも削除	すること――	
333	333-0	-9. 3080E+00	-1. 4842E+01	-8. 0421E+00	-1.4566E-01	3. 5838E-01 5. 7303E-02 -4. 1623E-05
334	334-0	-1.0657E+01	-1.7376E+01	-9. 3348E+00	7.1048E-03	3. 8952E-01 -6. 4312E-03 0. 0000E+00
335	335-0	-1.0549E+01	-1.9253E+01	-9.9241E+00	2.7198E-01	5. 0727E-01 -4. 3694E-03 0. 0000E+00
336	336-0	-1.0385E+01	-2. 0325E+01	-1.0226E+01	1.4199E+00	5. 0064E-01 3. 6581E-02 -2. 2174E-05
1	337-0	-9.5113E-02	7.8956E-02	-7.1505E-07	-6.6324E-02	ここで、出力データの種類が変わり、これ
2	338-0	-2.8421E-01	4. 0836E-01	-6. 6325E-02	-4.0527E-01	
3	339-0	-4. 1555E-01	-3. 2451E+01	-4.0527E-01	1.0304E+01	い 西主の 転石 もった てが、 日じ テンソル 具
	-途中省略:	途中で改ページ	のための出力があ	あるが、これも削除	すること――	
34	370-0	-4. 6258E-01	-4. 0485E+00	-1.8641E+01	-1.0949E+01	として読み込んでも構わない。たたし、行
35	371-0	-5. 7561E-01	-3. 3382E+00	-1.0949E+01	2.0369E-05	間にあった出力は削除する必要がある。
36	732-0	3. 3353E+01	0.0000E+00	0.0000E+00	0.0000E+00	
						最後にもブランク業が必要

このデータにより合計4枚の図が作図される。FEM要素形状を描いた図、変位図、 最大せん断応力図、そしてモーメント図である。以下ではこれらを示す。ただし、図 のサイズは、実際の仕上がりとは異なっている。

<sup>&</sup>lt;sup>3</sup> (財) 沿岸技術研究センター: FLIP(Ver. 3.3) 取り扱い説明書、動作環境と例題

		 		[]									







										•	•	•	•	•	•	•		·	•	•	•	•	•	•	•
										•	•	÷	•	•		•		*	*	٠	•	•	٠	•	•
		1	1	1	1	1	1	1	1	•	•	•	•		•	•		•	+	•		•	•		
												•	•		÷	•	•	·	•	·	٠	•	•	· ·	•
																			•	•	•	•	•	•	•
														•	•	•				· ·	•	•	•	•	•
										-								•				,	•	•	•
													•	٠	•	_		· ·	•	···				•	•
										•	•					٠	*		· ·						
														*				•		~	X	X	×	×	×
										•	•	•			*	*		<u>.</u>	*						
														*		*	*			×	×	x	×	*	*
											•	*	_	Y	×	-		*	*						
										N		X	X	-	x	×	*			×	х	×	*	*	*
•	•	·	•	•	٠	•	•	•	•	X	X	-	X	X			~	×	•					I'	
•	•	•		ĸ	*	×	×	*	•	X	X	X	K.7	×	×	×									Ì
•	•	•	¥	×	×	×	×	×	*	X	$\boldsymbol{X}$	X	1			<b>—</b>		~	*	×	x	×	×	×	×
•	•	*	*	R	*	*	×	¥	*	X	X	$\mathbb{X}$	$\gtrsim$	×	X	×	~							1	
•	•			*	*	*	*	*	*	X	X	X	×	×	X	х	×	×	×	×	x	×	×	×	×
										P.a.	h														
•	٠	•	+	*	*	*	*	4	*	$\gtrsim$	R	÷	X	X	×	×	×	×	×	x	×	x	×	×	×
										4															
*	*	*	*	*	*	+	4	+	*	X	X	X	X	×	×	×	×	×	×	x	×	×	×	×	×
×	*	*	*	*	4	*	4	*	4	×	X	X	×	×	×	×	×	×	×	×	×	x	×	×	×
																								1	i







付録

#### 付録-1 等高線

1.1 等高線の書き方(スプライン曲線)

#### ①基本的な考え方。

いま、図に示すような 4 つの辺で囲まれた要素 ABCD D を考える。このうちの一つの辺 AB 上を等高線が通ること がわかったとする。すなわち、この辺の両端の節点の値が 等高線の値を挟んでいたわけである。この時、この辺 AB 上で等高線が通る位置 H を両端の値より線形補間により 求める。



$$\frac{\ell_{\overline{AH}}}{\ell_{\overline{AB}}} = \frac{z - z_A}{z_B - z_A}$$

ここで、化は、線分の長さ、zは等高線の値である。

この等高線はHを通り、この要素 ABCD の中を通り、外へ出て行く。この時、どの 辺を通って出ていくかは次のようにして決める。要素重心をGとすると、等高線は線 分 AG か、線分 BG のうちどちらか一方しか通らない。重心の値が分かればどちらの 辺を通るのかは知ることができる。仮に、GB 側を通ったとする。すると、次は、等 高線は辺 BC を通って出ていくか、または線分 GC を通るかのいずれかである。この ようにして、順番に調べていくことにより等高線がどの辺を通って出て行くのかを知 ることができる。等高線が出て行く辺でも辺上を等高線が通る位置は線形補間により 求める。

もし要素 ABCD を通る等高線が1本しかなければ上記のような考えは不用である。 しかし、例えば下図に示すように、2本の等高線が通る場合にはこのようにしないと どの点を通って出て行くのかわからないからである。



なお、少し細かい話になるが、等高線の値がちょうど節点を通る場合には考え方が 複雑になる。と言うのは、この場合には、この点を通る等高線は、この領域内を通る か、または単にこの点のみを通り別の領域へ行くのかがこの領域のみを見ていたので はわからないからである。プログラムではこれを解消するために小さなトリックを用 いている。すなわち、節点における値がちょうど等高線の値と等しいときには、節点 の値が等高線の値より少し大きいと考えて等高線が通る辺を決めている。このトリッ クによりほとんどの場合について非常によい等高線が得られる。しかし、次に揚げる 場合には問題かも知れない。

問題の場合とは、ある領域全部の節点での値が同じであり、これが等高線の値と等 しい場合である。このような場合について等高線を書くことに意味があるかは問題で あろうが、本プログラムではこれを書くことも可能である。この場合には、この領域 の周辺の節点の値により等高線の書かれ方が異なる。すなわち、周辺の節点における 値が等高線の値より小さければこの領域の境界に等高線をかく。一方周辺の節点の値 が等高線の値より大きければ等高線は書かない。いずれの場合にも領域内には等高線 はかかれない。後者の場合について領域の境界に等高線を書きたければ等高線の値の 指示を実際より少し小さめにすればよい(例えば、z>0のときには 0.9999992 を、z<0 のときには 1.00001z、z=0 のときには 1.×10<sup>-10</sup> を等高線の値として指定する)。同じ ことは境界の辺上に等高線が書かれる場合にも言える。

ここで用いている方法では、要素重心の値を使い、しかも重心と節点を結ぶ線分上 のどこを等高線が通るかまで判定しているのであるから、この点も結んで等高線を書 いた方がより正確な、また、見栄えのよい等高線が書けるのではないかという意見が あるかも知れない。しかし、このような試みを行った結果、この方法は余り好ましく ないことがわかっている。これは、線形補間により辺上の等高線が通る位置を求める という方法が、領域全体の曲面をどの程度正確に近似しているかということによって いるからであり、一般的には、この方法を用いると等高線が要素毎に波うつ傾向があ り、余り見栄えはよくない。

②等高線の書き方。

いま、要素を順番に調べて行き、その辺のうちで等高線が通る辺を見つけたとする。 すると、上記の方法で、等高線が出て行く辺がわかる。等高線が出て行く辺は、隣の 要素にとっては等高線が入ってくる辺となる。このような作業を続けて行くと、等高 線ははじめに出発した場所に戻ってくるか、または隣の要素がなくなり、これ以上進 めなくなる。前者の場合、等高線は閉曲線となり、後者の場合には等高線は開曲線と なる。これがはっきりした時点で、この点を始点とし、先の等高線を逆にたどって行 けば、等高線が書けることになる。なお、何故開曲線と閉曲線の区別が必要かについ ては次の節で述べる。

③スプライン曲線

ここでは、与えられた点を滑らかに結ぶ方法であるスプライン曲線について説明する。与えられた点列を $(x_i, y_i)$  (*i*=1, 2, 3, ·····)とする。この時、単調に増加する パラメータ*s*を次のように定義し、*x、y*を*s*の関数と考える。*s*は各点の間の距離の 和に相当する。

$$s_1 = 0, \quad s_i = \sum_{k=1}^{l} \sqrt{(x_{k+1} - x_k)^2 + (y_{k+1} - y_k)^2} \quad (i \ge 2)$$

これにより、sの値を与えればx、yの値が求まることになる。s-x 関係、s-y 関係をそれぞれ 3 次式で近似する。いま、s-x 関係のみを考える。 ( $s_i$ 、 $x_i$ ) と、 ( $s_{i+1}$ 、 $x_{i+1}$ )を通る 3 次式を、次の 4 つの条件より決める。

$$(s_i, x_i) と (s_{i+1}, x_{i+1})$$
  
 $(s_i, x_i) における傾きは $\frac{x_{i+1} - x_{i-1}}{s_{i+1} - s_{i-1}}$   
 $(s_{i+1}, x_{i+1})$ における傾きは $\frac{x_{i+2} - x_i}{s_{i+2} - s_i}$$ 

このようにすれば、各点で1階微分まで連続な曲線で、区間ごとは3次式で表される 曲線を求めることができる。

曲線が開曲線の時には、両端の区間については上記の条件からは式を求めることが できないので、その外側に仮想の点を考え、これを用いて曲線の式を決める。端点に *i*、その内側の点に*j*の添字を用いると、仮想の点の座標は次式で与えらえる。

 $x=3x_i-2x_i$ 

 $y=3y_i-2y_i$ 

曲線が閉曲線の時には、端点の傾きは最後になってわかる。そこで、与えられた点 のうち、最初の区間を通る等高線はとりあえず書かないことにして、二つ目の区間よ り書き出すことにする。そして最後の点がわかったら、それから最初の区間の曲線も 書くことにする。

スプライン曲線については、曲線の長さを最小にするような方法もあり、この方が より自然な曲線形状を与えることも考えられるが、記憶領域や、計算時間のことなど を考え、ここではとらなかった。

④数値の書き方。

線の途中を通る数値の場合は簡単である。すなわち、曲線を書く際に前回数字を書 いた添加らこれまでに書いた曲線の長さを計算しながら書いているので、この長さが ALNUM になったときに次の数値を書けばよい。数値を書く部分については、等高線 は書かれないので、この部分の等高線の長さが数値を書くのに必要な長さになるまで は、プログラムはこれらの位置を記憶している。そして、数値を書く以前に等高線が 終りになった場合には、数値は書かずに、記憶した値を基に、等高線を書くようにな っている。

なお、等高線の数値が逆転して書かれることは数値の見栄えの都合上好ましくないので、プログラムでは、水平線との角度が 135~270°の場合には、180°回転させて数

値を書いている。

#### 1.2 等高線の手法の違いの影響

3.9 節で述べたように、スカラーの値が要素重心で与えられている場合には、節点の値を求める必要があり、これには四つの方法を用意している。この手法の違いは、 節点の値を外挿しなければならない場合に明瞭に現れる。すなわち、方法2では、重 み付平均を用いて節点の値を計算しているため、節点の値は要素重心の値より大きく なったり、小さくなったりすることはない。しかし、境界付近では、関数形状が単調 に変化しており、したがって、節点の値が、要素重心の値より大きくなったり小さく なったりすることは普通に起こると考えられる。このような場合に方法2を用いると、 境界の付近で等高線が急激に回転することが起こる。方法1では、関数で補間してい るため、要素重心の値より大きい値や小さい値も問題なく取ることができる。方法3 についても同じである。最後に、方法4では外側の辺の値に要素の値を使うので、方 法2に見られるような異常は無いが、値のギャップが出てくる。

一方領域の内部では、方法2や4の方がより周辺の要素の値を考慮して値を決めて いるので、等高線の形状そのものは滑らかになる。したがって、問題に応じて、取る べき方法を選ぶべきであろう。

さきに述べた関数形状が境界付近で単調に変化することは至って普通の起こると 考えられること、境界付近での等高線の乱れは図面の見栄えを悪くすることが多いと 考えられるから、本プログラムでは、方法1を標準的な方法としている。

両方法の違いを明瞭に示すのは、例題で示した4要素モデルの場合である。この場 合には、方法2は非常に好ましくない方法と考えられる。次ページに両手法で書いた 等高線を比較して示すが、方法1にようるものは自然な形状をしているのに対し、方 法2によるものは、領域の中心に山があるような形状をしており、同時に書いた要素 重心における値と比べてみれば、方法1の方がよい曲線を与えていることは明瞭であ ろう。

次ページの図を参照されたい。














# POST-2D

# Post-processor for 2-dimensional FEM analysis

**EPSF** Version

Version 2.46

Oct. 1995

Nozomu YOSHIDA

# Contents

1	About POST-2D	2			
2	Functions of the program	3			
3	Note on input				
	3.1 Flow of the program	4			
	3.2 Default value	5			
	3.3 Figures	6			
	3.4 Lines	8			
	3.5 Character set	9			
	3.6 Numerals	10			
	3.7 Symbol mark	10			
	3.8 Title and scale	10			
	3.9 Contour line	11			
4	FEM data	14			
	4.1 FEM data being considered	14			
	4.2 Input of FEM	15			
5	Input	17			
	5.1 Option cards	17			
	5.2 Control cards	19			
6	Output	71			
	6.1 Output in unit 6	71			
	6.2 Output in unit 7	71			
7	Examples	72			

### 1 About POST-2D

Program name POST-2D

Function Post-processor for 2-dimensional Finite Element Analysis

### Developed by

Nozomu YOSHIDA, Sato Kogyo Co., Ltd.

### Version

1985.9.	Original Version,	at the University of British Columbia
1986.10.	Version 2.0	
1988.1	Version 2.2	
1991.10	Version 2.44	
1993.5	Version 2.45	
1995.10	Version 2.46	EPSF file output

#### 2 Functions of the program

POST-2D is a post-processor to draws various figures obtained by 2-dimensional Finite element analysis. It has following functions.

- 1) Draw FEM mesh
- 2) Draw vector quantities by arrow or deformation figure
- 3) Draw principal value, maximum off-diagonal term such as maximum shear stress, and each component of tenser quantities.
- 4) Draw contour and values of scalar.
- 5) Draw coordinate axis.
- 6) Draw various symbols, lines, etc.
- 7) Draw statement

In general, it is not so difficult to add a new function. Please consult with the programmer.

POST-2D creates two types of output. The one is a text file based on Sato Kogyo Standard Plotting System, which is valid only in Sato Kogyo Co., Ltd. The other is a Encapsulated Post Script File (EPS file), which can be used in any systems. More better, the output file, named plt007.ai, is equivalent to the output file of Adobe Illustrator Version 3.0, therefore the user can edit the output file by using Illustrator.

The EPSF format may not be convenient for the people who does not use Postscript printer. The user can import this file into various other drawing tool. For example, Freehand can open this file. Corel Draw also can import this file although they have some shortage that the position and the direction of character may not reproduced well and line type also may not well reproduced. However, since the user can edit the output file, these may not be serious problem considering the advantage of this program.

This manual summarizes only for EPSF output.

#### 3 Note on input

#### 3.1 Flow of the program

Two types of data are required in the program: data obtained as the result of FEM analysis and data that controls the method to draw figures. The former is read from arbitrary unit specified by the user by option 1. The latter is read from unit 5, which is called as card input in this manual.

The flow of the program is as follows:



Figure 3.1 Flow of the program

Each option is specified by one card in which number of option is written. Control cards are used to read various data required to the option. As shown in Figure 3.1, the program always read option card first, and goes to read control cards necessary to conduct the work for the specified option. After finishing the work in the option, the program again goes to read next option card.

#### 3.2 Default value

POST-2D is capable in determining relevant values to do the specified work when the user does not specify them, thus simplify the preparation of the input data. These values are called default values in the manual. For example, size of the character, scale, positions of the figure, etc. may be the data whose value is to be determined, but to determine all of them will be a troublesome work. The user can use default values for them. If the user want to specify exact values for them, it can be done by specifying suitable value for corresponding input.

In the explanation in chapter 5, if the statement such as "default  $\sim \sim \sim$ " appears, it indicates that default value can be used for the variable, where  $\sim \sim \sim$  denotes the method used to determine the default values. It may be numeral or statement by which default value is determined.

Three types of default values are used in POST-2D, which are described in the followings.

#### (1) Type 1

The default value is used when corresponding input is kept blank or zero (for numeral input). When corresponding variable appears first time, then  $\sim\sim\sim$  is used as default value, and when it appears subsequently, previously used value, which may be default value or specified by the user, is used as default value.

#### (2) Type 2

The default value is used when corresponding input is kept blank or zero (for numeral input), or negative value for numeral. When it appears in the first time, ~~~ is used as default value. When it appears subsequently and if the input is blank, previously used value is used as default value. If negative value is input, then the program always used ~~~ for default value, in which case the value itself has not sense, only the sign has sense.

#### (3) Type 3

The default value is used when corresponding input is kept blank or zero (for numeral input). The  $\sim\sim\sim$  part is always used as default value even in the second or later appearance.

These three default values are distinguished by "default<sup>1</sup>", "default<sup>2</sup>", and "default<sup>3</sup>", respectively. It may seem complicated to use these three default values, but it is recognized naturally when the user prepare input data. Following example may help it.

 Table 3.1
 Example of the change of the value depending on default type

Туре				
Input	1	2	3	

Blank	2*	$2^{*}$	$2^{*}$
1	1**	$1^{**}$	$1^{**}$
Blank	1***	$1^{***}$	$1^{***}$
-1	-1**	$2^{*}$	-1**

: Initial value (value specified as ~~~)

\*\* : Input value

\*\*\* : Value used in previous appearance

Among three types of default values, type 1 appears the most frequently. Type 2 appears frequently for auto scaling. Type 3 is usually used for line type and size of characters.

It is important to recognize the type 2 default value. For example, let consider the case that the user are going to draw two deformed figure with maximum displacement of 2 cm and 1.5 cm, and acceleration diagram with maximum acceleration of 500 Gals. Scales for these figure are specified through SCALED, which is a variable with type 2 default value. Since both displacement and acceleration are vector quantities, there is no difference of the treatment by the program. First, if the user uses default value for deformation figure, maximum displacement of 2 cm appears in 1 cm in the figure (this value can be modified by option 8). In other words, scale is 1:2. In the next figure to draw deformation figure with maximum value of 1.5 cm, the user can use the same scale, 1:2, through blank input for SCALED, which may be reasonable. However, the program uses the same scale, 1:2, for next figure, acceleration diagram, if the user left SCALED input as blank, by which maximum acceleration of 500 Gals appears 250 cm in the figure, which is not good. If the user specify negative value for SCALED, for example -1.0, then the program compute new default value corresponding to a new situation, which result in scale of 1:250. Of course, if the user always compute suitable scales and input it, this kind of knowledge is not necessary.

#### 3.3 Figures

When drawing figures, the program set rectangular drawing area, whose size is specified by option 1, and draws figures within the area, which is called frame hereafter. Figure 3.2 is an example of a frame and a figure in it.

Figure 3.3 shows the flow of the procedure to draw a figure. Geometry of FEM mesh, title, and scale part which contains types of the figure and scales are always drawn. The positions of FEM mesh is specified by XORI and YORI in option 1. The scale is specified by control card at each option. Size of characters for title and scale axis, etc. are input in option 1, and the length and the position of scale is specified by the control card at each option and option 5, respectively. Default value can be used for all of these variables.



When drawing figures, firstly the user uses option 10 to read FEM mesh. Vectors, tensors, and scalars are read by options 20, 30, and 40, respectively, when necessary. Options 11, 22, 32, and 42 are used to draw figures, therefore necessary specification such as a title is to be done before using these options. When one of these options is called, the program prepares a new frame at the right of the previous frame and draws FEM mesh, title, scale part,

and required figures. Options such as overdrawing, comment, various symbol marks, etc. will be drawn within this frame.

When the user want to draw a part of the analyzed region, option 60 makes it possible. When the user want to mask some parts of the analyzed region, option 61 can be used.



Fig. 3.3 Fundamental procedure to draw figures

#### 3.4 Line type

The user can use thirteen different kind of lines. He must specify line type, pitch, and width of lines when necessary. Indication is done by using an integer, among which lower two digits indicate line type, and part greater than 100 indicates width of line. Table 3.2 shows line types and table 3.3 shows example of line width. Here, type 5 and type 11 are the same except default pitch. Solid part and blank part are proportionally changes depending on pitch for types 3 to 11. The solid part length is always constant (0.03 cm) for type 2. Dot length and space length are always constant for type 12 and 13, which indicate that length of solid part changes depending on pitch.

Tuble 5.2 Ellie types							
Lower	Line	Pitch when	Comment				
two digits		default <sup>3</sup> (cm)					
1			Solid				
2		0.1	Dot				
3		0.3	Dash				
4		0.3	Dash				
5		0.4	Dash				
6		0.4	Dash				
7		0.4	Dash				
8		0.4	Dash				
9		0.4	Chain				
10		0.5	Chain				
11		1.0	Dash				
12		1.0	Chain				
13		1.0	Chain				

Table 3.2	Line types
1 4010 5.2	Line types

Line width is specified by 100th digit of the number. The standard line with is 0.02 cm, and increases by 0.02 cm as 100th digit increases one.

Default value of line width is type 3, which is shown in the table.

	Tuble 5.5 Line whith	
Input	Example	Comment
1		0.02cm
101		0.04
201		0.06
301		0.08
401		0.10

Table 3.3 Line width

#### 3.5 Character (font)

Standard font is "Arial". The user can use "Times" and "Symbol" as well. The font defined in POST-2D is a true type font, not type-1 font. Therefore, depending on the ATM (Adobe type manager), Illustrator may declare that irregular font is used, in which case the user need to change font type in the Illustrator when necessary.

The character input in POST-2D has two meaning: character to draw and character to control drawing. If the user draw character using Arial, there is nothing difficult; just to type the character he want to draw. However, if the user want to draw, for example, super-script or change font, following rules must be used. The followings are brief explanation of how to use control character in POST-2D. Detailed information is shown in the manual of SUBROUTINE PSYM.

- Among the characters, "\$" and a character following it is not drawn but used to control the drawing, which is called control characters hereafter. They should be included when counting the number of characters as input. Functions of each control characters are shown in Table 3.4. The flag specified by control character is valid until changed by next control characters or till the end of input.
- 2) If the user want to draw "\$", input "\$\$".
- 3) Script is controlled by \$2, \$3, and \$4. The control character \$2 indicate the beginning of super script, \$3 indicate the beginning of subscript, and \$4 indicates end of script. The user can find how it works through the following examples, in which the position of \$4 is focused on.

Example	Input:	ABC\$2123\$3BC\$4DE	EF ABC\$2123	\$4\$3BC\$4DEF
	Output:	ABC <sup>123</sup> DEF	ABC <sup>123</sup> <sub>BC</sub> D	EF
4) \$A, \$B, and \$C	are used to	o indicates "Arial", "Tim	es", and "Symbol" for	onts, respectively.
Example	Input: A	BC\$Babc\$Cabc\$Aabc	Output: ABCabc	abc

#### 3.6 Numbers

It is very important to think about significant digit when drawing the numbers. For example, it does not have sense to draw 100.000000 when the user want to draw 100. To control it, the program requires number of digit after decimal point in input.

Let N be a number of digit after decimal point. When N is positive, the program counts fractions of 5 and over as a unit and disregard the rest at (N+1)-th digits after decimal point. If N is negative, more than (-N-1)-th digit before the decimal point is used and integer part is drawn. If N=0, the program usually select suitable value as default value, but for the variable where default value is not available, integer and decimal point is drawn.

As an example, let's see the drawing of a number 1256.2463 depending on N.

N=1	1256.2	N=0	1256
N=2	1256.25	N=-1	1256
N=3	1256.246	N=-2	1260
N=4	1256.2463	N=-3	1300
N=5	1256.24630	N=-4	1000

#### 3.7 Symbol mark

The program prepares 24 symbol marks shown below. The user specify the symbol mark by a number. The size of them is also specified by the user.

	0	1	2	3	4	5	6	7	8	9
(No	othing	)(Dot	) )	U	Δ	+	×	$\diamondsuit$	<del>↑</del>	X
	10	11	12	13	14	15	16	17	18	19
	Ζ	Y	Ă	Ж	Χ	I	<b>x</b> ‡x	•	0	
	20	21	22	23	24					
			$\triangle$	▼	$\bigtriangledown$					



Figure 3.4 Symbol mark and its number

#### 3.8 Title and scale

So as to identify types of figures and scales of the model etc., title, scale, etc. are drawn at the lower part of a frame (see option 5 in detail specification). Figure 3.5 shows an example. Title is composed of characters less than 80, which is specified by option 2. Size of the title is specified by SIZET in option 1. The same title is use in all the figures unless specified again.



Each scale figure is composed of an axis name, scale axis, and unit. Axis name is composed of characters less than 40, which is specified by option 3, whose default name is shown in Table 3.6. Its size is specified by SIZES in option 1. They are valid until changed by subsequent input.

Length of the axis is input when each figure is drawn. If default value is used, the program chooses round number a little larger than 4 cm (default length can be changed by option 8).

Table 3.6 D	efault axis name
Model shape	Geo. scale
Tensor	Stress
Vector	Displacement
Scalar	Excess p.p.

T11 2 C D C 1 ·

The program does not prepare initial unit system; the user specify it by option 4. If axis number is too small or too large, the user can use following technique to modify it into good looking number.

Let's consider the case that axis numbers are 200000 and 400000, which is obviously not good looking number. If weighted factor for data input is set 1/10000=0.0001, then they becomes 20 and 40, respectively. However drawing the numbers 20 and 40 as axis number is not correspond to actual data. Let's assume that original unit is meter. By specifying 10\$24\$4m for unit input in option 4, then  $10^4$ m is written as the unit, which is actual number. Changing the unit system is sometimes convenient. For example use weighted factor of 1/1000=0.001, and unit as km result in a axis number of 200 and 400, which is also good looking.

#### 3.9 Contour line

Fundamental knowledge to draw contour line, which is one of the powerful tool to express scalar quantities, is described.

POST-2D draws contour line by using the nodal value, but value at the center of an element is also used as complementary data. Figure 3.6 shows the method how to draw a contour line schematically. POST-2D compute the potion where contour line is going to pass on the segment between element nodes by linear interpolation. Then piecewise linear lines are drawn by connecting these points. However, POST-2D also has an option to draw the contour by a spline curve, which gives better looking drawing. However, this function is not perfect since they may intersect to each other. Therefore the user need to choose relevant option.



Boundary of element ----- Contour line O Points where contour line passes Figure 3.6 Schematic figure showing how to draw a contour line

The program computes value at the center of element from nodal value when nodal value is given, and nodal value from element value when element value is given. Here value at the center is computed as average value of four (or three) nodal value:

$$z_g = \sum_{i=1}^N z_i / N$$

where  $z_g$  and  $z_i$  are values at the center of element and nodes, respectively, and N is number of node, i.e., 2, 3, or 4.

On the other hand, when element value is given, three methods are available to compute nodal values.

#### 1) Method 1

Interpolation function z = ax + by + cxy + d

is used, where unknown local variables a, b, c, and d are computed by using data at four neighboring elements.

#### 2) Method 2

Weighted average shown below is used.

$$z_j = \sum_{i=1}^N z_i w_i$$

where  $z_i$  denotes element value and  $z_j$  is nodal value being computed. N is set 8, and weight  $w_i$  is defined as

$$w_{i} = \frac{\left(1 - R_{i}\right)^{2} R_{i}^{-2}}{\sum_{i=1}^{N} \left(1 - R_{i}\right)^{2} R_{i}^{-2}}, \qquad R_{i} = \frac{r_{i}}{r_{N}}$$

where  $r_i$  is a distance to the center of the I-th element, and  $r_N$  denotes maximum value among

#### 3) Method 3

Similar to method 1, except that interpolation function shown below is used, where unknowns a, b and c are computed by using the data at three neighboring elements.

z = ax + by + c

#### 4) Choice of methods

First, let's consider method 2. Since averaging technique is used, obtained value is not minimal or maximal. Therefore obtained contour may not be accurate near the boundary.

Method 1 and 3 can simulate better, in general, the difference between method 1 is clearly seen in Appendix-II; monotonically changing shape cannot be expressed by method-1. However, since this method uses data very close to the interested point, contour line may show zigzag shape when looking as a whole. Method 2 uses more data hence more smooth line can be obtained.

The program uses method 1 as standard technique, and the rest for complementary ones. The user need to use method-2 or -3 if obtained figure is not good looking.

Wave of the contour line may occur by another reason. Since linear interpolation is employed to compute the points where contour line passes, which may not be a good interpolation method when the change of scalar value cannot be approximated by linear change.

#### 5) Others

Lines shown in section 3.4 can be used to draw contour line. The user can use more than one type depending on the group of contour values.

The scalar value can be drawn at both ends and in the middle of contour line. The distance between values is to be specified in the latter case in input.



Figure 3.7 Example of contour line with numbers

 $r_i$ 's.

#### 4 FEM data

#### 4.1 FEM data available in POST-2D

FEM model available in this program must have following characteristics.

- (1) Each node is defined by two component, (x, y). x-axis is horizontal to the right and y-axis is vertical to upper.
- (2) Quadrilateral, trigonometric, and segment element are available. They are defined by 4, 3, or 2 nodes.
- (3) Basically, element with more than 4 nodes such as 8 point quadrilateral element is out of consideration. However, they can be treated using following technique.
  - 1) Node and element are input as it is.
  - 2) When defining element nodes, four corner nodes are chosen as element nodes.

Since the program does not check whether nodes are used as element nodes or not, therefore plot of nodes is exact. If intermediate nodes lie on the line connecting the corner nodes, they are drawn exactly for FEM mesh, but may not be correct when drawing deformed shape. Information at the intermediate nodes is not used when drawing contour line.

Variety of data appears as a result of FEM analysis. They are, however, classified into scalar, vector, and tenser quantities in the point of view of the program. They have one, two and three components, respectively. Tenser is defined at the center of the element; vector at a node; scalar at either node or element.

In order to reduce core size of the program, the program memorizes only one set of quantities at the same time. Stored data disappears when a new set of data is input.

Addition, subtraction or weighted average of several data is possible by controlling additional function. For example, if one want average of two vector quantities, input first set by weight factor of 0.5 by option 20, and input second set by weight factor of 0.5 by option 21. If one want to obtain difference of two tenser quantities, input first set by weight factor of 1.0 by option 30 and input second set by weight factor -1.0 by option 31.

#### 4.2 Input of FEM data

As described in the previous section, the program deals with four types of FEM data, geometrical configuration, scalar, vector, and tenser. They are read from unit IFILE, which is specified in option 1. If data are stored in a different unit, the user specify proper unit number by option 1 before reading them.

FORMAT to read these data is specified by option 7. If the user does not specify them, default format, shown in the following, is used.

#### 4.2.1 FEM model

This data is read prior to other three types of data. It is read through option 10.

#### 1) Fundamental data

NUMN	P, NUMEL	(215)
$1\sim 5$	NUMNP	Number of node
6~10	NUMEL	Number of element

2) Nodal data (NUMNP nodes)

INODE	E(I), X(I), Y(	I), I=1, NUMNP (I5, 5X, 2F10.0)
$1\sim 5$	INODE(I)	Node number of I-th node (default <sup><math>3</math></sup> = I)
10~20	X(I)	x-coordinate
21~30	Y(I)	y-coordinate

3) Element data (NUMEL elements)

IELM(1	I), (IX(J, I),	J=1, 4, $I=1, NUMEL$ (515)
$1\sim 5$	IELM(I)	Element number of I-th element (default <sup>3</sup> = I)
6~25	IX(J, I)	Element nodes. They are to be clockwise or contour-clockwise
		direction. For trigonometric element, set $IX(3, I) = IX(4, I)$ or $IX(4, I)$
		I)=0. For segment element, set $IX(2, I)=IX(3, I)$ and $IX(1, I)=IX(4, I)$
		I), or set $IX(3, I) = IX(4, I) = 0$ .

It is noted that node numbers and element numbers are needless to be sequential in order. The only requirement is that total number is NUMNP and NUMEL, respectively. Note that the sequence of the vector and the scalar defined at the node must be the same as the nodal coordinate, and the tensor and the scalar defined at the element must be the same as the definition of element.

#### 4.2.2 Tenser (NUMEL data)

## (SRS(J, I), J=1, 3), I-1, NUMEL (3E15.6)

1~15 SRS(1, I) component normal to x-section such as  $\sigma_{xx}$  and  $\varepsilon_{xx}$ .

16~30 SRS(2, I) component normal to y-section such as  $\sigma_{yy}$  and  $\varepsilon_{yy}$ .

31~45 SRS(3, I) component acting on x-direction of y-section or y-direction of x-section such as  $\tau_{xy}$  and  $\varepsilon_{xy}$ .

#### 4.2.3 Vector (NUMNP data)

UX(I),	UY(I), I=	=1, NUMNP	(2E15.6)
1~15	UX(I)	x-compo	onent.
16~30	UY(I)	y-compo	onent.

4.2.4 Scalar (NUMNP or NUMEL data)

PRS(I), I=1, NUMPT (E15.6)

 $1 \sim 15$  PRS(I) Scalar value. It must be defined as a value either in element or in node.

# 5 Card Input

# 5.1 Option Card

As shown in section 3.1, option card is used to tell the program what kind of work is going to do. One card is used for one option.

IPOT (I5)	
$1\sim 5$ IOP	T Option number, see below
Option	Function
0	End of job.
1	Fundamental data
2	Title
3	Scale axis name
4	Unit system at scale axis
5	Position of title and scale figure.
6	Character set.
7	FORMAT to read FEM data.
8	Change default value.
9	Coordinate transformation of FEM model
10	Input of FEM model
11	Draw FEM mesh
20	Input vector
21	Add vector
22	Draw vector
23	Overdraw vector
30	Input tenser
31	Add tenser
32	Draw tenser
33	Overdraw tenser
34	Convert tenser into scalar
40	Input scalar
41	Add scalar
42	Draw contour
43	Overdraw contour
44	Convert scalar into vector
50	Write comment statement

- 51 Symbol mark for expressing boundary condition.
- 52 Segment or circle with number
- 53 Draw symbol mark and comment
- 54 Draw coordinate axis.
- 55 Shading
- 56 Lines connecting the specified points.
- 60 Blow up
- 61 Mask
- 70 Rewind unit IFILE.
- 71 Skip lines in unit IFILE.
- 72 Define pen number and line width

#### 5.2 Control card

Control card is input following option card.

# Option 0: End of job

Option 0 indicates end of job, therefore no control card is required. If data in unit 5 come to an end, the job will automatically terminated, which is also normal end.

# **Option 1: Fundamental Data**

Fundamental data is specified in this option, therefore, in general, this option is to be used at least once at the beginning of job unless default values are used for all variables. In the case that value of particular variables is to be changed, use this option by writing the nontrivial value at the corresponding place and leave blank for the rest.

(1) Fundamentals (One card)

WAKU	, IFRM, IFI	LE, SIZET, SIZES, SEZEN, XORI, YORI, XDIS, YDIS, YPAP
(A4, I	1, I5, 5F10.0	), 3F5.0)
(A4, 1) $1 \sim 4$ $5 \sim 5$	I, IS, SFIO.0	Size of frame (default <sup>1</sup> = FGA4) FGA4: Landscape with A4. FGB4: Landscape with B4. FGA3: Landscape with A3. FGA2: Landscape with A2. FGA1: Landscape with A1. FA4S: Portrait with A4. FG11: Letter size, 11 in. width and 8.5 in. height. FG10: 10 inch square FG14: 14 in. width and 11 in. height. FGAB: Other, which is specified in subsection (2). Flag how to identify frame (default <sup>1</sup> = 1) =1: Nothing =2: Draw corner marks =3: Rectangular frame
		IFM=1 IFM=2 IFM=3
6~10		Unit number from which EEM data is read (default <sup>1</sup> = 5). Unit
0 - 10	IFILE	Unit number from which FEW data is read (default $-5$ ). One
110.20	SIZET	numbers 6, 7, 27, and 29 cannot be used. Unit 5 is available.
11,~20	SILEI	Size of the in chi. (default , the program determines suitable value
		depending on frame size)

- $21 \sim 30$  SIZES Size of scale axis name in cm. (default<sup>1</sup>: the program determines)
- 31~40 SIZEN Size of node number, element number, number in a figure, comment, etc. in cm. (default<sup>1</sup> = 0.2 cm)

41~50	XORI	See YORI
51~60	YORI	Distances from the left bottom corner of the frame to the coordinate
		(0, 0) of FEM model in cm. (default <sup>1</sup> : the program determines them).
		If 9999. is input, the program determines it based on current scale,
		which is identical with type 2 default value.
		Note. Input of 0 is treated as default value, therefore the user is
		suggested to input very small value instead of 0 if he want to
		input 0 as the value.
		Note. Use of default value is recommended for XORI and YORI. If
		the user input nontrivial value, it is noted that the figure does not
		overlap the title and scale axis.
61~65	XDIS	Horizontal distance between frames in cm. See examples below.
		$(default^1 = 0.0)$
66~70	YDIS	Vertical distance between frames in cm. See examples below.
		$(default^1 = 0.0)$
71~75	YPAP	Width of paper when using roll paper in cm. See example below.
		$(default^1 = 30)$

Note. If cut sheet printer or plotter is used, size specified by WAKU must be equal or smaller than paper size. In these machines, change paper is conducted when origin is changed or when there is special order. This program support former case. In other words, movement of origin occurs only when a new frame is prepared, or options 11, 22, 32, and 42.

On the other hand, this kind of consideration is not necessary for roll paper type plotter, but for the purpose to reduce total amount of paper, another consideration may be required. If there is sufficient space to draw frame around the current frame, the program find it and draw there. Variables XDIS, YDIS, and YPAP are used for this purpose.





Frame for each figure Frame does not overlap even when XDIS=YDIS=0.

Number indicates the order by which frames are drawn

Note. Input of 0 value for XDIS, YDIS, and YPAP is treated as default value. Therefore if non-zero value is input once, it cannot go back to zero. Set small value when necessary.

(2) Frame size

Input in this subsection is necessary when IFILE = FGAB.(one card)

XWIDTH, YWIDTH (2F10.0)

 $1 \sim 10$  XWIDTH Width in cm.

 $11 \sim 20$  YWIDTH Depth in cm.

# Option 2: Change title (one card)



# Option 3: Name of scale axis (one card)

As described in section 3.8, the program prepares default axis name shown below. They can be changed when necessary by this option. Once it has been changed, it is valid until next change.

	Initial axis names			
Number	Axis name	Data		
1	Geo.scale	FEM model		
2	Displacement	Vector		
3	Stress	Tenser		
4	Excess p.p.	Scalar		

K, SNAME (15, A40)

 $1\sim 5$  K Flag on axis type (Number in the table above) =1: FEM model =2: Vector =3: Tensor =4: Scalar  $6\sim 45$  SNAME Axis name which is composed of less than or equal to 40 characters.

- Note 1. Scale part is always drawn so that left ends of the axes are aligned vertically. (See example in section 3.8).
- Note 2. Only one axis name can be changed in this option at once. Therefore, repeat this option as necessary in order to change more than one axis name.

# Option 4: Unit system (one card)

Since the program does not prepare initial unit system name, the program is to input them when necessary. Input name is valid until next input.

K, UNAME(I5, A40) $1 \sim 5$  KFlag number on scale type.=1: FEM model=2: Vector=3: Tensor=4: Scalar $6 \sim 45$  UNAMEUnit name composed of 40 or less characters

Note. Only one unit name can be defined by this option. If the user want to change more than one unit name, repeat this option necessary times.



Example of scale part with unit name

## Option 5: Position of title and scale part

Position of title and scale part are specified in this option If this option is not used, the program draws them at the lower part of the frame (see example in chapter 6). In this case, the size of characters, scale axis length, etc. are automatically determined by the program so that they shall not exceed the given frame. If this option is used, the program does not check whether tile and scale axes are drawn outside the frame of not; the user must determine the position considering they will write within the frame. The user may not be so sensitive of the location because he can change it by Illustrator.

ITPOS,	TX, TY, SX	X, SY, SD (I5, 5F10.0)
$1\sim 5$	ITPOS	Flag to determine the location
		=0: The program determines it; the following input is meaningless in
		this case.
		=1: Locations is specified as follows
6~25	TX, TY	Coordinate of the start point of the title (see figure below). Note that
		coordinate origin is the left bottom corner of the frame.
26~45	SX, SY	Coordinate of the start point of scale part (see figure below). Note
		that coordinate origin is the left bottom corner of the frame.
46~55	SD	Distance between two axis. When SD is positive, scale for data is
		drawn below the axis for geo-scale.
	(SX	SY) Geo.scale 0 4 8 1
ÆXA∿	<b>IPLE</b>	Displacement 0 10 20

(TX, TY)

Point to specify the coordinate

Note: When default values are used, TY=3×SIZET, SY=3×SIZET+3×SIZES, SD=3×SIZES (See option 1 for SIZET and SIZE). If only model scale is drawn, SY=3×SIZET. The TX and SX are determined relevantly.

# Option 6: Character set (one card)

Standard character set is specified. This option is meaningless for EPSF version.

CSET(A20) $1 \sim 20$ CSETCharacter set name. See table below and section 3.5, too. Initial set is<br/>STANDARD.

Available character set

STANDARD	HEKVETICA.1	SANSERIF.CART	SANSERIF.1	SANSERIF.2
ROMAN.2	ROMAN.2A	ROMAN.3	ITALIC.2	ITALIC.2A
ITALIC.3	SCRIPT.1	SCRIPT.2	GOTHIC.ENGLISH	
GOTHIC.FRA	AKTUR	GOTHIC.ITALIAN	GREEK.CART	GREEK.1
GREEK.2	GREEK.2A	CYRILLIC.2	STANDARD.OLD	

# Option 7: FORMAT for data (one card)

FORMAT to be used when reading FEM data is specified. Initial format is shown in parenthesis below. If this option is not used, the program uses FORMAT shown in parenthesis in the following explanation.

IFMT, FMT (I5,	A40)
$1\sim 5$ IFMT	Flag on type
	1: Number of node and element (215)
	2: Node number and coordinate (I5, 5X, 2F10.0)
	3: Element number and element nodes (515).
	4: Vector (2E15.6)
	5: Tenser (3E15.6)
	6: Scalar (E15.6)
6~45 FMT	New FORMAT

Note 1. FORMAT must be with parenthesis.

Note 2. Only one FORMAT can be specified by this option at once. If the user want to change more than one FORMAT, repeat this option necessary times.

# Option 8: Change default value (one card)

The user can modify default values the program prepares by this option.

IFG, FLG1, FLG2, FLG3, FLG4, FLG5 (I5, 5F10.0)

- $1\sim 5$  IFG Flag number to indicate the default value to be changed (see table below).
- $6\sim55$  FLG1 $\sim$ FLG5 New default value. If blank or zero value input, they are not changed.

IFG	FLG1	FLG2	FLG3	FLG4	FLG5
1	AXMD	AMXT			
2	SUBLNS	SUBLND	SUBLNT		
3	ALS	BLS			

- AMXD Maximum length of vector in cm. Initial = 1 cm
- AMXT Maximum length of tensor in cm. Initial = 1 cm.
- SUBLNS Axis length for FEM model scale in cm. Initial = 4 cm. Actual axis length is set so that it is round number and is a little greater than SUBLNS.
- SUBLND Axis length for vector scale in cm. Initial = 4 cm. Actual axis length is set so that it is round number and is a little greater than SUBLND.
- SUBLNT Axis length for tensor scale in cm. Initial = 4 cm. Actual length is greater than SUBLNT and is round number.
- ALS Length for arrow in cm. Initial = 0.2 cm. See figure below.
- BLS Length for arrow in cm. Initial = 0.1 cm. See figure below.



### Option 9: Coordinate conversion of FEM model

This option is made for very limited purpose; Scalar value is expressed as vector whose direction is perpendicular to the model plane. Therefore, resultant figure has 3-dimensional look. The coordinate of the node is modified so that model plane tilts as shown in the figure below. The conversion from scalar to vector value can be made in option 44.

Note that nodal coordinate is modified by this option, the original coordinate is lost.



Model shape

Model shape after conversion

## ANGX, FACX, ANGY, FACY (4F10.0)

1~10	ANGX	Angle between the original <i>x</i> and new <i>x</i> axes in degree.
11~20	FACX	Multification factor for x axis. (default <sup>3</sup> = 1.0)
21~30	ANGY	Angle between the original $x$ and new $y$ axes in degree.
31~40	FACY	Multification factor for y axis. (default <sup>3</sup> = $1.0$ )

Note: New coordinate (x, y) is computed from original coordinate (X, Y) by the following equation:

 $x = X \times FACX \times \cos(ANGX) + Y \times FACY \times \cos(ANGY)$  $y = X \times FACX \times \sin(ANGX) + Y \times FACY \times \sin(ANGY)$ 

Note: The values that the program memorized for default values, XORI, YORI, SCALE, SUBUS, and NSUBUS, are lost by the use of this option. Therefore the user cannot draw the same scaled figure by default.

# Option 10: Input FEM model (one card)

SMUL,	SMX, SMY	(3F10.0)
1~10	SMUL	Global weight factor (default $3 = 1.0$ )
11~20	SMX	Weight factor for <i>x</i> -coordinate (default $3 = 1.0$ )
21~30	SMY	Weight factor for <i>y</i> -coordinate (default $3 = 1.0$ )
The coordinate $(x_P, y_P)$ is computed from input value $(x, y)$ as		
$x_P = x \times \text{SMUL} \times \text{SMX}$		

 $y_P = y \times \text{SMUL} \times \text{SMY}$ 

Note 1. If unit 5 is specified for FEM data input in option 5, FEM data is put after this input.

Note 2. FEM model data must be input prior to other FEM data. All data (model, vector, tensor, or scalar) stored before this option are lost when this option is used.

# Option 11: Draw FEM model (one card)

FEM model shape is drawn with node number and element number. A more flexible drawing of FEM model shape can be drawn in option 22 by setting IFTYP = 4, and IDTYP = 6.

NNODE, NELM, LTP, PICH, SCALE, NSUBUS, SUBUS (315, F5.0, F10.0, 15, F10.0)							
$1 \sim 5$	NN	ODE Ni	NODE Flag on	node number			
		=0	: No number				
	_	=1	-5: Draw numb	er as shown be	low.		
		NNODE	1	2	3	4	5
		Comment	Bare number	Rectangular	Parenthesis	Semi-circle	Circle
		Example	120	120	(120)	(120)	(120)
6~10	NEI	LM Fla	ag on element n	umber			
		-0					
		=1	-5: Draw numb	er as shown ab	ove.		
11~15	LPT	ſ Li	ne type (See sec	(100 3.4)			
16~20	PIC	H Pit	tch (See section	3.4)			
21~30	SCA	ALE Sc	ale = data valu	ue correspondi	ng to 1 cm	in the figur	e (default <sup>2</sup> :
		Pr	ogram determin	es)			
31~35	NSU	UBUS Nu	umber of digits	after decimal	point for sc	ale axis of	model (See
		se	ctions 3.2 and 3	.8). (default <sup>1</sup> : t	he program d	etermines)	× ×
		No	ote. If SCALE	or SUBUS is	s not zero, a	nd NSUBU	S = 0, the
			nrogram uses	new default va	able for NSUI	RUS instead	of previous
			dafault value	new default ve			orprevious
26 . 45	OL II			11	• 1 41	$(1 \ c \ 1/2 \ d$	1
<i>3</i> 6~45	SUI	BUS Da	ita value corres	sponding to the	e axis length.	(default <sup>2</sup> : t	ne program
		de	termines)				

# Option 20: Input of vector

DMUL	, ITP, DMX,	, DMY (F10.0, I5, 2F10.0)
1~10	DMUL	Global weight factor (default <sup>3</sup> = $1.0$ )
11~15	ITP	When $ITP = 1$ , absolute value is used.
16~25	DMX	Weight factor for <i>x</i> -component. (default <sup>3</sup> = $1.0$ )
26~35	DMY	Weight factor for <i>y</i> -component. (default <sup>3</sup> = $1.0$ )

Note The program uses ( $x \times DMUL \times DMX$ ,  $y \times DMUL \times DMY$ ) instead of input value (x, y). Note. If unit 5 is specified for FEM data input in option 5, vector value are put after this input.

# Option 21: Add vector

Input in this section is add to previously stored vector and used. Input is quite the same with option 20.

# Option 22: Draw vector

A new frame is prepared and FEM model and vector are drawn there. At least two cards (subsections 1 and 5) is necessary.

(1) 基本データ			
IFTYP, IDTYP, LT <u>P1, PICH1, LTP2, PICH2, SCALE, SCALED, NSUBUS, SUBUS</u>			
NSUBL	JD, SUBUD	(2I5, 2(I5, F5.0), 2F10.0, 2(I5, F10.0))	
$1\sim 5$	IFTYP	Flag on FEM model drawing. (default <sup><math>1</math></sup> = 1)	
		=1: Draw all element shape	
		=2: Draw only exterior shape	
		=3: No FEM model shape	
		=4: Draw special form specified later.	
6~10	IDTYP	Flag on vector drawing (default <sup><math>1</math></sup> = 1)	
		=1: Draw all deformed element shape.	
		=2: Draw exterior shape	
		=3: Draw vector by arrow	
		=4: Special form in subsection 3. This function is convenient when	
		compares with test result, for example.	
		=5: Special form in subsection 4.	
		=6: Vector is not drawn. By this flag, the user can obtain various	
		FEM model figures. Scale for vector is not drawn if this flag is	
		used.	
11~15	LTP1	Line type for model shape (See section 3.4).	
16~20	PICH1	Pitch for model shape (See section 3.4).	
21~25	LTP2	Line type for vector (See section 3.4).	
26~30	PICH2	Pitch for vector (See section 3.4)	
31~40	SCALE	Scale for model shape = data value corresponding to 1 cm in the	
		figure (default <sup>2</sup> : Program determines)	
41~50	SCALED	Scale for vector = data value corresponding to 1 cm in the figure	
		(default <sup>2</sup> : Program determines).	
51~55	NSUBUS	Number of digits after decimal point for scale axis of model (See	
		sections 3.2 and 3.8). (default <sup>1</sup> : the program determines)	
		Note. If SCALE or SUBUS is not zero, and NSUBUS = 0, the	
		program uses new default value for NSUBUS instead of previous	
		default value.	
56~65	SUBUS	Data value corresponding to the axis length. (default <sup>2</sup> : the program	
		determines)	

		Note. If SCALE is not zero and SUBUS = $0$ , the program does not
		use previous value but a new value corresponding to new figure.
		(default <sup>2</sup> : the program determines)
66~70	NSUBUD	Number of digits after decimal point for scale axis of vector (See
		sections 3.2 and 3.8). (default <sup>1</sup> : the program determines)
		Note. If SCALED or SUBUD is not zero, and NSUBUD = $0$ , the
		program uses new default value for NSUBUD instead of
		previous default value.
$71 \sim 80$	SUBUD	Data value corresponding to the axis length of vector. (default <sup>2</sup> : the
		program determines)
		Note. If SCALED is not zero and $SUBUD = 0$ , the program does not
		use previous value but a new value corresponding to new figure.
		(default <sup>2</sup> : the program determines)

(2) Special form of model shape; Necessary only when IFTYP = 4

Model shape is drawn by connecting the points.

1) Number of points

NPT(I5) $1 \sim 5$  NPTNumber of points. $NPT \neq 0$ : |NPT| node numbers are input $NPT \leq 0$ : Input |NPT| coordinates

## 2) Node number; this card is necessary when NPT $\neq$ 0

IPT(J), J=1, NPT(16I5)16 node numbers in a card.IPT(J)Node number. When IPT(J) is positive, pen moves drawing the line,<br/>whereas when IPT(J) is negative, pen moves to the node | IPT(J)|<br/>without drawing line.

## 3) Coordinate; This card is necessary when NPT≤0

NPT, NUNIT, ICOD, LTYP, PITCH (415, F10.0)			
$1\sim 5$	NPT	Number of points.	
6~10	NUNIT	Unit number from which data is read. When 5, data follows after this	
		card.	
11~15	ICOD	Origin of coordinate	
		=1: Left bottom corner of frame	
		=2: Origin of FEM model	
16~20	LTYP	Line type for model shape line (See section 3.4)	
-----------	---------------------	--	
21~30	PITCH	Pitch for model shape line (See section 3.4)	
IPEN, 2	<u>X, Y</u> (I5, 21	F10.0) NPT cards	
$1\sim 5$	IPEN	Flag on pen movement	
		=2: Pen moves to $(X, Y)$ while drawing line.	
		=3: Pen moves to $(X, Y)$ without drawing line.	

#### (3) Special form of vector; necessary only when IDTYP = 4

When the user want to draw data such as test result in the figure so as to compare FEM analysis, the user can use by this option. Vector value at specified points are input.

NPT, II	LN, IMF	(315)
$1\sim 5$	NPT	Number of nodes whose vector value is specified.
6~10	ILN	Flag on the drawing method of specified vectors.
		=0: Draw symbol mark at the point, and connect these points by a line
		specified by LIN2 and PICH.
		=1: Draw symbol mark
11~15	IMK	Flag number of symbol mark (see section 3.7)
ND, XX	X, YY	(I5, 2F10.0) NPT cards
$1\sim 5$	ND	Node number
6~15	XX	<i>x</i> -component of the vector
16~25	YY	<i>x</i> -component of the vector

Note. vector component that the program keeps is replaced by XX and YY.

(4) Special form of vector; necessary only when IDTYP = 5

Points of specif	fied nodes are connected by the line.
NPT (I5)	
$1\sim 5$ NPT	Number of nodes
IPT(J), J=1, NPT	(16I5) 16 data per one card.
IPT(J)	Node number. When IPT(J) is positive, pen moves while drawing the
	line, whereas when IPT(J) is negative, pen moves to the node
	IPT(J)  without drawing line.

(5) Write vector; this card is not necessary when IDTYP = 6.



IPT(J)

(16I5) 16 data per one card. Totally NUMPLT data.

Node number. When IPT(J) is positive, pen moves while drawing the line, whereas when IPT(J) is negative, pen moves to the node |IPT(J)| without drawing line.

## Option 23: Overdraw vector

A new vector figure is overdrawn on the previous frame on which previous figures is already drawn. At least two cards (subsections 1 and 4) are necessary.

Only vector is drawn in this option, and none of frame, title, scale part, etc., is drawn because they are already drawn.

#### (1) Fundamentals

IDTYP,	LTP, PICH	SCALE (215, 2F10.0)
$1\sim 5$	IDTYP	Flag on type of vector drawing (default <sup><math>1</math></sup> = 1)
		=1: Draw all deformed element shape.
		=2: Draw exterior shape
		=3: Draw vector by arrow
		=4: Special form in subsection 2. This function is convenient when
		comparison with the test result is required, for example.
		=5: Special form in subsection 3.
6~10	LTP	Line type for model shape (See section 3.4).
11~20	PICH2	Pitch for model shape (See section 3.4).
21~30	SCALE	Scale for vector = data value corresponding to $1 \text{ cm}$ in the figure.
		SCALE is to be zero except in the following case. SCALE is to be
		nontrivial value only when option 60 is used just before this option,
		for example, sequence like option 22 (or option 23), option 60, and
		option 23 (this option). As explained in option 60, the use of option
		60 changes values of five variables, but they should be the same with
		previous figure for overdrawing. Among these variables, XORI and
		YORI are specified in option 1. SUBUS and NSUBUS are not used.
		The remaining variable, SCALE is specified here. If SCALE is input
		as zero, division by 0 occurs.

(2) Special form of vector; necessary only when IDTYP = 4Input in this section is the same with subsection 3 of option 20, therefore see it.

#### (3) Special form of vector; necessary only when IDTYP = 5

Input in this section is the same with subsection 4 of option 20, therefore see it.

#### (4) Write the value of vector

Input in this section is the same with subsection 5 of option 20, therefore see it.

## Option 30: Input of tenser

# ISTS, TMUL, ITP, TMX, TMY, TMXY (I5, F10.0, I5, 3F10.0)

 $1 \sim 5$  ISTS Flag on the positive direction of tenser

=0: Tension is positive

- =1: Compression is positive (See note below)
- =2: Compression is positive (See note below)
- Note. In the ordinary FEM analysis, tension is taken positive. In the soil mechanics, traditionally, compression is taken positive. In the latter case, signs of all component is changed, but in some textbook the notation that only the sign of normal stresses and strains are changed but shear component have the same positive directions. The user specify 1 for normal case and 2 for special case.



- $5 \sim 15$  TMUL Weight factor (default<sup>3</sup> 1.0). See note below
- $16 \sim 20$  ITP Flag on tenser
  - =0: Global coordinate system
  - =1: Local coordinate system pointing from node 1 to node 2, which appears in NASTRAN.
- $21 \sim 30$  TMX Weight factor for *x*-component. (default<sup>3</sup> = 1.0). See note below.
- $31 \sim 40$  TMY Weight factor for *y*-component. (default<sup>3</sup> = 1.0). See note below.
- $41 \sim 50$  TMXY Weight factor for *xy*-component. (default<sup>3</sup> = 1.0). See note below.
- Note. When ITP = 1, input data is converted first. For example input stress ( $\tau_{xx}$ ,  $\tau_{yy}$ ,  $\tau_{xy}$ ) is modified into  $\tau_{xx}$ ×TMUL×TMX,  $\tau_{yy}$ ×TMUL×TMY,  $\tau_{xy}$ ×TMUL×TMXY) When ISTS = 1, signs of  $\tau_{xx}$ ,  $\tau_{yy}$ , and  $\tau_{xy}$  is changed, and when ISTS = 2, signs of  $\tau_{xx}$  and  $\tau_{yy}$  is changed.

Note. If unit 5 is specified for FEM data input in option 5, vector is put after this input.

Note. POST2D requires tensor input. However, in some program, engineering strain is output instead of tensor strain. In this case, the user should use half weight factor for xy component; for example, TMXT should be 0.5 when TMX=TMY=1.

# Option 31: Add tenser

Input in this section is add to previously stored tenser and used. Input is quite the same with option 30.

# Option 32: Draw tenser

A new frame is prepared and FEM model and tenser are drawn there.

### (1) Fundamentals

IFTYP,	I <u>STYP, S</u>	CALE, SCALED, NSUBUS, SUBUS, NSUBUD, SUBUD, LTP1,
PITCH	(2I5, 2F	10.0, 2(I5, F10.0), I5, F10.0)
$1\sim 5$	IFTYP	Flag on FEM model drawing. (default <sup><math>1</math></sup> = 1)
		=1: Draw all element shape
		=2: Draw only exterior shape
		=3: No FEM model shape
		=4: Draw special form specified later.
6~10	ISTYP	Flag on drawing tenser (default <sup><math>1</math></sup> = 1)
		=1: $x$ - and $y$ -components are drawn in the direction of axes,
		respectively, by arrow, and off-diagonal (shear) component is
		drawn 45 degrees to x-axis.
		=2: Draw principal value by arrow in the principal direction.
		=3: Draw maximum shear component in the direction by arrow.
11~20	SCALE	Scale for model shape = data value corresponding to 1 cm in the
		figure (default <sup>2</sup> : Program determines)
21~30	SCALET	Scale for tenser = data value corresponding to 1 cm in the figure
		(default <sup>2</sup> : Program determines).
31~35	NSUBUS	Number of digits after decimal point for scale axis of model (See
		sections 3.2 and 3.8). (default <sup>1</sup> : the program determines)
		Note. If SCALE or SUBUS is not zero, and NSUBUS = 0, the
		program uses new default value for NSUBUS instead of previous
		default value.
36~45	SUBUS	Data value corresponding to the axis length. (default <sup>2</sup> : the program
		determines)
		Note. If SCALE is not zero and SUBUS = $0$ , the program does not
		use previous value but a new value corresponding to new figure.

46~50	NSUBUT	Number of digits after decimal point for scale axis of tenser (See
		sections 3.2 and 3.8). (default <sup>1</sup> : the program determines)
		Note. If SCALET or SUBUT is not zero, and NSUBUT = 0, the
		program uses new default value for NSUBUT instead of
		previous default value.
51~60	SUBUT	Data value corresponding to the axis length for vector. (default <sup>2</sup> : the
		program determines)
		Note. If SCALET is not zero and SUBUT = 0, the program does not
		use previous value but a new value corresponding to new figure.
61~65	LTP1	Line type for model shape (See section 3.4).
66~75	PICH1	Pitch for model shape (See section 3.4).

(2) Special form of model shape; Necessary only when IFTYP = 4

Model shape is drawn by connecting the points.

## 1) Number of points

NPT (I5)	
$1\sim 5$ NPT	Number of points.
	NPT≠0:  NPT  node numbers are input
	NPT≤0: Input  NPT  coordinates

2) Node number; this card is necessary when NPT $\neq 0$ 

IPT(J), J=1, NPT	(16I5) 16 node numbers in a card.
IPT(J)	Node number. When IPT(J) is positive, pen moves drawing the line,
	whereas when $IPT(J)$ is negative, pen moves to the node $ IPT(J) $
	without drawing line.

3) Coordinate; This card is necessary when NPT≤0

NPT, NUNIT, ICOD, LTYP, PITCH (4I5.F10.0)		
$1\sim 5$	NPT	Number of nodes.
6~10	NUNIT	Unit number from which data is read. When 5, data follows after this
		card.
11~15	ICOD	Origin of coordinate
		=1: Left bottom corner of frame
		=2: Origin of FEM model
16~20	LTYP	Line type for model shape line (See section 3.4)
$21 \sim 30$	PITCH	Pitch for model shape line (See section 3.4)

IPEN, X, Y(I5, 2F10.0)NPT cards $1 \sim 5$ IPENFlag on pen movement=2: Pen moves to (X, Y) drawing line.=3: Pen moves to (X, Y) without drawing line.

## Option 33: Overdraw tenser

A new tenser figure is overdrawn on the previous frame on which previous figures is already drawn. One card is necessary.

Only vector is drawn in this option, and none of the frame, title, scale part, etc., is drawn because they are already drawn.

ISTYP (I5)	
6~10 ISTYP	Flag on drawing tenser (default <sup><math>1</math></sup> = 1)
	=1: $x$ - and $y$ -components are drawn in the direction of axes,
	respectively, by arrow, and off-diagonal (shear) component is
	drawn 45 degrees to x-axis.
	=2: Draw principal value by arrow in the principal direction.
	=3: Draw maximum shear component in the direction by arrow.

## Option 34: Convert tenser into scalar and draws contour line

Compute scalar value as a result of suitable calculation of tenser components, and draw contours, etc. Since resulting data is treated as scalar quantities, default scale axis name is Excess p.p.

# (1) Types of scalar (one card)

ITYP (I5)	
$1\sim 5$ ITYP	Type of scalar
	=1: Maximum off-diagonal term such as maximum stress
	=2: Component normal to x-section such as $\tau_{xx}$
	=3: Component normal to y-section such as $\tau_{yy}$
	=4: Tangential component such as $\tau_{xy}$
	=5: Safety factor

# (2) Parameter for yield function; necessary only when ITYP = 5

IELMG, IPRT (2I5)

$1\sim 5$	IELMG	Number of groups which have the same yield criterion
16~20	IPRT	safety factor is printed when $IPRT = 1$

#### IELMG pairs of input is required for the following input

IS, IE, IYLD, INB		(415)	
$1\sim 5$	IS	Start element number	
6~10	IE	End element number. Element from element number IS to IE have the	
		same yield criteria.	
11~15	IYLD	Types of yield function.	
		=1: Mohr-Coulomb	
		=2: Mieses	
		=3: Dracker-Prager	
		=4: Central Electric Research Institute	
		=5: Cam-clay	
16~20	INB	Have sense when IYLD = 1; number of pairs of the combination of	
		yield condition.	

DUM(J), J=1, K (8F10.0)

DUM(J) Parameters depending on yield condition.

IYLD	K	Explanation				
1	2×INB	INB pairs of cohesion and internal friction angle (degree) are input. Minimum				
		safety factor against these yield condition is computed. See Figure below.				
		$\phi$ $\tau$ $\tau$ $\phi$				
		Yield condition: $\tau = c - \sigma \tan \phi$ (expression when tension is positive)				
		Safety factor: $\ell / \tau_r \circ \tau_r$ : radius of Mohr's circle				
2	2	DUM(1)=k, $DUM(2)=v$ (Poisson's ratio)				
		Yield condition: $\sqrt{3}\sigma_s = k$ , Safety factor: $k / (\sqrt{3}\sigma_s)$				
		$\sigma_s = \sqrt{\frac{\sigma_x^2 + \sigma_y^2 + \sigma_z^2}{2} + \tau_{xy}^2},  \sigma_m = \nu \left(\sigma_x + \sigma_y\right)$				
3	3	DUM(1)= cohesion, $DUM(2)$ = internal friction angle, $DUM(3)$ = $v$				
		(Poisson's ration)				
		Yield condition: $3\alpha\sigma_m + \sigma_s = K$				
		$\alpha = \frac{2\sin\phi}{\sqrt{2}(2-\sin\phi)},  K = \frac{6c\cos\phi}{\sqrt{2}(2-\sin\phi)}$				
		$\sqrt{3}(3 - \sin \phi) \qquad \sqrt{3}(3 - \sin \phi)$				
4	2	Safety factor. $K / (3u \sigma_m + \sigma_s)$				
4	3	DUM(1)= Snear strength, $\tau_R$ , DUM(2)= Tensile strength, $\sigma_t$ DUM(3)= $K$ (default <sup>3</sup> = 2.7)				
		DOM(3) = X (default = 2.7)				
		d <sub>min</sub>				
		$\tau_{\rm R}$				
		$\sigma_i $				
		Yield condition: $\left(\left(\frac{\tau}{\tau_R}\right)^2 = 1 - \frac{\sigma}{\sigma_t}\right)$ , Safety factor: $\left(\frac{Kd_{min}}{\sigma_t - \tau_R}\right)$				
5	3	DUM(1)=m $DUM(2)=k$ $DUM(3)=v$				
		Yield condition: $(\sigma_m e^{\frac{\sqrt{2}\sigma_s}{m\sigma_m}} = k)$ , Safety factor: $(k / \sigma_m e^{\frac{\sqrt{2}\sigma_s}{m\sigma_m}})$				

# (3) Draw contour line

The following input is same as for option 42.

## Option 40: Input scalar

IPDTA	, PMUL, IPT	(I5, F10.0, I5)
$1\sim 5$ IPDTA		Flag on the definition of scalar
		=0: It is defined at element, therefore total number is NUMEL.
		=1: It is defined at node, therefore total number is NUMNP.
5~15	PMUL	Weight factor (default <sup>3</sup> = $1.0$ )
16~20	ITP	When $ITP = 1$ , absolute value is used.

Note. If unit 5 is specified for FEM data input in option 5, scalar is put after this input.

# Option 41: Add scalar

Input in this section is add to previously stored scalar and used. Input is quite the same with option 40.

PMUL, IPT(F10.0, I5) $1 \sim 10$ PMULWeight factor (default<sup>3</sup> = 1.0) $11 \sim 15$ ITPWhen ITP = 1, absolute value is used.

Note. If unit 5 is specified for FEM data input in option 5, scalar is put after this input.

# Option 42: Draw contour line

A new frame is prepared and FEM model and scalar are drawn there as contour line or actual number.

# (1) Fundamentals

IFTYP, SCALE, NSUBUS, SUBUS, ICTP, IVL, LTP1, PITCH		
(I5, F10	).0, I5, F10.0	), 3I5, F10.0)
$1\sim 5$	IFTYP	Flag on FEM model drawing. (default <sup><math>1</math></sup> = 1)
		=1: Draw all element shape
		=2: Draw only exterior shape
		=3: No FEM model shape
		=4: Draw special form specified later.
6~15	SCALE	Scale for model shape = data value corresponding to 1 cm in the
		figure (default <sup>2</sup> : Program determines)
16~20	NSUBUS	Number of digits after decimal point for scale axis of model (See
		sections 3.2 and 3.8). (default <sup>1</sup> : the program determines)
		Note. If SCALE or SUBUS is not zero, and NSUBUS = 0, the
		program uses new default value for NSUBUS instead of previous
		default value.
21~30	SUBUS	Data value corresponding to the axis length. (default <sup>2</sup> : the program
		determines)
		Note. If SCALE is not zero and SUBUS = $0$ , the program does not
		use previous value but a new value corresponding to new figure.
31~35	ICTP	Method to compute nodal value when $IPDTA = 0$ , or element data is
		input.
		=0: Method 1 in section 3.9 ( $z=ax+by+c+dxy$ ).
		=1: Method 2 in section 3.9 (Weighted average).
		=2: Method 3 in section 3.9 ( $z=ax+by+c$ ).
36~40	IVL	Flag to specify nodal value when $IPDTA = 0$ . When $IPDTA = 0$ ,
		extrapolate is used to compute nodal value near the boundary, which
		may reduce accuracy. The user may specify exact numbers at these
		nodes. When IVL>0, the user can specify IVL nodal data directly
		following the description in subsection 3.
41~45	LTP1	Line type for model shape (See section 3.4).
46~55	PICH1	Pitch for model shape (See section 3.4).

(2) Special form of model shape; Necessary only when IFTYP=4

Model shape is drawn by connecting the points.

1) Number of points	
NPT (I5)	
$1\sim 5$ NPT	Number of points.
	NPT≠0:  NPT  node numbers are input
	NPT≤0: Input  NPT  coordinates

2) Node number; this card is necessary when NPT $\neq 0$ 

IPT(J), J=1, NPT	(16I5) 16 node numbers in a card.
IPT(J)	Node number. When IPT(J) is positive, pen moves with drawing the
	line, whereas when $IPT(J)$ is negative, pen moves to the node $\mid$
	IPT(J) without drawing line.

3) Coordinate; This card is necessary when NPT≤0

NPT, NUNIT, ICO	<u>DD, LTYP, PITCH</u> (4I5.F10.0)	
$1\sim 5$ NPT	Number of nodes.	

6~10	NUNIT	Unit number from which data is read. When 5, data follows after this
		card.
11~15	ICOD	Origin of coordinate

=1: Left bottom corner of frame

=2: Origin of FEM model
-------------------------

- $16 \sim 20$  LTYP Line type for model shape line (See section 3.4)
- $21 \sim 30$  PITCH Pitch for model shape line (See section 3.4)

ſ				
l	IPEN, 2	X, Y	(I5, 2F10.0)	NPT cards
$1\sim 5$ IPEN Flag o		N Flag of	n pen movement	
			=2: Pe	n moves to (X, Y) drawing line.
			=3: Pe	n moves to (X, Y) without drawing line.

(3	) Nodal value; r	necessary only	y when IPD1	A = 0 and IVL>0
----	------------------	----------------	-------------	-----------------

IND, V	AL (I5, F1	0.0) Totally IVL cards
$1\sim 5$	IND	Node number
6~10	VAL	Scalar value. Note that zero cannot be input.

# (4) Fundamentals for contour

NCNT,	IVAL, IDE	<u>C, IMK, ILN, PMUL</u> (515, F10.0)
$1\sim 5$	NCNT	Number of contour blocks. One block of contour is drawn with same
		line type. When NCNT = 0, contour line is not drawn.
6~10	IVAL	Flag to write scalar value
		=-3: Draw values for all nodes or elements. When $IPDTA = 0$ , it is
		written so that the center of number coincide with the center of
		element. When $IPDTA = 1$ , number is written at the right upper
		part of node.
		=-2: Draw symbol mark specified by IMK at all nodes or elements.
		=-1: Draw symbol mark specified by IMK and data value at all nodes
		or elements.
		=0: Neither symbol mark nor number is written.
		>0: Draw numbers at the IVAL nodes or elements, which is specified
		in subsection (4).
11~15	IDEC	Number of digits after decimal point for scalar value (See sections
		3.6).
16~20	IMK	Number to specify type of the symbol mark (see section 3.7).
21~25	ILN	Flag to draw contour line.
		0: Smooth line by spline interpolation.
		1: Piecewise linear line
26~35	PMUL	Number by which scalar value on the contour line is multiplied
		$(default^3 = 1.0)$

# (5) Value of contour line

Input in this subsection is to be repeated NCNT times.

ICONT	, LINE, PIT	CH, ALINE, INBR, NDEC, SIZE (215, 2F10.0, 215, F10.0)
$1\sim 5$	ICONT	Number of contour lines, which is to be ICONT≤30. When ICONT
		=-1, contour lines with same difference in contour value.
6~10	LINE	Line type for contour (See section 3.4).
11~20	PITCH	Pitch for contour (See section 3.4)
21~30	ALINE	Distance between the numbers on contour line. It is not drawn when
		ALINE = 0.
31~35	INBR	Flag on the drawing the value of the contour line at the ends for open
		curve.
		=0: Not written
		=1: Both beginning and end

		=2: At the beginning
		=3: At the end
36~40	NDEC	Number of digits after decimal point for number on contour line (see
		section 3.6).
41~50	SIZE	Size of number on contour line default <sup><math>3</math></sup> = SIZEN/2).

CONT(I), I=1, ICONT (8F10.0) Necessary only when ICONT>0.

CONT(I) Value of contour line. Eight data per a card. Totally ICONT data.

CMIN,	CMAX, CIN	(3F10.0) Necessary only when ICONT =-1. One card.
$1\sim 5$	CMIN	Minimum value of contour line.
$11 \sim 20$	CMAX	Maximum value of contour line.
21~30	CINT	Number of contour lines, which is to be less than or equals to 30.
	$\frac{\text{CMIN},}{1 \sim 5}$ $11 \sim 20$ $21 \sim 30$	$\frac{\text{CMIN, CMAX, CIN}}{1 \sim 5 \text{ CMIN}}$ $11 \sim 20 \text{ CMAX}$ $21 \sim 30 \text{ CINT}$

Note. Contour line start from CMIN and 30 contour line is drawn when CINT>30.

(6) Element or node where data value is written; necessary only when IVAL>0 16 data in a card.

IPT(I), I=1, IVAL(16I5)IPT(I)Node or element numbers.

# Option 43: Overdraw of scalar

A new scalar figure is overdrawn on the previous frame on which previous figures is already drawn. At least two cards (subsections 1 and 4) are necessary.

Only scalar is drawn in this option, and none of frame, title, scale part, etc., is not drawn because they are already drawn.

#### (1) Nodal value; necessary only when IPDTA = 0 and IVL>0

Input in this section is the same with subsection (3) of option 42. Note that the value of IVL is the same with previous option 42 input.

(2) Fundamentals for contour

Input in this section is the same with subsection (4) of option 42.

(3) Value of contour line

Input in this section is the same with subsection (5) of option 42.

(4) Element or node where data value is written; necessary only when IVAL>0 Input in this section is the same with subsection (6) of option 42.

### Option 44: Convert scalar into vector

The scalar is converted into vector by this option. The scalar can be drawn in the direction perpendicular to the plane of the model in the 3-dimensional figure as shown in the figure below.



Suppose that the user want to draw the above figure. Here x-y plane is the plane of the FEM model, and z-axis is a direction into which scalar is drawn. First, the user changes the coordinate of the model by option 9. Then, use of this option gives vector value. After that, use of option 22 or 23 will create 3-dimensional figures. Note that scalar value is to be specified in node, not in element in order to use this option.

ANGLI	E, FACT	(2F10.0)
1~10	ANGLE	angle between original x-axis and z-axis.
11~20	FACT	Multification factor. (default <sup>3</sup> = $1.0$ )

Note: The values that the program memorized for default values, XORI, YORI, SCALE, SUBUS, and NSUBUS, are lost by the use of this option. Therefore the user cannot draw the same scaled figure by default.

# Option 50: Draw segment and comment

Comment lines and/or various lines and comment, which can be used for legend, is drawn in this option. The followings are an example of the use of this option. Two pairs of data is required in this option: fundamental data first, then comment cards.

• (	Case-1	Case-1
(	Case-2	Case-2
(	Geo.Scale	Geo.Scale

Note: solid circle indicate the position of the coordinate to be specified.

N, AL,	X, Y, DX, E	DY, SIZE, ANGLE (15, F5.0, 6F10.0)
$1\sim 5$	Ν	Absolute value denotes number of comment lines, and sign indicate
		the choice of origin. If $N$ is positive, $(X, Y)$ is coordinate whose
		origin is the left bottom corner of the frame, and if $N$ is negative, (X,
		Y) is coordinate whose origin is the same with FEM model.
6~10	AL	Length of line in front of comment line in cm. When $AL \le 0$ , segment
		is not drawn. When AL>0, (X, Y) is the coordinate at the beginning
		of the first segment, and when $AL \le 0$ (X, Y) is the coordinate at the
		beginning of the comment statement. Usually $AL = 2.5$ gives good
		looking figure.
11~20	Х	<i>x</i> -coordinate of the first comment line in cm.
21~30	Y	y-coordinate of the first comment line in cm.
31~40	DX	x increment of the second and subsequent lines in cm.
41~50	DY	y increment of the second and subsequent lines in cm.
		Let coordinate at first comment line is $(x_0, y_0)$ , then coordinate at
		<i>I</i> -th comment line is given by $(x_0+(I-1)\times DX, y_0+(I-1)\times DY)$ .
		When DX=DY=0, then the program replace DY into -2×SIZE,
		which usually gives good looking line spacing.
51~60	SIZE	Size of character for comment in cm. (default <sup><math>3</math></sup> = SIZEN)
61~70	ANGLE	Angle from the x-axis in degree.
LIN, P	TH, NC (IS	5, F5.0, A64)  N  cards.
$1\sim 5$	LIN	Flag number for line type (see section 3.4).
6~10	PTH	Pitch for line (see section 3.4).
11~74	NC	Comment within 64 characters. See section 3.5 for control character.

## Option 51: Symbols for boundary condition

Symbols in this option is over drawn in the previous frame.

#### (1) Fundamentals

	IT, NDATA	, IT1, IT2	, ANGLE, A	A1, A2, A3	, A4, A5	(4I5, 6F10.0)
--	-----------	------------	------------	------------	----------	---------------

 $1 \sim 5$  IT Flag number for symbols. In the following figure, solid small circle indicates the coordinate to be specified as (X, Y) in the following input, and is not drawn in the actual figure.



- $6 \sim 10$  NDATA Number to specify the type of symbol mark.
- $11 \sim 15$  IT1 Flag number to specify the coordinate of symbol mark.

=0: Specified as node number.

=1: Specified as coordinate.

16 $\sim$ 20 IT2 Flag number to indicate coordinate (valid only when IT1=1) =0: same as coordinate system in FEM model.

=1: Distance from the left bottom corner of the frame in cm.

- $21 \sim 30$  ANGLE Angle from x-axis in degree. When ANGLE = 0, symbol looks as shown in the above figure.
- $31 \sim 80$  A1, A2, A3, A4, A5 Parameter to specify the size of the symbol in cm or degree. (see figures in the next page).

A6, A7	(2F10.0)	This card is required only when $IPT = 15$ or $16$
$1 \sim 20$	A6, A7	Parameter to specify the size of the symbol in cm or degree. (see
		figures in the next page).

(2) Node number; This card is required only when IT1 = 0 and NDATA>0 16 data in a card.

IPT(J), J=1, NDATA (16I5) IPT(J) Node numbers.

### (3) Coordinate: Necessary only when IT1 = 1 and NDATA>0

X, Y (2F10.0)

1~20 X, Y

Coordinate from left bottom corner (IT2 = 1) in cm, or the same system with FEM model (IT2 = 0)

							5					
IT	1	2	3	4	5-6	7-8	9-12	13	14	15	16	17
A1	0.3	0.3	0.3	0.3	0.3	0.3	0.5	0.2	0.3	0.3	0.2	
A2		0.1		0.1	1.0	1.0	0.2	0.6	0.6	0.6	0.6	
A3		0.5		0.5	0.2	0.2	45.	0.1	1.0	1.0	0.1	
A4						0.0	0.1	1.0	1.0	1.0	1.0	1.0
A5						0.0			1.0	1.0	1.0	0.3
A6										2×A3	2×A3	
A7										90.	135.	

Default value for symbol marks









Axis is not drawn when angle=999.

Z <u>₹</u>A5

Х

# Option 52: Draw segment and arc

Symbols in this option is over drawn in the previous frame.

FUNUAINEINAIS
---------------

NCD, I	TYP, ICTYI	P, LIN, PICH, SNBR, SMK, SL1, SL2, DIS (415, 6F10.0)
$1\sim 5$	NCD	Number of segments and arcs.
6~10	ITYP	Flag number indicating the type of symbol.
		=1: Draw segment by specifying start and end coordinate.
		=2: Draw segment by specifying the coordinate at the start point and
		segment length and angle.
		=3: Draw arc.
11~15	ICTYP	Flag number for coordinate system
		=0: Same with FEM model.
		=1: Distance from left bottom corner of the frame in cm.
16~20	LIN	Line type (See section 3.4)
21~30	PICH	Pitch (See section 3.4)
31~40	SNBR	Size of numerals or characters in cm (default <sup><math>3</math></sup> = SIZEN)
41~50	SMK	Diameter of solid circle at the end of the segment in cm. $(default^3 =$
		0.15). See sub-section (2) and (3).
		direction of segment
51~60	SL1	Length of segment that is perpendicular to the segment or arc and is
		drawn to the left of the direction of segment. See sub-section (2) and
		(3) as well. (default <sup>1</sup> = $0.5 \text{ cm}$ )
61~70	SL2	Length of segment that is perpendicular to the segment or arc and is
		drawn to the right of the direction of segment. See sub-section (2)
		and (3) as well. (default <sup><math>1</math></sup> = 0.5 cm)
$71 \sim 80$	DIS	Distance between number and segment (or arc) (default <sup>3</sup> = $SNBR/2$ )

(2) Draw segment; This card is necessary only when ITYP = 1 or 2. Totally NCD cards

ISEG, ISYM, INBR	A, NDEC, XS, YS, XE, YE, FLT (415, 5F10.0)
$1\sim 5$ ISEG	Flag on line type and symbols at the end of segment. 10th and 1st
	digit have different meaning.
	1-st digit

- =0: No segment
- =1: Segment only
- =2: Segment and arrow
- =3: Segment and arrow (inner direction)
- =4: Small solid circle at the end (radius = SMK)

#### 10-th digit

- =0: Nothing to add
- =1: Draw segment perpendicular to original segment whose length are SL1 and SL2.





- $6\sim 10$  ISYM Flag on the symbol at the ends of segment
  - =0: Both ends
  - =1: Start point only
  - =2: End point only
- $11 \sim 15$  INBR Flag to specify the position of numbers and/or character with respect to segment.
  - =0: No numbers nor characters
  - =1: Draw number in the right side of the segment.
  - =2: Draw number in the left side of the segment.
  - =3: Draw number at the center of the segment.



- =4: Draw number at the center of the segment. If length of the number is larger than the length of the segment, number is drawn in the right hand side of the segment.
- =5: Draw number at the center of the segment. If length of the number is larger than the length of the segment, number is drawn in the left hand side of the segment.
- =6: Draw character in the right side of the segment.
- =7: Draw character in the left side of the segment.
- =8: Draw character at the center of the segment.
- =9: Draw character at the center of the segment. If length of the number is larger than the length of the segment, character is

drawn in the right hand side of the segment.

		=10: Draw character at the center of the segment. If length of the
		number is larger than the length of the segment, character is
		drawn in the left hand side of the segment.
16~20	NDEC	Number of digit after decimal point. (See section 3.6. $default^1 = -1$ )
		or number of character depending on INBR.
$21 \sim 30$	XS	x-coordinate of start point. Unit system depends on ICTYP.
31~40	YS	y-coordinate of start point. Unit system depends on ICTYP.
41~50	XE	x-coordinate of end point or length of segment depending on ITYP.
		Unit system depends on ICTYP. see YE.
51~60	YE	When $ITYP = 1$ , y-coordinate of end point. Unit system depends on
		ICTYP. When ITYP = 2, angle of segment in degree from $x$ -axis.
61~70	FLT	Number to be drawn when 6>INBR>0.
CHR	(A80)	
1~80	CHR	Character to be drawn when INBR>5. NDEC number of characters

(3) Draw arc; this card is necessary only when ITYP = 3. Totally NCD cards.

from the beginning are drawn.

ISEG, ISYM, INBR, NDEC, XS, YS, RAD, AS, AE, FLT (415, 6F10.0)
$1\sim 5$ ISEG Flag number for types of arc and symbols at the ends of arc. Both
10-th and 1-st digit have different meanings.
1-st digit
=0: No arc.
=1: Draw only an arc.
=2: Draw an arc and arrow mark.
=3: Draw an arc and arrow mark (interior direction).
=4: Draw arc and solid small circle at the ends whose radius is
SMK.
10-th digit
=0: Nothing to add.
=1: Draw segment at both ends which are perpendicular to the arc
and whose lengths are SL1 and SL2.



- 6~10 ISYM Flag number on the symbol at the end of the arc.
  - =0: Both ends.
  - =1: Only start point.
  - =2: Only end point.

11~15 INBR

- =0: No number
- =1: Draw number at the exterior side to arc and horizontal direction.

Flag to specify the position of number with respect to the arc.

- =2: Draw number at the interior side to arc and horizontal direction.
- =3: Draw number at the center of the arc which directs to the center or circle.
- =4: Draw number at the exterior side of the arc which directs to the center or circle.
- =5: Draw number at the interior side of the arc which directs to the center or circle.
- =6: Draw character at the exterior side to arc and horizontal direction.
- =7: Draw character at the interior side to arc and horizontal direction.
- =8: Draw character at the center of the arc which directs to the center or circle.
- =9: Same above except that character is drawn at the exterior side.
- =10: Draw character at the interior side of the arc which directs to the center or circle.



- $16 \sim 20$ Number of digit after decimal point. (See section 3.6. default<sup>1</sup> = -1) NDEC or number of character depending on INBR.
- XS  $21 \sim 30$ x-coordinate. See YS

 $31 \sim 40$ YS y-coordinate at the center of the arc. Unit system depends on ICTYP. RAD

- $41 \sim 50$ Radius of arc in cm.
- 51~60 AS Angle from *x*-axis at the start point. Positive in clockwise direction.
- $61 \sim 70$ AE Angle from *x*-axis at the end point.
- $61 \sim 70$ FLT Number to be drawn when 6>INBR>0.

CHR	(A80)
$1 \sim 80$	CHR

Character to be drawn when INBR>5. NDEC characters from the beginning are drawn.

# Option 53: Draw symbol mark and comment

N, ICT	N, ICTYP, SIZE, SIZEM, DIST (215, 3F10.0)				
$1\sim 5$	Ν	Number of comment lines.			
6~10	ICTYP	Flag number for the coordinate system			
		=0: Same as FEM model.			
		=1: Distance from the left bottom corner of the frame in cm.			
11~20	SIZE	Size of the character in cm. (default <sup><math>3</math></sup> = SIZEN)			
21~30	SIZEM	Size of symbol mark in cm. (default <sup>3</sup> = $SIZEN/2$ )			
31~40	DIST	Distance between the center of the symbol mark and comment line in			
		cm.			
IMK, IPOS, X, Y, ANGLE, COM (215, 3F10.0, A40) N cards.					

,	, .,.		
$1\sim 5$	IMK	Number indicating the type of symbol mark. See section 3.7	
6~10	IPOS	Flag number indicating the position with respect to the symbol mark	ζ.
		=0: right hand side. IPOS=1	
		=1: Above the symbol IPOS=2 IPOS=0	
		=2: Left side IPOS=3	
		=3: Below the symbol.	
		Note: Direction depends on the local coordinate specified	by
		ANGLE.	
11~20	Х	x-coordinate. See Y	
21~30	Y	y-coordinate at the center of the symbol mark. Unit system depen	lds
		on ICTYP.	
31~40	ANGLE	Tilted angle of symbol in degree.	
41~80	COM	Comment within 40 character, among which nontrivial part is drawn	1.

# Option 54: Draw coordinate axis

Draw coordinate axis at an arbitrary position. Two cards are required.

IAXT,	ICOD, INBT	T, NDEC, XCOD, YCOD, XCOR, SVAL, EVAL (415, 5F10.0)
$1\sim 5$	IAXT	Flag number indicating the scale of the axis.
		=0: Same with FEM model.
		=1: Same with vector
		=2: Same with tensor
		=3: Arbitrary scale specified in the next card.
6~10	ICOD	Flag number indicating the coordinate system of the start coordinate
		(XCOD, YCOD) specified later.
		=0: Same with FEM model.
		=1: Distance from the left bottom corner of the frame in cm.
11~15	INBT	Flag number indicating the position of the axis number and tic with
		respect to coordinate axis, which is specified by a number with 3
		digits among which each digit have different meaning.
		1-st digit: tic
		=0: Tic is written in the contour clockwise direction of the axis.
		=1: Tic is written in the clockwise direction of the axis.
		=2: Tic is written in both directions of the axis.
		10-th digit: axis number
		=0: Axis number is written in the contour-clockwise direction from
		the axis.
		=1: Axis number is written in the clockwise direction from the axis.
		100-th digit: method to draw axis number
		=0: Number is parallel to the axis.
		=1: Number is perpendicular to the axis.
$16 \sim 20$	NDEC	Number of digits after the decimal point of the axis number. See
		section 3.6.
$21 \sim 30$	XCOD	x-coordinate. See YCOD
31~40	YCOD	y-coordinate of the point whose value is XCOR along the axis. Unit
		system depends on ICOD. Axis or its elongation will path this point.
41~50	XCOR	The value on the axis whose position is (XCOD, YCOD). It need not
	<b>GT</b> 1 + <b>T</b>	be between SVAL and EVAL.
$51 \sim 60$	SVAL	Value of start point of the axis. See EVAL
61~70	EVAL	Value of end point of the axis.
		Note. It is not necessary that SVAL≤EVAL. If the user want to draw

the same axis changing the location of the number, exchange SVAL and EVAL and set ANGAX = ANGAX + 180.

ANGAX, SLEN, SNLEN, SL (4F10.0)

1~10	ANGAX	Angle in degree between the x-axis and the direction of axis from
		SVAL to EVAL.
11~20	SLEN	Data value corresponding the distance between tics.
$21 \sim 30$	SNLEN	Data value corresponding the distance between axis number. The
		ratio SNLEN / SLEN must be integer.
31~40	SL	Scale of coordinate axis, i.e., data value corresponding to 1 cm in the
		figure. The value is valid only when $IAXT = 3$ .

# Option 55: shading of region

Specified region is shaded by tilted segment or symbol marks. The region is specified as polygon.

(1)	Fundamental	data
-----	-------------	------

ĺ	N, ITY	P, IFTP, IFN	I, LIN1, PICH1, ANGLE, DSTNCE, IMK, SIZE, LIN2, PICH2
	(515, 31	F5.0, 2(I5, F5	5.0))
	$1\sim 5$	Ν	Number of polygon when $ITYP = 1$ , 2, and 3, or number of element
			when $ITYP = 4$ and 5.
	6~10	ITYP	Flag number indicating the method to specify the coordinate of the
			polygon.
			=1: Specified by node number.
			=2: Specified by coordinates in which coordinate system is in $cm$
			whose origin is left bottom corner of the frame.
			=3: Given by coordinate (same coordinate system with FEM model)
			=4: Specify element (original shape is shaded)
			=5: Specify element (deformed shape is shaded). Latest deformed
			shape used in Option 22 or 23 is shaded.
	11~15	IFTP	Number specifying the type of shade.
			=±1: Tilted line
			=±2: Symbol mark
			=±3: Symbol mark
			IF IP=±1 IF IP=±2 IF IP=±3
			Note: Positive value is used for convex shape, and negative value is
			used for concave shape. Negative value can also be used for
			convex shape, but takes more time.
			Note: Tilted lines are drawn with the angle ANGLE from <i>x</i> -axis, and
			distance between lines is DSTNCE. Symbol marks are drawn
			along the fictitious line. Types of symbol mark is defined by IMK.
			When IFTP $=\pm 3$ , the distance between fictitious lines are set

 $16 \sim 20$  IFM Flag for drawing the exterior frame of the shaded region. If 0, not

 $\sqrt{3}/2$ ×DSTNCE so that distance between the marks are equal to

each other.

		drawn, and if 1, drawn.
21~25	LIN1	Flag number indicating the line type. See section 3.4.
26~30	PICH1	Pitch for line. See section 3.4.
31~35	ANGLE	Tilted angle of (fictitious) line in degree from <i>x</i> -axis
36~40	DSTNCE	Distance between lines or symbol marks in cm. (default <sup>3</sup> = $SIZEN/2$ )
41~45	IMK	Flag number indicating the symbol mark. See section 3.7.
46~50	SIZE	Size of symbol mark in cm. (default <sup>3</sup> = SIZEN/4)
51~55	LIN2	Flag number indicating the line type to be used for exterior shape of
		shaded region. See section 3.4.
56~60	PICH2	Pitch for line to be used for exterior shape of shaded region. See
		section 3.4

(2) Node numbers; This card is required only when ITYP = 1

IPT(I), I=1, N	(16I5)	16 data per one card.
----------------	--------	-----------------------

IPT(I) Node numbers in the sequential order to build polygon. Since start and end node are the same, one of them is sufficient to identify.

#### (3) Coordinates; This card is required only when ITYP = 2 or 3

Totally N cards are required. Since start and end points of the polygon is the same, only one of them is required to specify.

Coordinate. Coordinate system depends on ITYP; unit in cm is to be used when ITYP = 2.

(4) Scale for vector; This card is required only when ITYP = 5

SCALED (F10.0)

 $1 \sim 10$  SCALED Scale for vector = value corresponds to 1 cm in the figure. (default = previous value)

(5) Element number; This card is required only when ITYP = 4 or 5 16 data per one card.

IPT(J), J=1, NDATA(16I5)IPT(J)Element numbers.

Arbitrary figure can be drawn by this option by connecting the specified points.

(1) Fundamentals N, ICOD (215)	
$1\sim 5$ N	Number of groups of dots
6~10 ICOD	Flag number indicating the coordinate system.
	=0: Same as FEM model
	=1: Distance in cm from the left bottom corner.

## (2) Dots

Input in this subsection should be repeated N times.

NPNT,	LIN, PITCH	I, MK, SIZE, FMT (215, F10.0, I5, F10.0, A20)
$1\sim 5$	NPNT	Number of dots which should be less than or equals to 100.
6~10	LIN	Flag number indicating the line type. See section 3.4.
11~20	PITCH	Pitch for line. See section 3.4.
21~25	MK	Flag number indicating the symbol mark. See section 3.7.
36~45	SIZE	Size of symbol mark in cm.
46~65	FMT	FORMAT for reading the group of dots.

X(I), Y(I), I=1, NPNT FMT

X(I), Y(I) Coordinate at each dot.

## Option 60: Blow up

Particular rectangular region is blow up and draw by this option. This function becomes valid after this option.

IBL, X	MIN, XMAX	K, YMIN, YMAX (I5, 4F10.0)
$1\sim 5$	IBL	Flag number for the use of blow up function.
		=0: Do not use blow up or cancel previously defined blow up.
		=1: Use blow up function. The following data is to be specified in this
		case.
6~15	XMIN	See XMAX
16~25	XMAX	Minimum and Maximum x-coordinates. Coordinate system is the
		same with FEM model.
26~35	YMIN	See YMAX
36~45	YMAX	Minimum and Maximum y-coordinates. Coordinate system is the
		same with FEM model.

- Note 1: Values of 5 variables, XORI, YORI, SUBUS, NSUBUS, and SCALE, whose values are memorized in the program, are changed by the use of this option. If the user cancel blow up option by the use of IBL = 0, values before the use of this option are again assigned to the previous value.
- Note 2: Identification of the element which locates in the region or not is made by the use of the coordinate at the center of the element or nodal coordinate. When drawing the shape of the element, a segment connecting tow nodes is drawn only when the coordinates of two nodes lie within the specified region. In the case for drawing the tensor value or element number, they are drawn only when the coordinate at the center of the element lies within the specified region.

## Option 61: Mask

The followings will not be drawn in the rectangular region:

1) Node number and element number

- 2) Vector
- 3) Scalar
- 4) tensor

IPCUP (I5)

 $1 \sim 5$  IPCUP Number of rectangular regions by which figures are masked.

#### XPCMIN(I), XPCMAX(I), YPCMIN(I), YPCMAX(I) (4F10.0)

IPCUP cards are required.

 $1 \sim 10$  XPCMIN(I) See XPCMAX

- $11 \sim 20$  XPCMAX(I) Minimum and maximum *x*-coordinate. Coordinate system is the same with FEM model.
- 21 $\sim$ 30 YPCMIN(I) See YPCMAX
- $31 \sim 40$  YPCMAX(I) Minimum and maximum *y*-coordinate. Coordinate system is the same with FEM model.
- Note: Nodal coordinate and/or coordinate at the center of element is used to identify the existence in the specified region.

# Option 70: Rewind unit IFILE

IFILE is an unit number to read the result of FEM analysis, which is specified in Option 1. This unit is rewineded by the use of this option. No control card is required.

# Option 71: Skip lines in unit IFILE

The pointer in unit IFILE, specified in option 1 as the unit number to read the result of FEM analysis, is moved by ISKIP lines in order to read the data. This option is used to skip unnecessary lines in this unit.

ISKIP	(I5)	
$1\sim 5$	ISKIP	Numł

Number of lines to be skipped.

# Option 72: Pen number and line width

Default value of the pen number is 1 and line width is 0.02cm. This can be changed by this option. Here, specification of line width is meaningless in the EPSF version.

One control card is required in this option.

	NPEN1,	, NPEN2,	NPEN3, NPEN4, NPEN5, NPEN6, NPEN7, NPEN8, NPEN9,
	NPEN1	0, L1, L2, L	<u>.3, 1</u> 4, L5, L6 (1615)
	$1\sim 5$	NPEN1	Pen number for drawing the title.
	6~10	NPEN2	Pen number for drawing scale axis.
1	11~15	NPEN3	Pen number for drawing scale axis number.
]	16~20	NPEN4	Pen number for drawing scale axis name.
2	$21 \sim 25$	NPEN5	Pen number for drawing FEM model.
2	$26 \sim 30$	NPEN6	Pen number for drawing for vector.
	31~35	NPEN7	Pen number for drawing for tensor.
	36~40	NPEN8	Pen number for drawing contour line.
Z	41~45	NPEN9	Pen number for drawing for others such as character and numbers.
Z	46~50	NPEN10	Pen number for drawing the figure in Options 50 to 55.
4	51~55	L1	Line width for drawing the title.
4	$56 \sim 60$	L2	Line width for drawing scale axis name.
(	61~65	L3	Line width for drawing scale axis number.
(	$66 \sim 70$	L4	Line width for drawing scale axis.
7	71~75	L5	Line width for drawing the others such as character and number.
7	76~80	L6	Line width for drawing the symbols in options 50 to 55.
### 6 OUTPUT

Both unit 6 and 7 are used as output device. Unit 6 is used to echo and some information of work. Unit 7, named "plt007.ai" is an actual output which is equivalent to Illustrator data or EPSF file. The program uses units 27 and 29 for work.

#### 6.1 Output in unit 6

Fundamental quantities in input data is echoed. In addition, some warnings and error massages are printed. Basically, the program assumes that the user prepare input data correctly, check of error in input data is hardly conducted. Serious error check is only the inconsistency of the definition of element node.

The program is developed using so called dynamic allocation system; one big array is devided and used into various small arrays. Therefore, there is no limitation for the number of nodes and elements. However, if the total required array size exceeds prepared size, the program write the following massage and terminates.

===== ERROR ===== SHORTAGE FOR DYNAMIC ALLOCATION AREA AT OPTION=

REQUIRED AREA =nnnnn

PREPARED AREA =mmmmm

----- PLEASE CONSULT THE PROGRAMMER -----

where denotes option number, nnnnn is a size the program requires whereas mmmmm is prepared size. This problem can be solved by enlarging the number MAXARA specified in the PARAMETER statement at the beginning of the main program.

#### 6.2 Output in Unit 7

A file named "plt007.ai" is created as unit 7. This is an EPSF ASCII text file which is equivalent to Illustrator version 3.0.

Note that a dot is always drawn at the left bottom corner of the frame in the first figure. Subsequent frame is drawn right to the previous frame.

### 7 EXAMPLE

The example shown in this chapter is rather artificial in order to show the order of the input data and types of the figure that POST-2D can draw. In this example, FEM data is also read from unit 5. In addition, the frame is drawn in one direction, but cut and rearranged in the figure.

# 7.1 Input data

The following is the input data. Explanation is written in the right hand side. A new frame is prepared by the underlined option. Since there is no data check in columns 6 to 80 in reading the option number, the user can type comments in this region as shown in this example in order to make the data check easy.

5	05	05	05	05-	05050						
1	Fundame	ntal quantit	у		•Option 1						
FGAB3	50.3	0.2	0.2	0.	0. 0.3 0.3 30.						
10.0	8.0				specify small frame size						
8	Change	default valu	е		•Option 8						
22.	0	2.0 2.	0		work because of small frame size.						
8	Change	default valu	•Option 8								
11.	0	1.0			work because of small frame size.						
2	Title				•Option 2						
EXAMPLE											
10	FEM mod	el			•Option 10						
1.0											
8	4										
1	0.0	0.0			Nodes						
2	10.0	0.0									
3	20.0	0.0									
4	0.0	10.0									
5	10.0	10.0									
6	20.0	10.0									
100	0.0	20.0									
101	10.0	20.0									
1	1 2	5 4			Elements						
2	2 3	6 5									
100	4 5	101 100									
110	5 6	101 101									
4	Unit fo	r FEM model			•Option 4						
1m											
4	Unit fo	r vector			•Option 4						
2cm											
11	Draw mo	del figure		●Option 11							
0	0 0	0.0 4.0									
52	Draw scales •Option 52										
4	1 0	1									
14	0 2	-10.0	-1.5	10.0	-1.5 10.0						
14	2 2	-110.0	-1.5	20.0	-1.5 10.0						

14 0 1 -1-1.5 0.0 -1.5 10.0 10.0 14 2 1 -1-1.5 10.0 -1.5 20.0 10.0 52Draw angle •Option 52 1 3 12 0 9 620.0 -45.0 0.0 10.0 1.0 45\$1n Use default value for origin •Option 1 1 9999. 9999. Draw model figure 11 •Option 11 1 0 0 -1.0Draw node number Draw model figure •Option 11 11 Draw element number 0 1 11 Draw model figure •Option 11 2 1 Draw both node and element numbers 50 •Option 50 Comments -1 16.0 16.0 ANALYZED MODEL 51 Draw boundary condition symbols •Option 51 00.0 9 2 0 1.5 0.0 45.0 0.15 1 3 •Option 51 Draw boundary condition symbols 51 10 2 0 00.0 1.5 0.0 45.0 0.15 2 20 Read vector •Option 20: input displacement 1.0 1.0 1.0 Displacement data 1.5 1.25 2.0 1.25 1.1 1.1 1.4 1.2 1.6 1.3 -0.5 -0.1 -2.51.5 22 •Option 22: draw deformed shape Draw vector 20.1 Draw data value at 3 nodes. 1 1 1 2 3 (x-comp. at nodes 3 and 100, and y-comp at node 6) 3 -6 100 22 draw vector •Option 22: Draw deformed shape 20.1 1 1 1 0 0 20 input vector •Option 20: Read new displacement 1.0 -0.51.0 Displacement data 0.5 -0.10.25 -1.8-0.05-0.81.5 -1.02.0 2.5 1.0 -0.61.6 -0.5 23 Overwrite displacement •Option 23: Overwrite 8 1 New vector is drawn on the previous figure. 0 0

50 Comment 22.0 7.0 7.5 20.1 ANALYSIS 1 8 ANALYSIS 2 22 Draw vector 2.0 1 3 1 4 3 2 3 -6 100 22 Draw vector 2 3 1 0 0 30 Read tensor 11.0 1.0 2.0 1.0 -2.0-1.01.0 1.0 -1.02.0 1.0 Unit for tensor 4 3kg/cm\$22 Unit for scalar 4 4kg/cm\$22 32 Draw tensor 1 1.5 1 32 Draw tensor 1 2 32 Draw tensor 2 3 60 Blow up 10.0 20.0 10.0 20.0 61 Mask 1 10.0 20.0 10.0 20.0 32 Draw tensor 4 3 5 4 6 101 100 4 60 Cancel blow up 0 61 Cancel mask 0 3 Axis name for scalar 4MAX. SHEAR Convert into scalar 34 1 1 1 -3 2 5 1 -1 1 0.5 2.0 0.25 40 Read scalar 0 1.5 2.0 2.8 3.5

•Option 50: Legend •Option 22: Draw displacement by arrow -1.0•Option 22: Draw displacement by arrow. Only exterior shape is drawn •Option 30: Read tensor compression is positive. Tensor •Option 4: Unit for tensor  $kg/cm^2$ •Option 4: Unit for scalar  $kg/cm^2$  for contour of max. shear stress. •Option 32: Draw tensor Draw each component •Option <u>32</u>: Draw tensor Principal value •Option 32: Draw tensor Maximum shear stress. •Option 60: blow up Draw only upper two elements •Option 61: mask Mask stress of only element 100 •Option 32: Draw blowed up and masked figure •Option 60: Cancel blow up •Option 61: Cancel mask •Option 3: Axis name for scalar •Option 34: Convert max. shear into scalar Contour •Option 40: Input scalar Scalar defined in element

3 Axis name for scalar •Option 3: Axis name for scalar 4unit weight Unit for scalar •Option 4: Unit for scalar 4 4kg 42 Draw contour •Option 42: Draw scalar. 2 Smooth curved line. 1 5 1 3.0 1 10.15 1.5 2.0 3.0 3.50 4.0 42 Draw contour •Option 42: Draw contour 2 Piecewise linear line with numbers. 2 5 1 -1 1 5 3.0 10.15 1 1 1.5 2.0 3.0 3.50 4.0 Draw scalar •Option 42: Draw scalar 42 1 Draw only data value. 0 -1 2 0 0 •Option 0: End of the job.

# 7.2 Output

The following figure (EPSF and Illustrator 3.0 file) will be created by executing the example data. The first figure is drawn from left bottom, then left top. As specified in option 1, paper width is 30cm, the third figure cannnot be drawn above the second figure. Therefore it is drawn in the right and bottom of the first two figures. The same procedures is repeated.

				ELEN -	ELEN der t	(r. 55 (r. 57 ) (r. 10) (r. 10
Source and the second s	2 V		* + +	* * * * * *		

In the following pages, each figure is shown more enlarged form. Note that they are not direct pring from Illustrator but figures imported in CorelDraw as EPSF file. Therefore detail appearance may be different to the one printed by Illustrator.













